

Limited Warranty

What is Not Covered

1. Issues not resulting from material or workmanship defects.
2. Damage from normal wear and tear, improper installation, maintenance, misuse, abuse, negligence, accidents, or alterations.
3. Accessories, connected materials, and products not manufactured by us.
4. Damage from failure to follow instructions and guidelines for the product's intended use.
5. The warranty is void if the product is returned with removed, damaged, or tampered labels, or if there are any alterations.

How to File a Claim

1. To benefit from the limited warranty, claims must comply with the warranty terms and follow the proper return procedure.

Implied Warranties and Limitation of Damages

Except where prohibited by law, all implied warranties are limited to the duration of this warranty. We are not liable for incidental, indirect, special, or consequential damages, even if advised of the possibility.

 
Governing Law

This warranty is governed by the laws of California, USA, without regard to conflict of laws principles.

How State Law Applies

This warranty provides specific legal rights, and you may have additional rights that vary by state.


User Manual

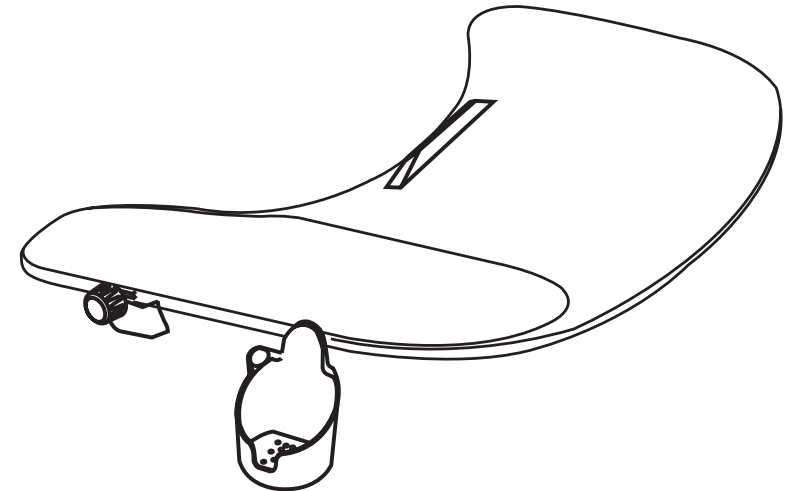

Chair Writing Board


Assembly Instructions

 BEFORE ASSEMBLING THIS PRODUCT. PLEASE READ THIS INSTRUCTIONS CAREFULLY

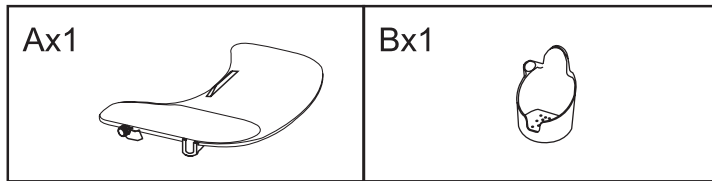


1

 Loosen the knob on the main unit (A) and attach it to the chair's armrest where the rotation angle exceeds 60 degrees.

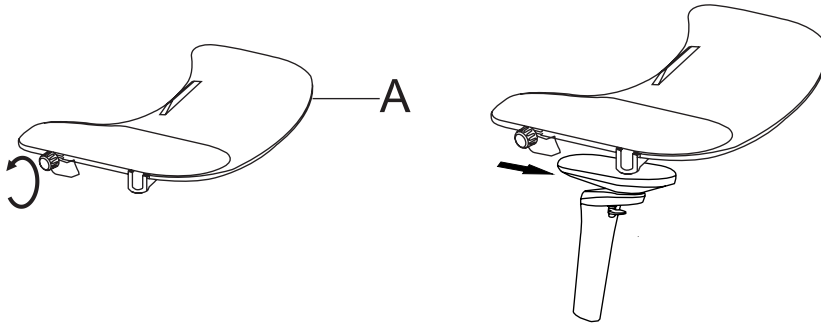

2

 
After tightening the knob on the main unit (A), attach the cup holder by aligning it with the hole.

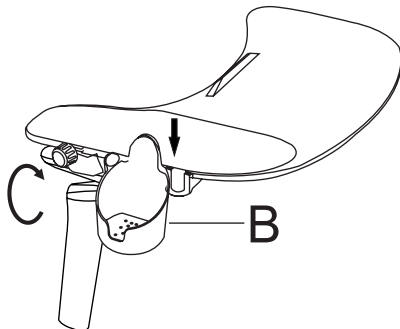

3

Assembly Complete

 Ensure the installation is securely fastened before use.

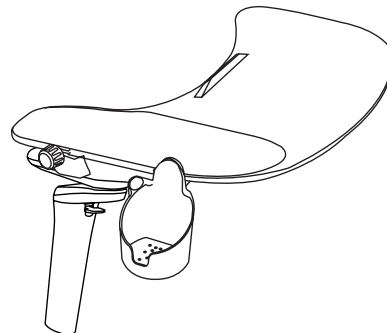

Limited Warranty

Safety Instructions

1. This product contains small parts that may be dangerous if swallowed. Keep out of reach of children.
2. Read the manual before installation. Contact us if you have any questions.
3. Check the product connections every two months. Tighten any loose screws securely.
4. Do not exceed the maximum weight capacity. Doing so may cause product damage or personal injury.
5. Turn the knob counterclockwise until tight. Press down on the board to confirm it is securely locked to the armrest.
6. Place the left side of the desk board on the left armrest. Adjust both armrests to the same height to keep the board level.
7. When standing up or reclining, hold items on the board to prevent them from falling.
8. After use, before leaving your seat, make sure the board is locked and returned to its original position to avoid imbalance or accidental detachment over time.

Care Instructions for Long-Term Non-Use

1. Avoid placing the product in direct sunlight or in areas with high humidity or extreme dryness. These conditions can cause the product to warp or crack.
2. Regularly inspect the product for any signs of wear or damage. Address any issues promptly to maintain the product's longevity.

Remedies

1. We will replace at no charge any defective parts, or at its option, any product or part that is defective due to improper workmanship and/or materials under normal conditions of use.
2. If a replacement is not feasible or cannot be completed promptly, We may refund the purchase price upon return of the product
3. For defective products, We will provide a replacement shipped at no cost within the continental United States via FedEx Ground. Expedited shipping is available at the customer's expense. International shipping costs are the customer's responsibility.