 


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

 
Address: 6475 Las Positas Rd. Livermore, CA 94551

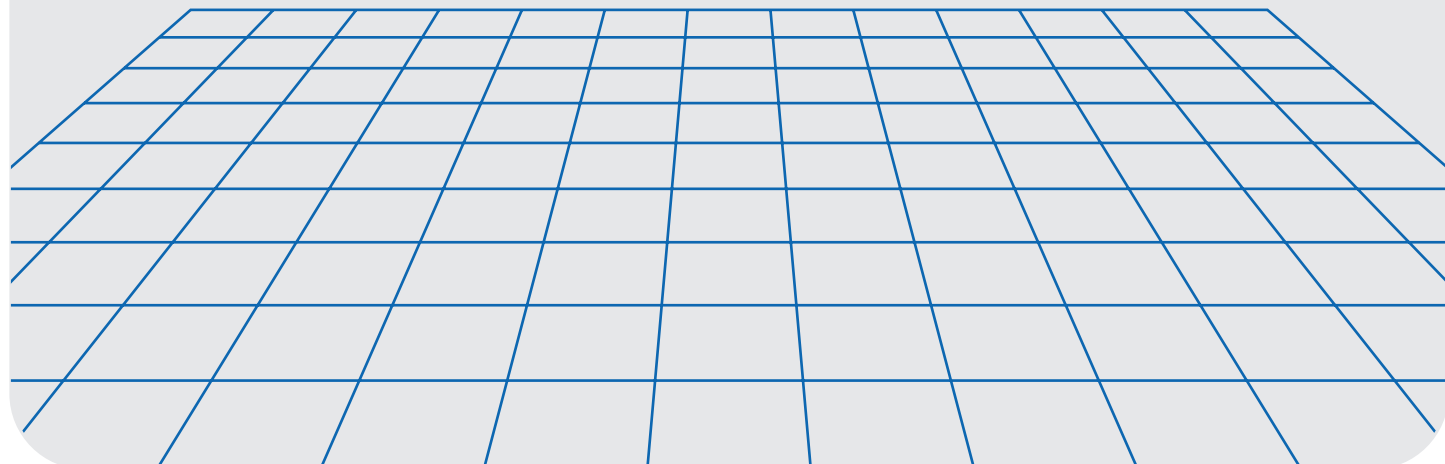

FlexiSpot

User Manual

Item No. CF3

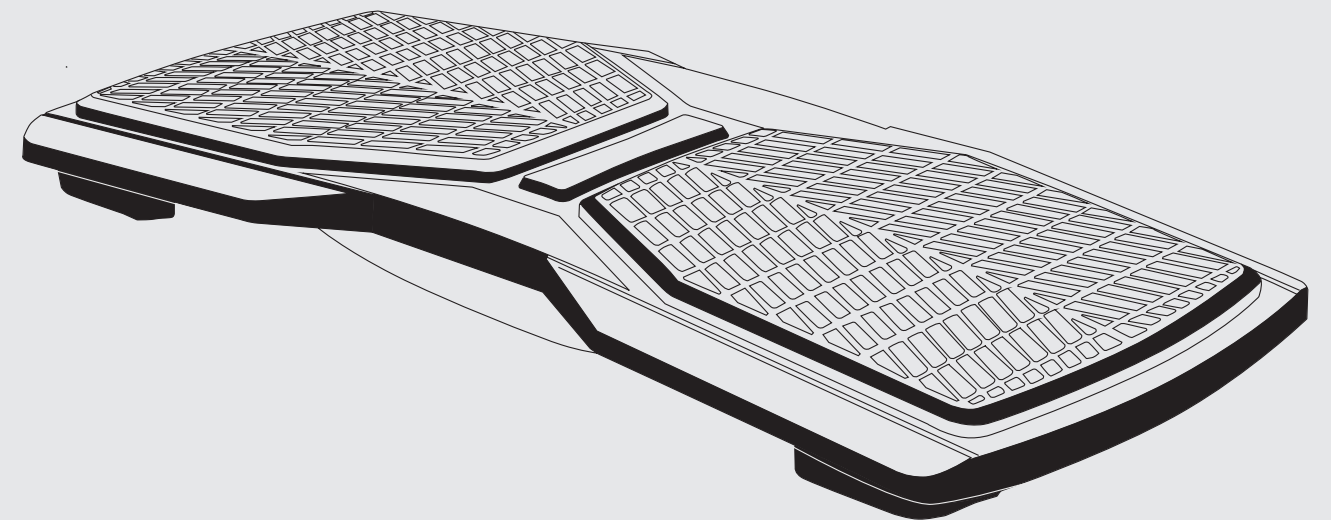


INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Adjustment Instructions


1

 Press your thumb on the top of the support leg while using your index finger under the leg to unhook and unfold it.

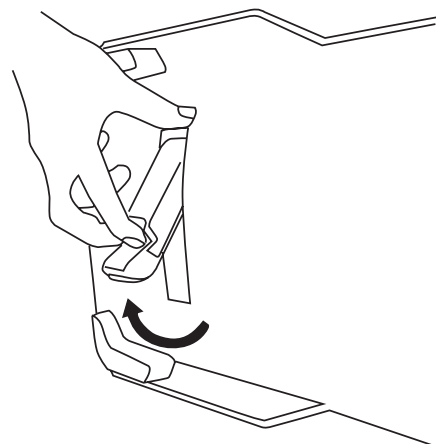


2

 Fully open both support legs and place the footrest on a flat surface before use.

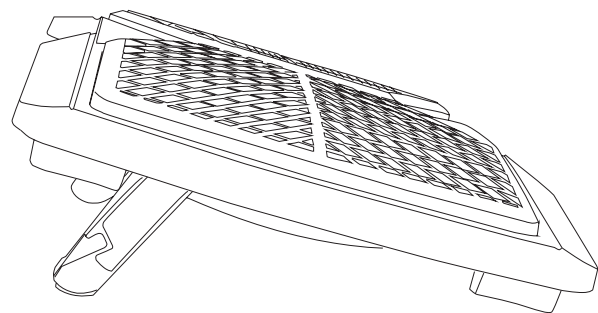

3

 Fold both support legs back in to use the footrest as a balance board.

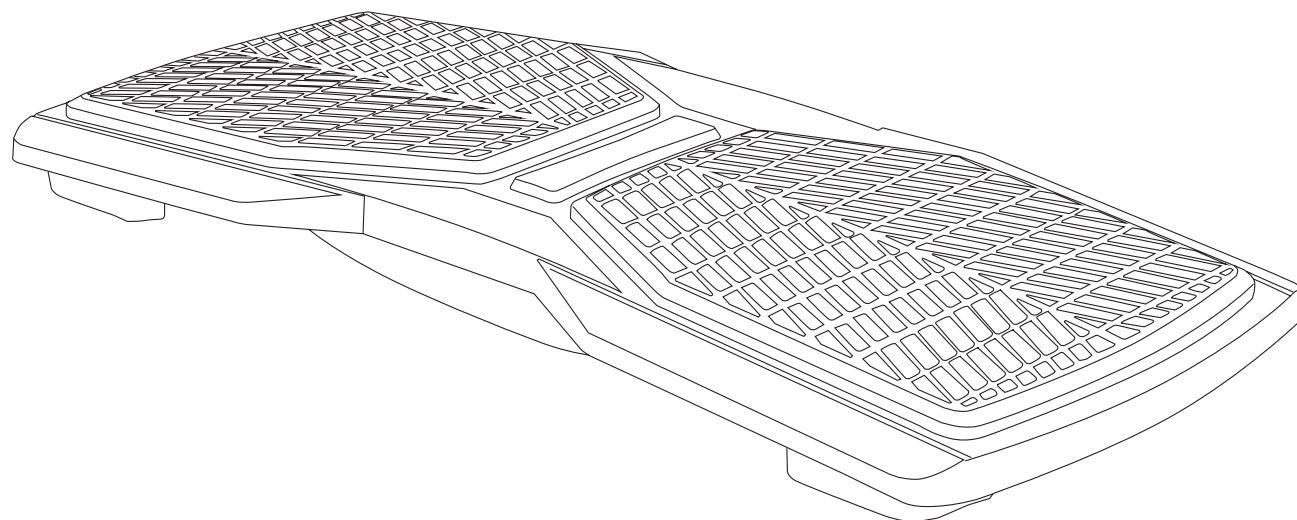

FlexiSpot Limited Warranty

Safety Instructions

1. Do not use this product unless all bolts and parts are firmly tightened. At least within 3 months, you have to check all the parts for safety use.
2. If any parts are missing, damaged or worn, stop using this product. Repair the product with manufacturer's supplied parts.
3. This product is designed for sitting one person at a time.
4. Children under the age of 10, please use under adult supervision.

Care Instructions for Long-Term Non-Use

1. Avoid placing the product in direct sunlight or in areas with high humidity or extreme dryness. These conditions can cause the product to warp or crack.
2. Regularly inspect the product for any signs of wear or damage. Address any issues promptly to maintain the product's longevity.

Remedies

1. FlexiSpot will replace at no charge any defective parts, or at its option, any product or part that is defective due to improper workmanship and/or materials under normal conditions of use.
2. If a replacement is not feasible or cannot be completed promptly, FlexiSpot may refund the purchase price upon return of the product.
3. For defective products, FlexiSpot will provide a replacement shipped at no cost within the continental United States via FedEx Ground. Expedited shipping is available at the customer's expense. International shipping costs are the customer's responsibility.

What is Not Covered

1. Issues not resulting from material or workmanship defects.
2. Damage from normal wear and tear, improper installation, maintenance, misuse, abuse, negligence, accidents, or alterations.
3. Accessories, connected materials, and products not manufactured by FlexiSpot.
4. Damage from failure to follow instructions and guidelines for the product's intended use.
5. The warranty is void if the product is returned with removed, damaged, or tampered labels, or if there are any alterations.

How to File a Claim

1. To benefit from the limited warranty, claims must comply with the warranty terms and follow the proper return procedure.
2. Contact customer service via email at contact@FlexiSpot.com or toll-free at 1-855-585-5618, providing proof of purchase.

Implied Warranties and Limitation of Damages

Except where prohibited by law, all implied warranties are limited to the duration of this warranty. FlexiSpot is not liable for incidental, indirect, special, or consequential damages, even if advised of the possibility.

Governing Law

This warranty is governed by the laws of California, USA, without regard to conflict of laws principles.

How State Law Applies

This warranty provides specific legal rights, and you may have additional rights that vary by state.