


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618


Address: 6475 Las Positas Rd. Livermore, CA 94551

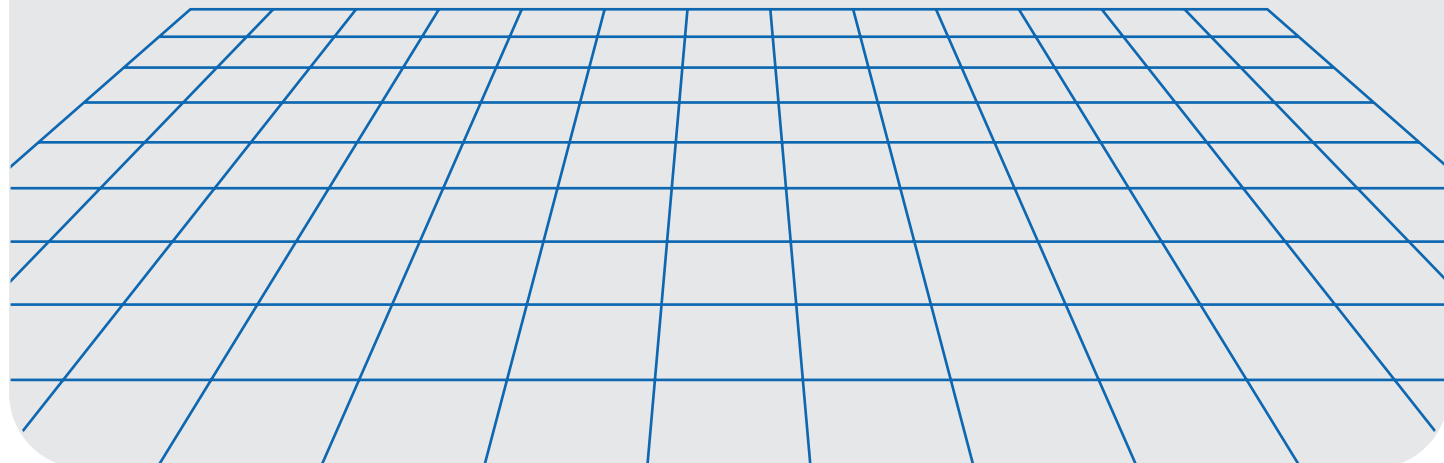

FlexiSpot

User Manual

Item No. MA1BS-DP/MA1WS-DP

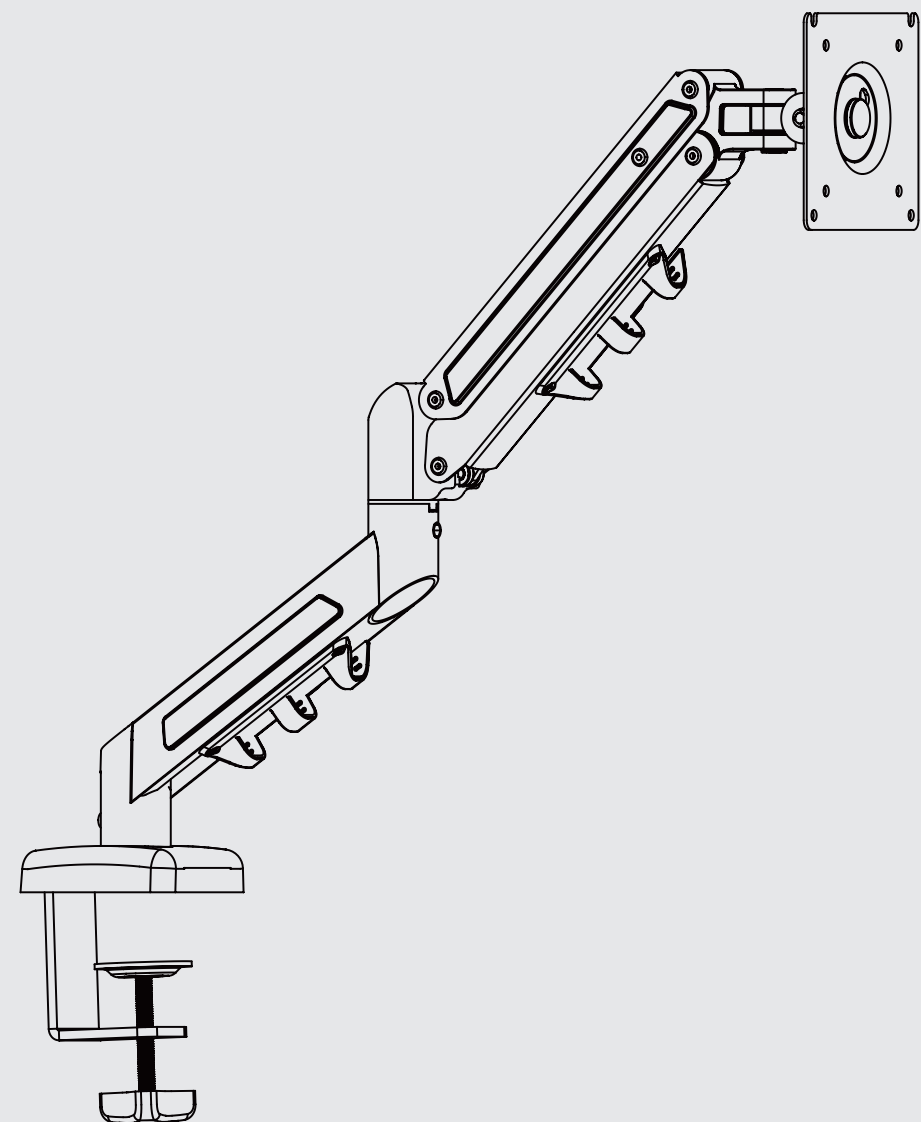


INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Specifications

Suitable display mounting holes	75×75mm or 100×100mm
Adaptive display size	17"-32"
Safe weight bearing range	4.4-19.8lbs
Monitor stand head tilt angle	-85° -15°

Accessory Package

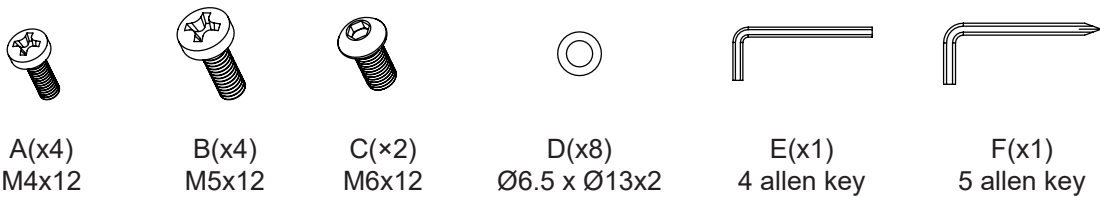


Warning: Choking hazard! This product contains small parts. Keep them out of reach of children.

Parts Included

G(x1) 		H(x1) 	I(x1) 	T(x1)
J(x1) 	K(x1) 	L(x1) 	M(x1) 	N(x1)
O(x1) 	P(x1) 	Q(x1) 	R(x1) 	S(x2)

ATTENTION

Do not adjust tension without monitoe attached.
Ensure monitor has been securely attached to the mount.

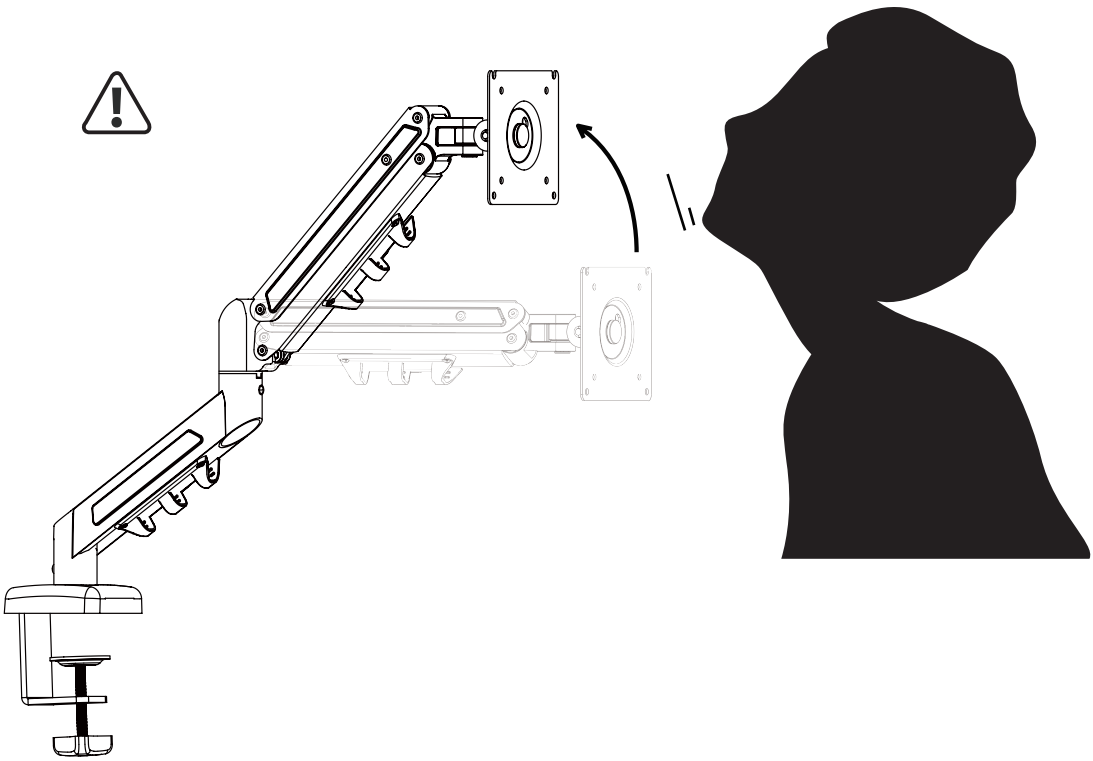


WARNING

- 1. Gas spring arm is under pressure and should be handled with care.
- 2. Make sure you have read the manual thoroughly before installation and fully understand how to install it.If you do not understand any of the installation steps, please contact the seller. Failure to follow the instructions may result in damage to the mount and/or personal injury.

1 Preparation

1. Check the monitor for mounting holes (75×75mm or 100×100mm). If there are no mounting holes, the bracket cannot be installed. (**Note:** Some monitor mounting holes are used to attach the original mounting base, which is removable.)
2. Remove the original mounting base from the monitor (the method varies depending on the monitor). During the entire removal process, avoid scratching the monitor panel with hard objects.

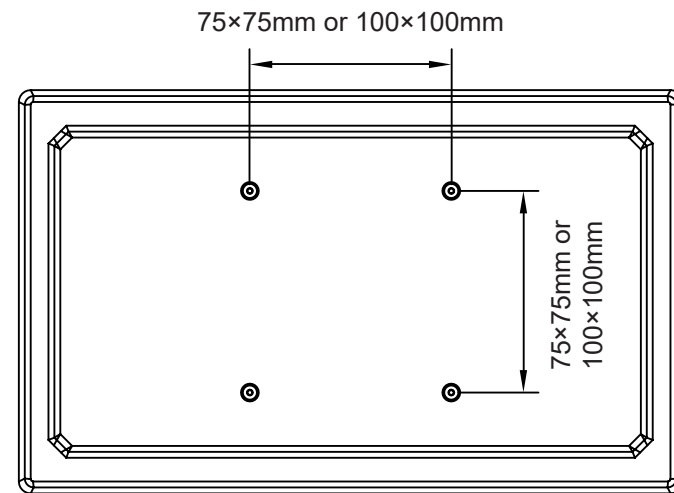

2 Base Installation

Clamp Installation

1. Align the holes of I and J, and tighten with screw C (M6).	2. Remove the release paper from O and attach O to N.
3. Insert M into the square hole of L, then snap K and L together and secure.	4. Place the assembled I on the table, and insert the assembled M from the bottom. Then place the N on the M, and finally tighten M to secure. Applicable table top thickness: 0.79" - 2.36" Locking


Punch Installation

1. Align the nuts of P and I, and tighten P to secure.	2. Remove the release paper from S and attach S to R.
3. Insert Q into the bottom hole of K, then snap L and K together and secure.	4. Insert the assembled I into the hole of the tabletop, then insert the R and K in sequence from the bottom. Then tighten the assembled K to secure. Applicable tabletop thickness: 0.79"-3.15" Applicable mounting hole size: Ø0.33"-2.76" Lock

3 Arm Installation

1. Insert H	2. Tighten the screws to secure. Do not overtighten the screws, otherwise they may fall out!	3. Insert G	4. Tighten the screws to secure. Do not overtighten the screws, otherwise they may fall out!
--------------------	--	--------------------	--

4 Monitor Connection

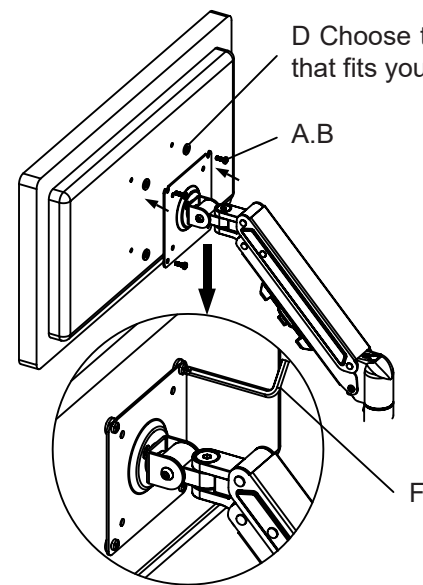


D Choose the screw (A or B) and spacer (D) configuration that fits your monitor type.




Note: After hanging the monitor on the mount, release the monitor slowly so it doesn't sink down too quickly.

5 Adjustment

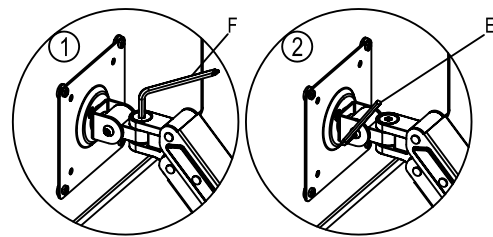


If the swivel action is too tight or too loose, use a 5x5 wrench (F) to adjust the screw at position ①.
If the monitor sags, use a 4x4 wrench (E) to adjust the screw at position ②.

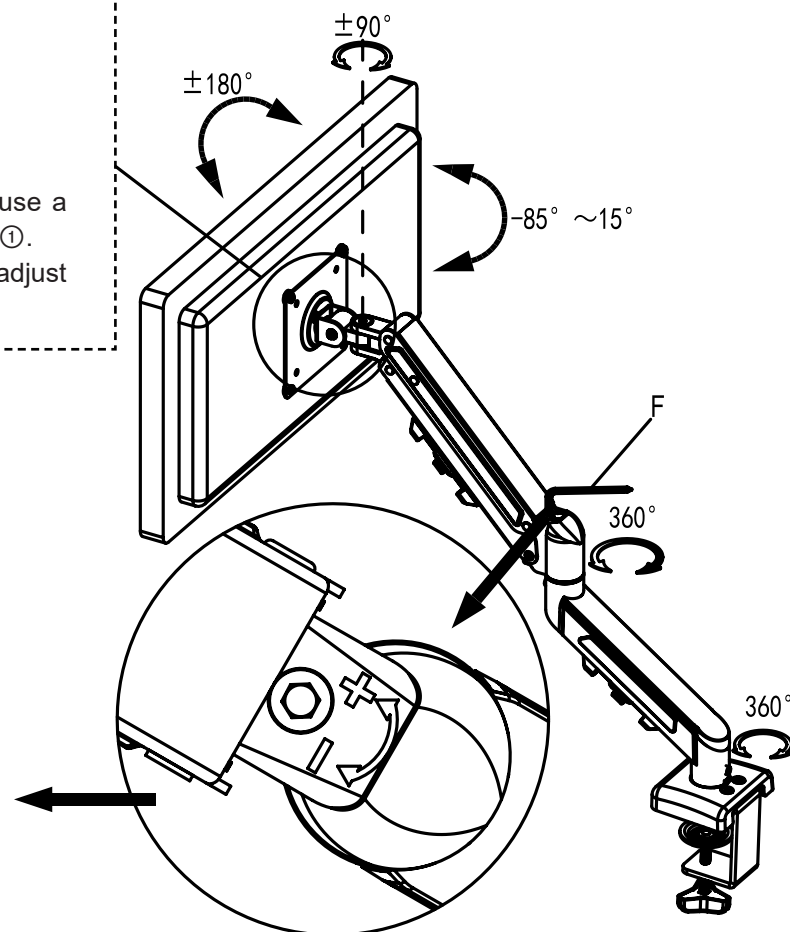

If the upper arm falls and you cannot raise it, turn counterclockwise ("+" direction) until the monitor can stay at the desired height by itself.


If the upper arm rises and you cannot lower it, turn clockwise ("- direction) until the monitor can stay at the desired height by itself.

6 Cable Management

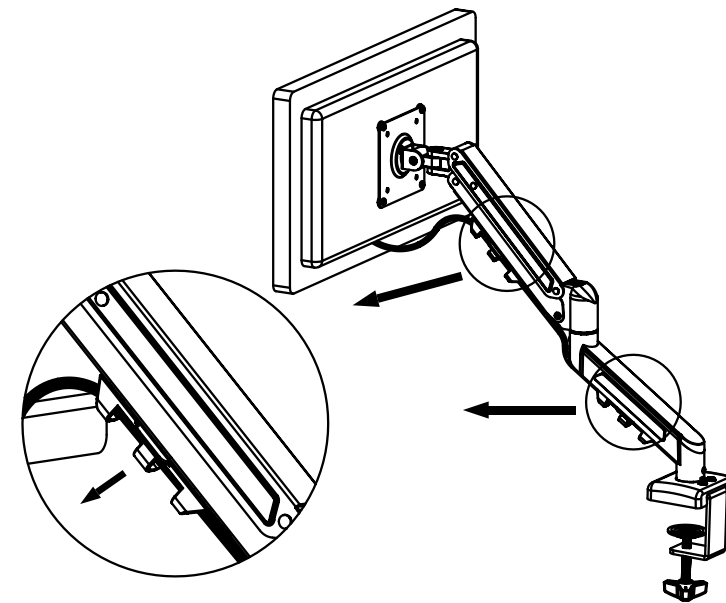

Release the clip of the cable channel and insert the cable into the slot.

7 Tool Storage

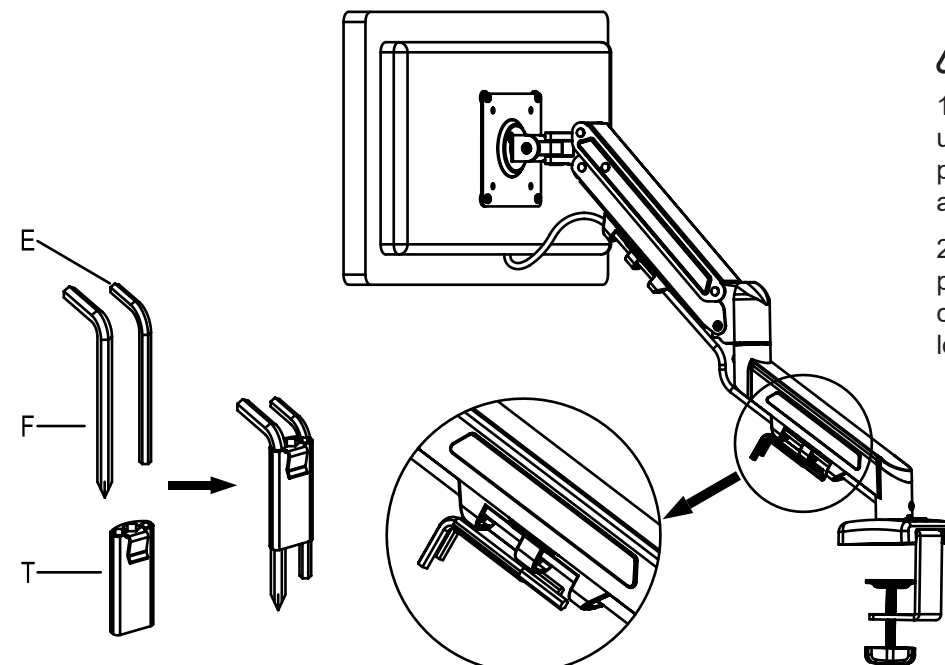

Insert E and F into the holes of T.

Insert it into the wire clip.



1. It is recommended that the upper arm (spring arm) of this product be adjusted at least once a month.

2. Please check the connecting parts in time every two months to confirm whether the screws are loose.