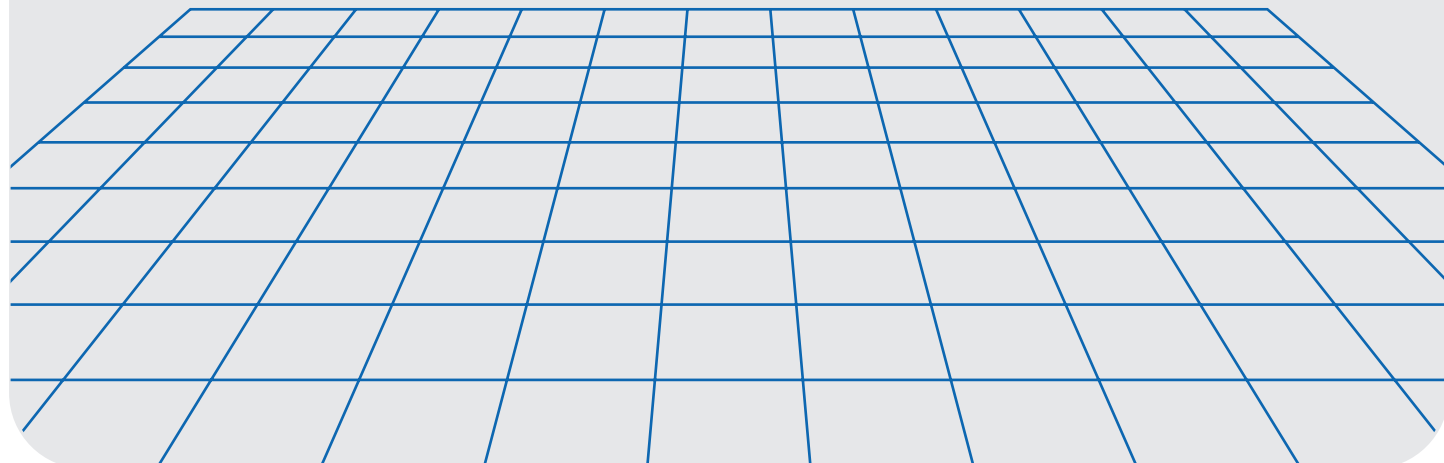


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618

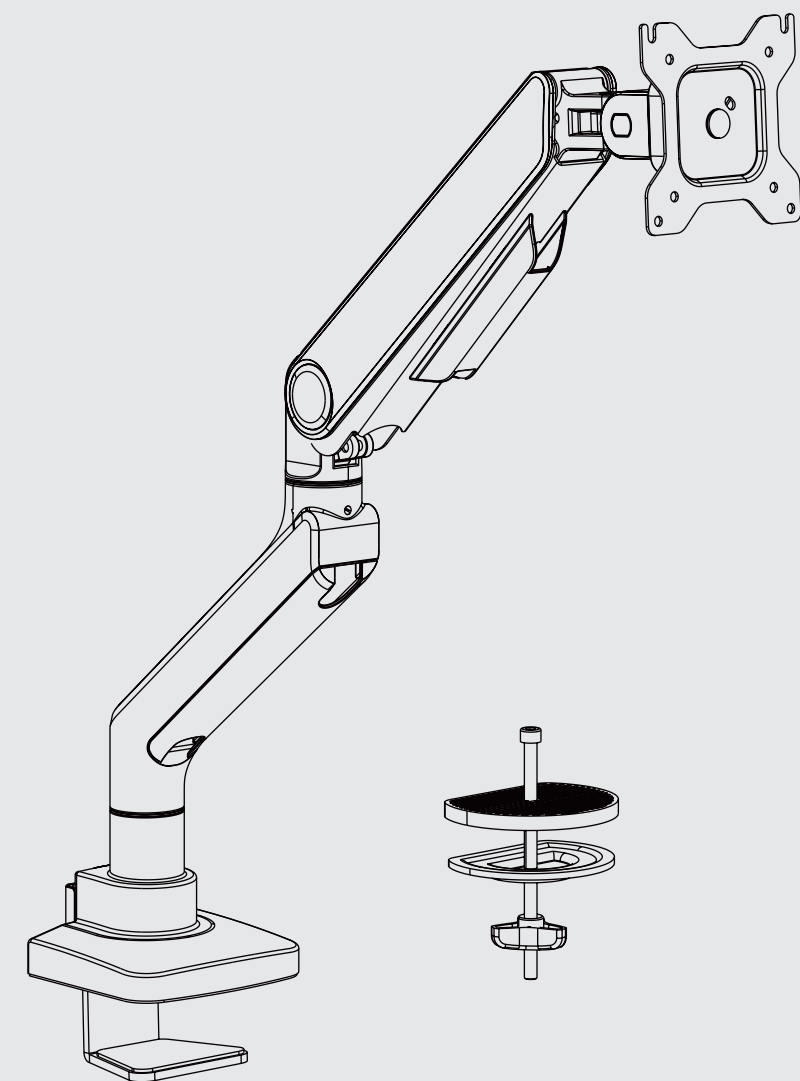
Address: 6475 Las Positas Rd. Livermore, CA 94551



FlexiSpot

User Manual

Item No. MA9-S-DP-US



INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE

Specifications

Adaptive display size	17"~49"
Safe weight bearing range	4.41-44.09 lbs
Monitor stand head tilt angle	-90°~+15°
Suitable display mounting holes	75×75mm or 100×100mm

Accessory Package



A(x4)
M4x12



B(x4)
M5x12



C(x8)
Ø6.5 x Ø13x2



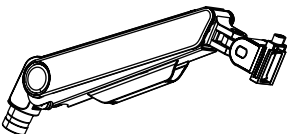
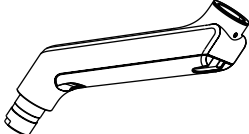
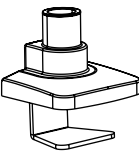
 
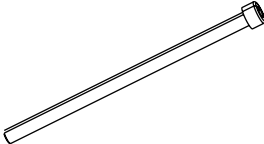
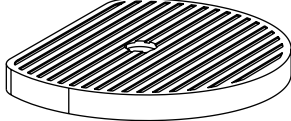
 
D(x1)
6×6



E(x1)
4×4


Warning: Choking hazard! This product contains small parts. Keep them out of reach of children.

Parts Included

F(x1) 	G(x1) 	H(x1) 
I(x1) 	J(x1) 	K(x1) 
L(x1) 	M(x1) 	N(x1) 
O(x1) 	P(x1) 	

ATTENTION

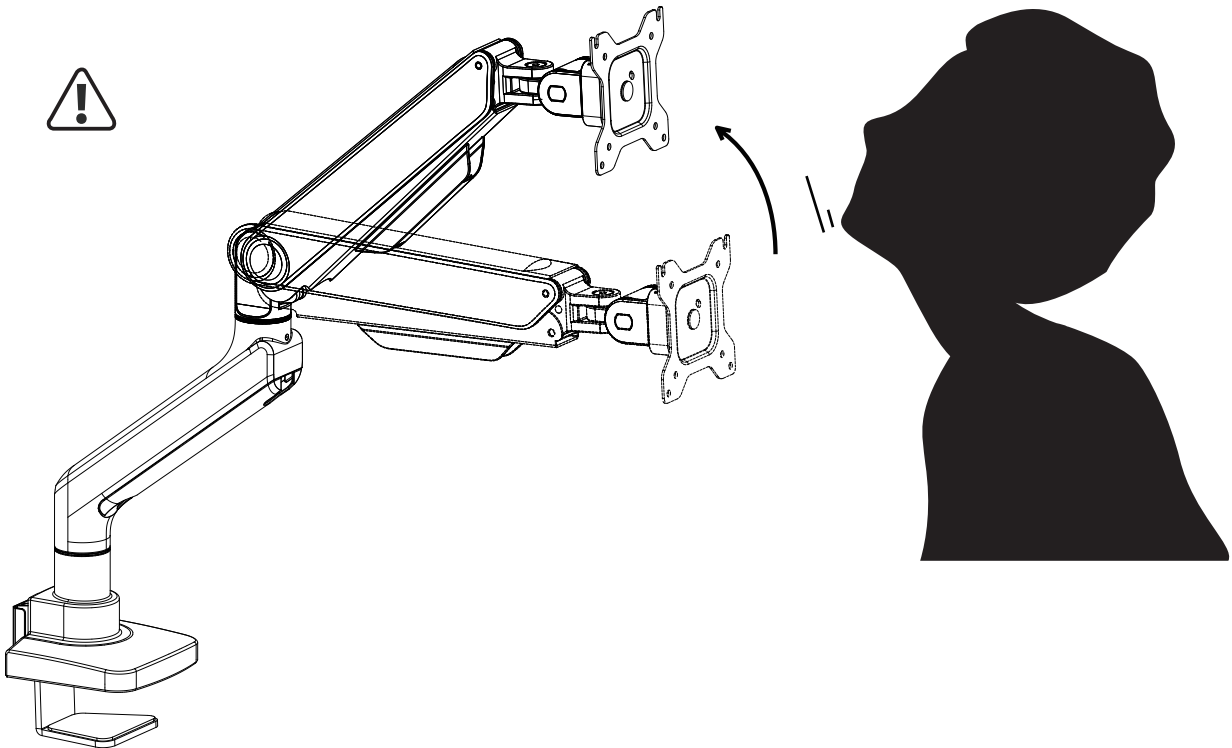Do not adjust tension without monitoe attached.
Ensure monitor has been securely attached to the mount.




WARNING

- 1. Gas spring arm is under pressure and should be handled with care.
- 2. Make sure you have read the manual thoroughly before installation and fully understand how to install it.If you do not understand any of the installation steps, please contact the seller. Failure to follow the instructions may result in damage to the mount and/or personal injury.

1 Preparation

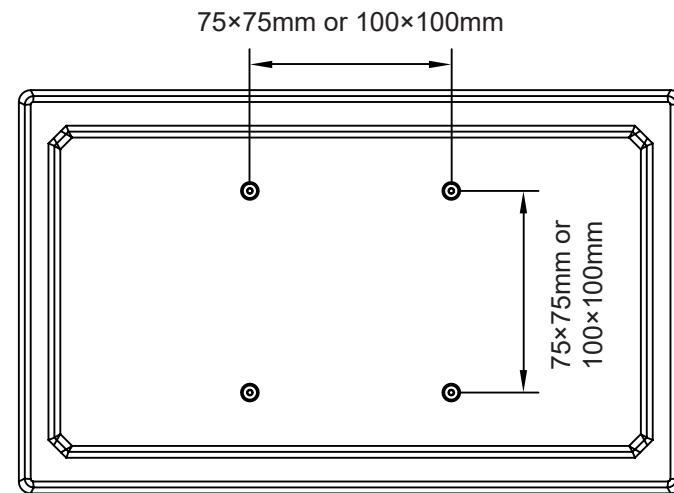1. Check the monitor for mounting holes (75×75mm or 100×100mm). If there are no mounting holes, the bracket cannot be installed. **(Note: Some monitor mounting holes are used to attach the original mounting base, which is removable.)**
2. Remove the original mounting base from the monitor (the method varies depending on the monitor). During the entire removal process, avoid scratching the monitor panel with hard objects.



2 Base Installation

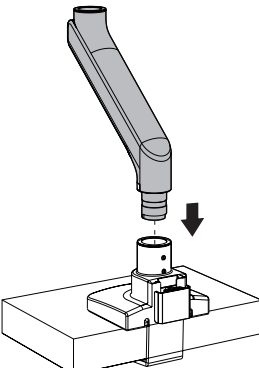
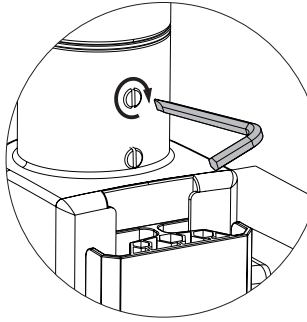
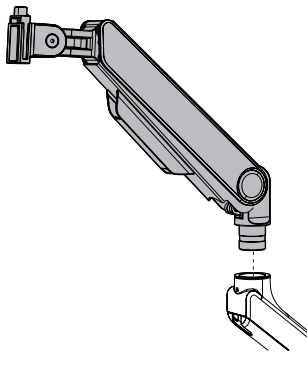
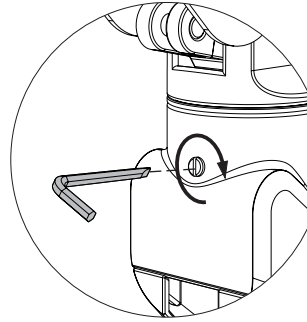
Clamp Installation

1. Use tool D to counterclockwise adjust the screw on the upper part of the I.
2. Install the K.
3. Remove the release paper from J and stick J onto the C-clamp.
4. Hold the base onto the table and use tool D to adjust the screws on the upper part of I clockwise to fix it. Applicable table top thickness: 0.78"-1.77"
5. Insert the L.

Punch Installation

1. Use tool D to counterclockwise adjust the screw on the upper part of I to remove the C-clamp.
2. Install the K.
3. Insert the long screw M.
4. Remove the release paper from N and stick N onto O.
5. Insert the base into the pre-drilled hole on the desktop. Applicable mounting hole size: Ø0.33"-2.76" Applicable tabletop thickness: 0.78"-2.17"
6. Insert the O and P in sequence from the bottom. Then use tool D to adjust the screw on the upper part of the I clockwise to fix it.
7. Insert the L.


3 Arm Installation

 1. Insert H	 Do not overtighten the screw, otherwise it may fall out!  2. Tighten the screw to secure.	 3. Insert G	 Do not overtighten the screw, otherwise it may fall out!  4. Tighten the screw to secure.
--	--	---	--




4 Monitor Connection



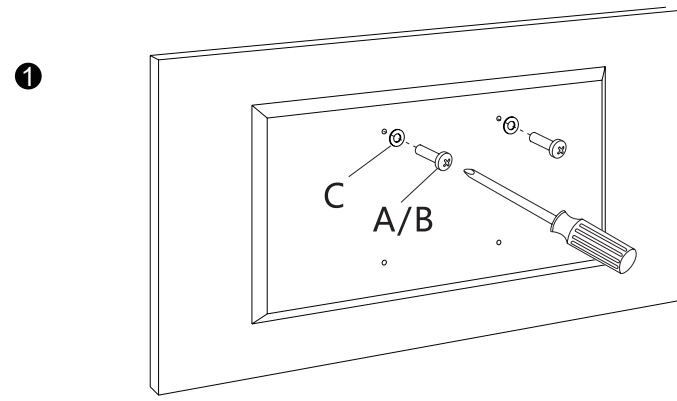
Note: After hanging the monitor on the mount, release the monitor slowly so it doesn't sink down too quickly.



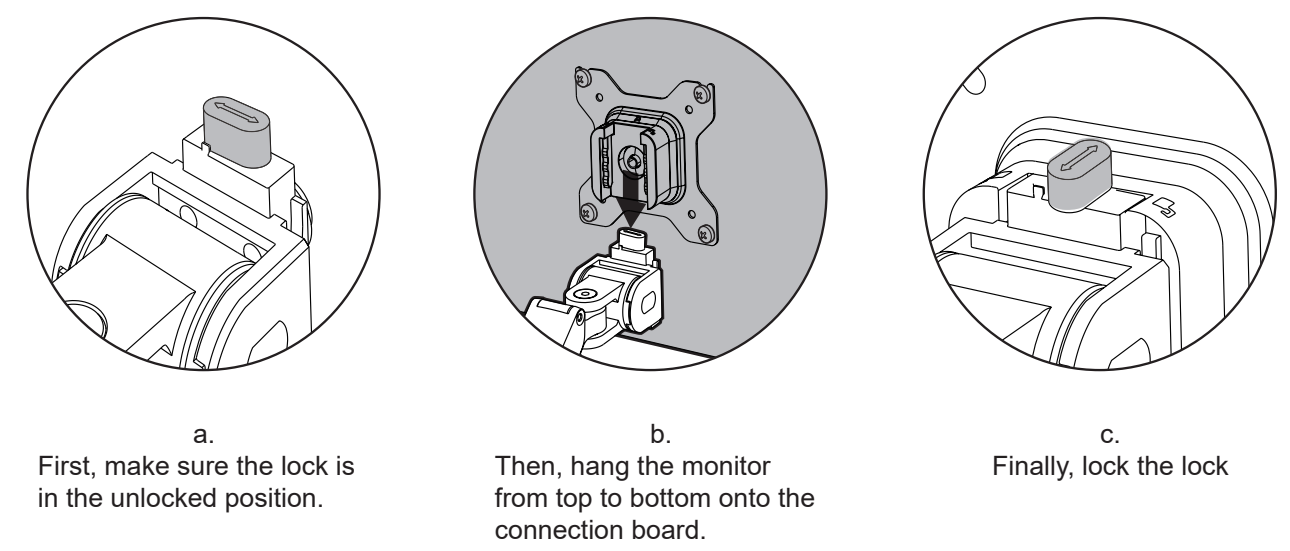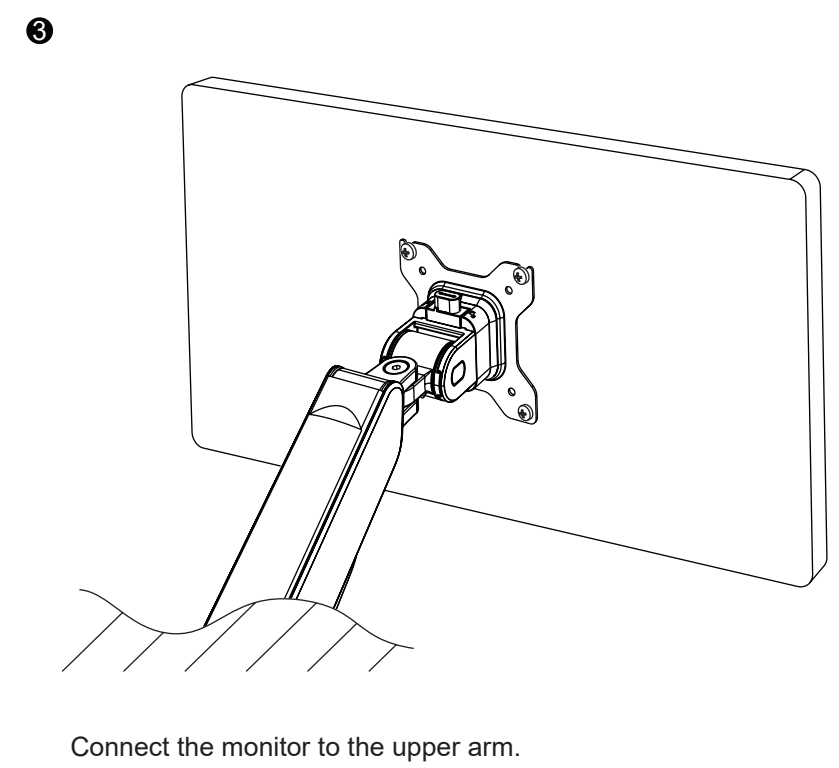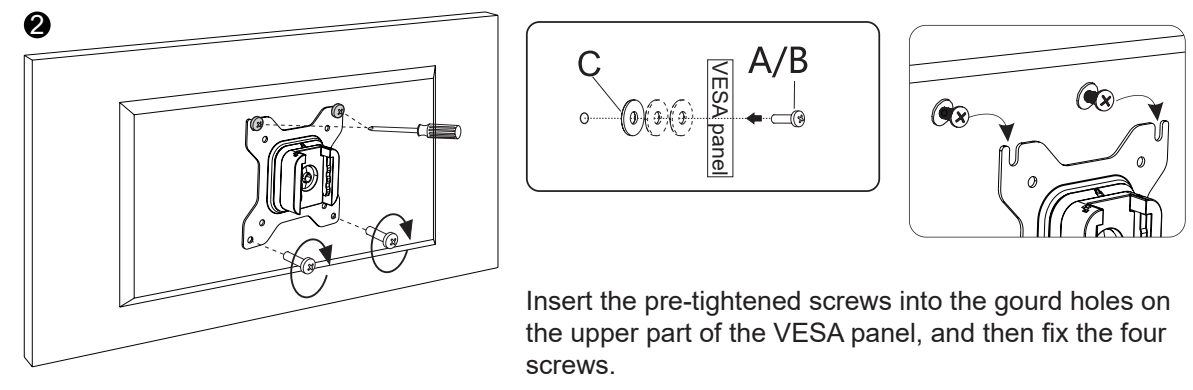
Choose the screw (A or B) and spacer (C) configuration that fits your monitor type and pre-tightened the screw.



5 Adjustment

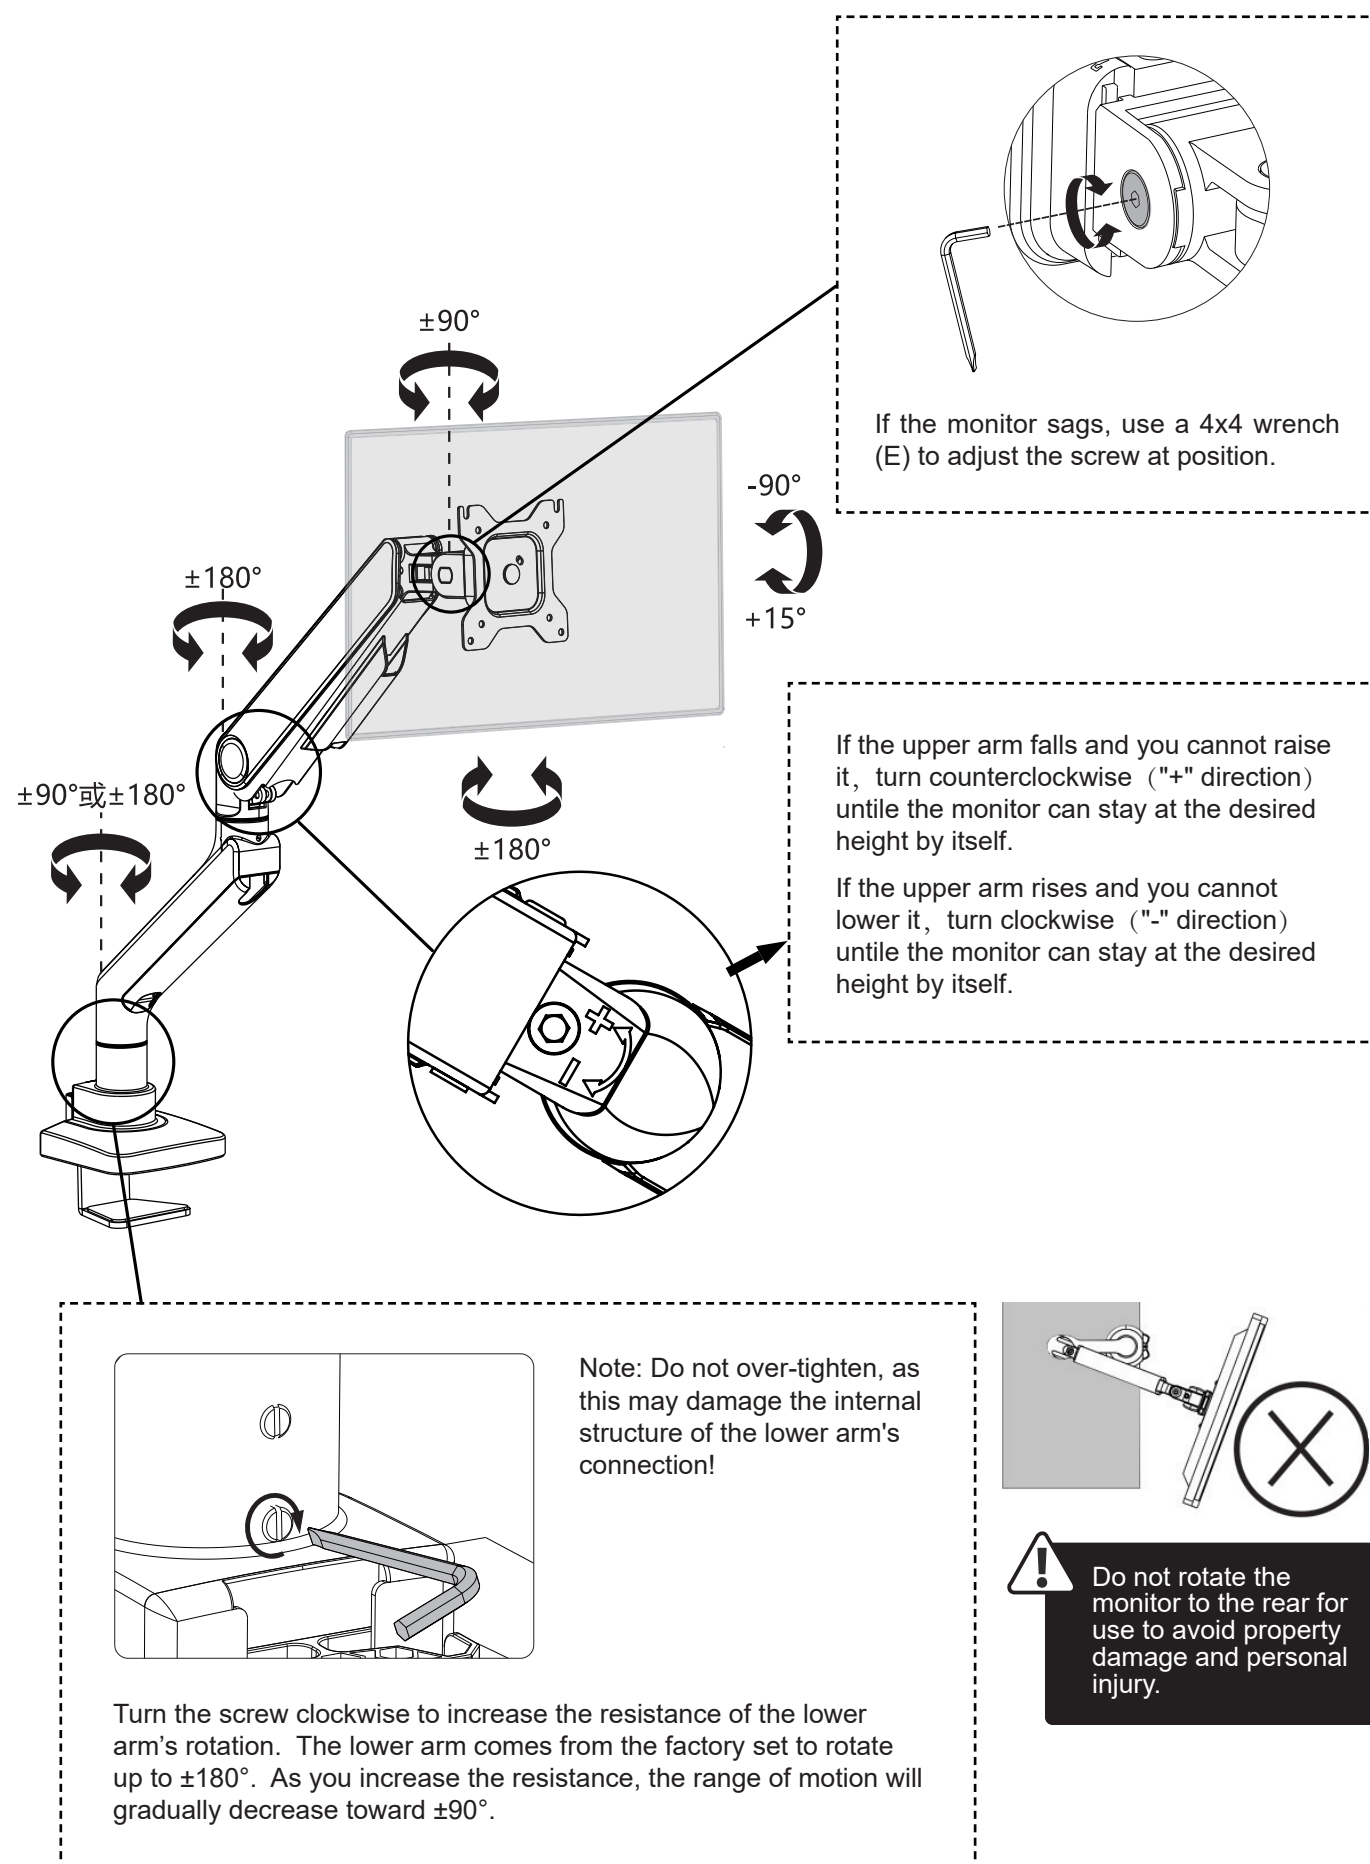

6 Cable Management

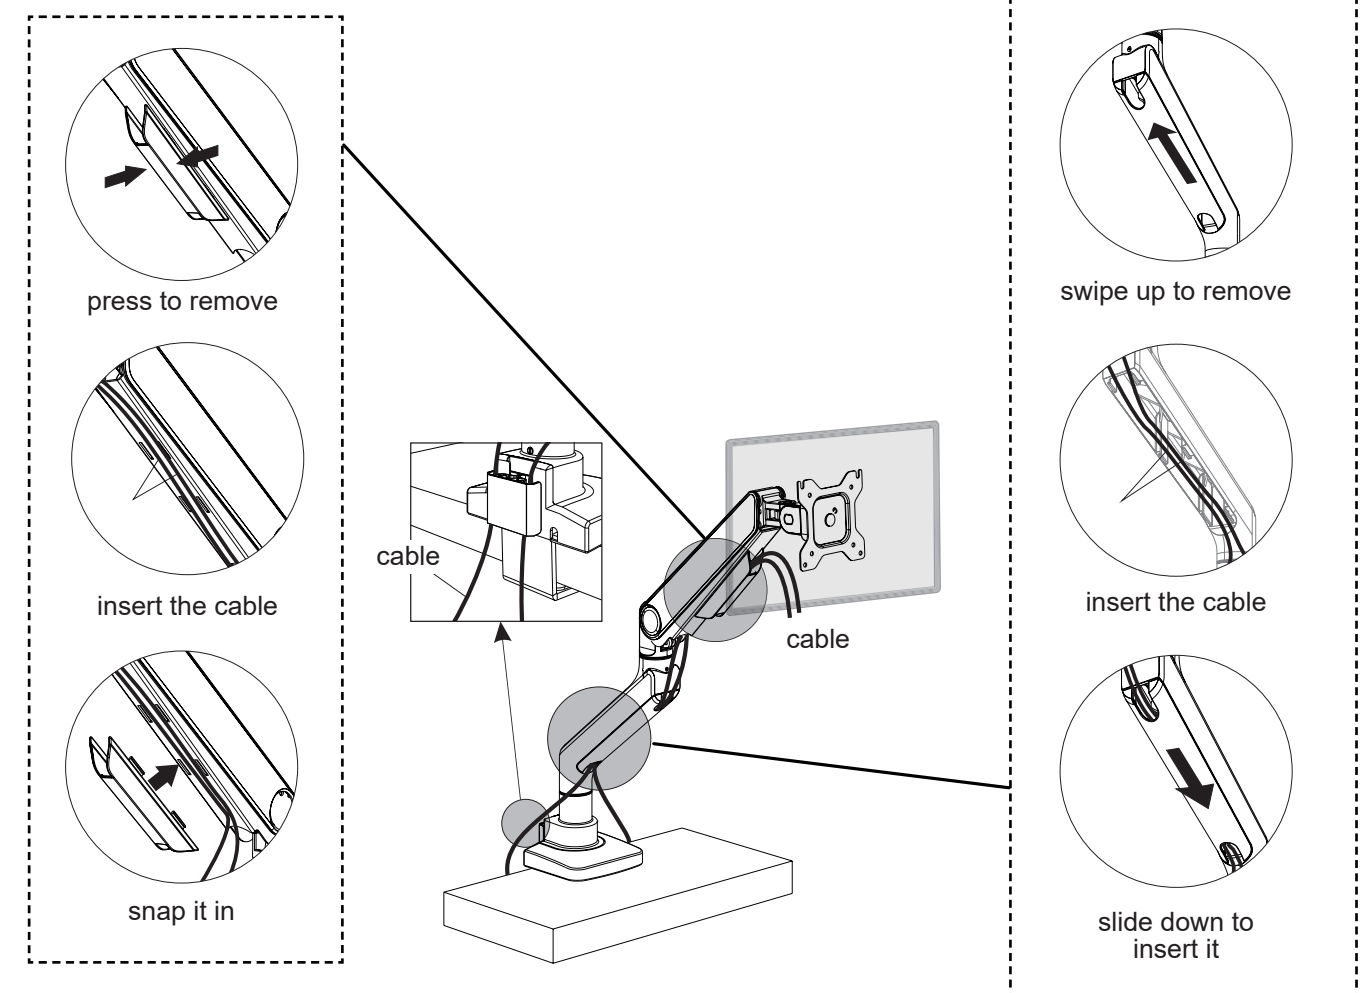

7 Tool Storage

