


New Working New Living

Website: www.flexispot.com

Tel: 1-855-585-5618


Address: 6475 Las Positas Rd. Livermore, CA 94551

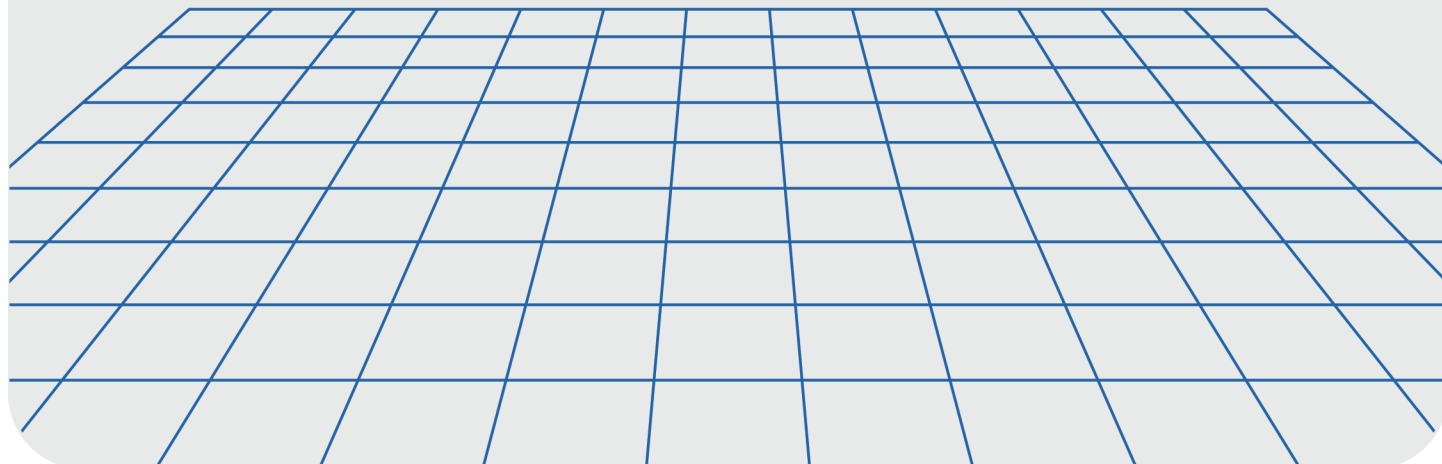

FlexiSpot

User Manual

Item No. R8





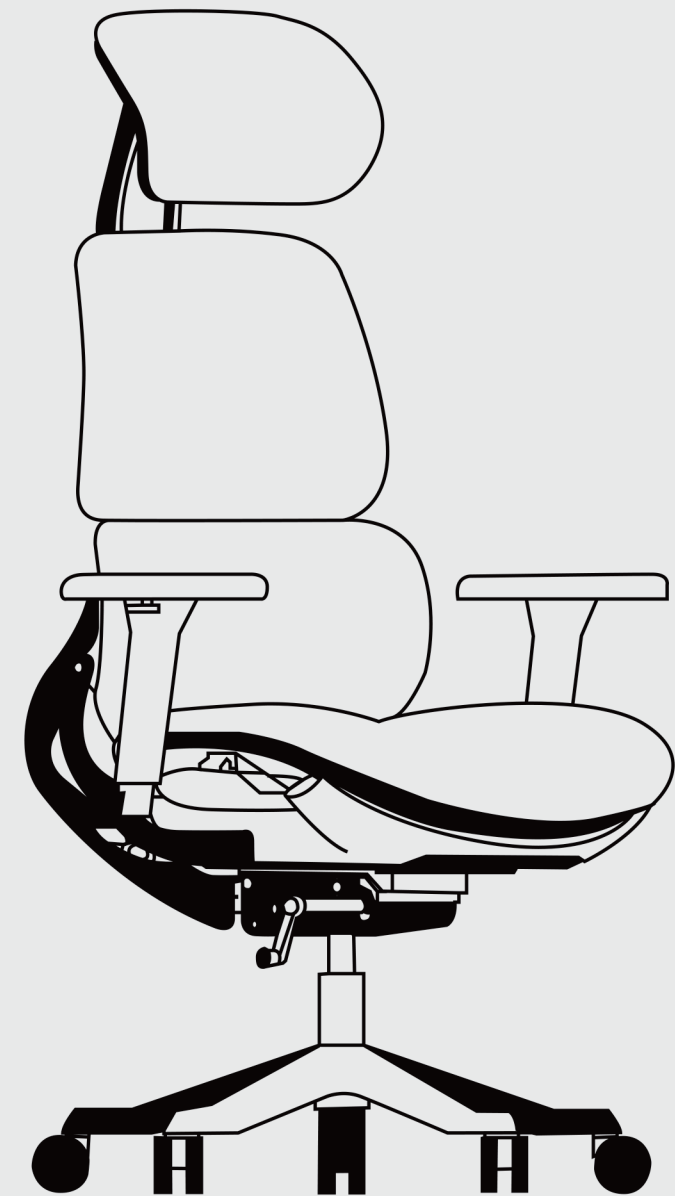


INSTRUCTIONS –
KEEP FOR FUTURE REFERENCE



Parts Included

    Please refer to the parts listed below. If any parts are missing or damaged, please contact customer service.

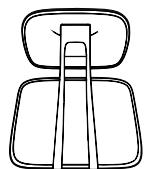A x1 	B x1 	C x2 	D x5 	E x1 
F x1 	G x1 	H x4  1/4" x 1"	I x2  1/4" x 1.6"	



Assembly Instructions

Before You Start: Loosely tighten all screws first. Once all screws are positioned, fully tighten them to secure the assembly.




1 Install the Wheels and the Gas Lift

Insert the wheels (D) into the base (E).

Place the gas lift (F) into the center of the base.


Note: Ensure each wheel is securely pushed into the leg base.

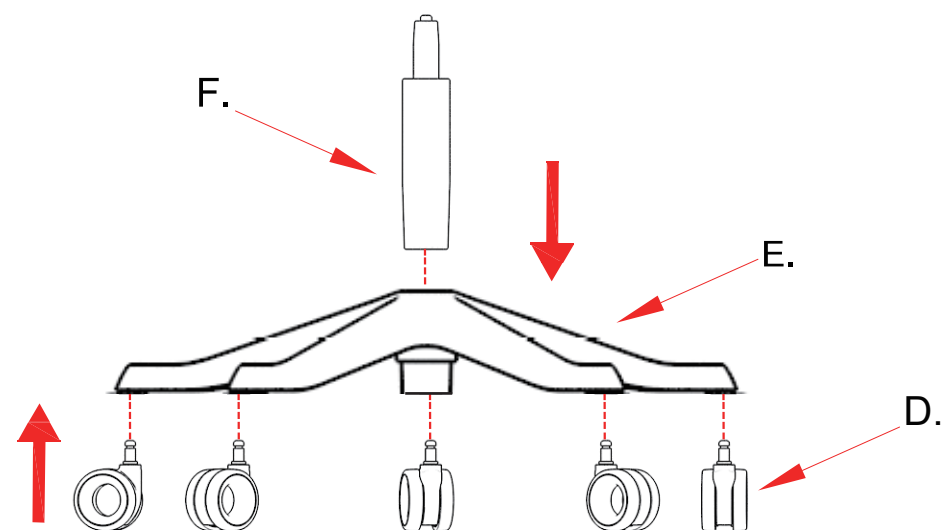

2 Install the Backrest

Use 2 screws (Type I) and the Allen wrench (G) to attach the backrest (A) to the seat (B).


Tip: Align the screw holes carefully before tightening the screws.

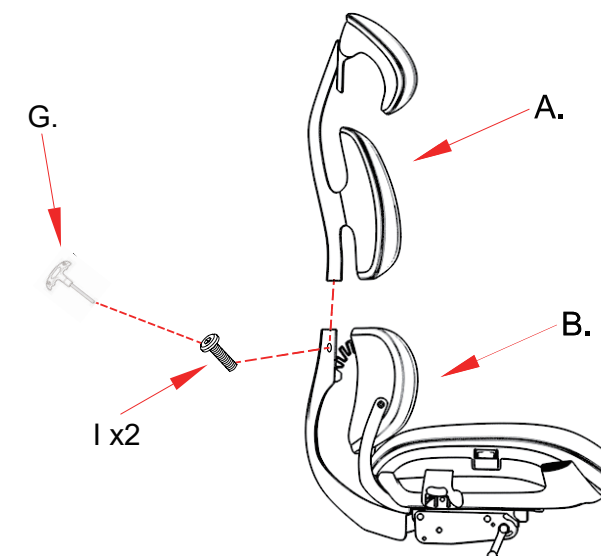

3 Attach the Armrests

Use 4 screws (Type H) per armrest and the Allen wrench (G) to attach the left and right armrests (C).

Note: Check the labeling (L/R) to ensure the armrests are installed on the correct sides.



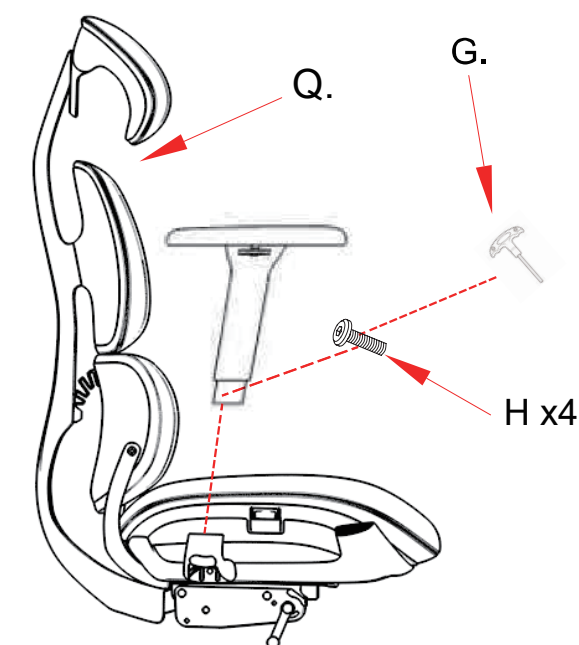


4

Insert the Gas Lift into the Seat

Insert the gas lift (F) into the seat (B).

Tip: Apply firm pressure to ensure the gas lift is fully inserted

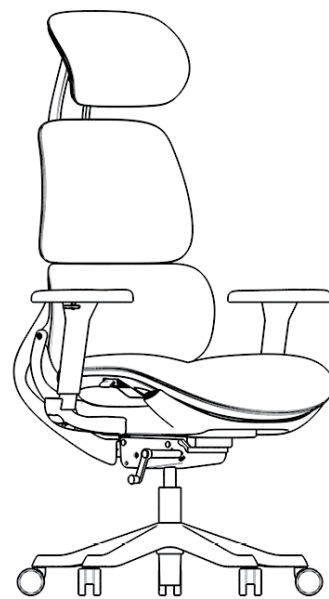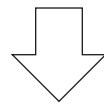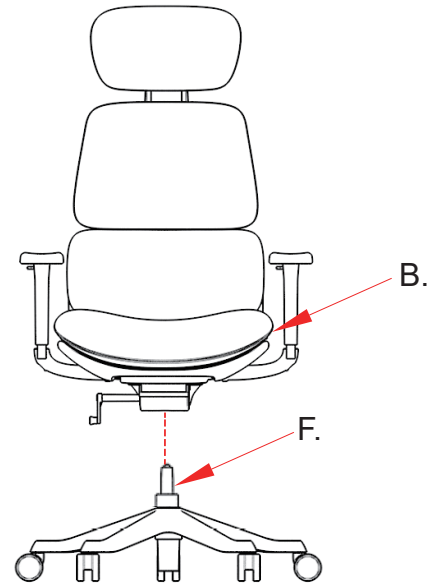


Adjustment Instructions

1

Seat Height Adjustment


Lift the lever on the right side of the seat to adjust the seat height via the gas lift.

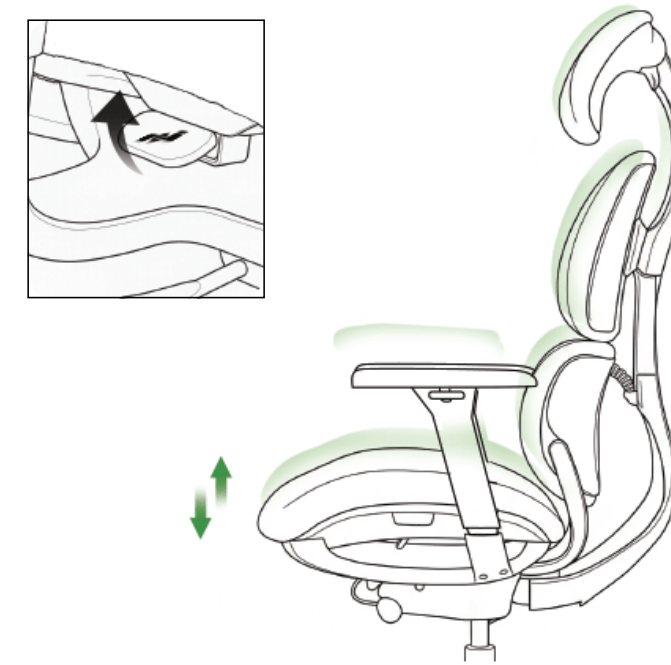

2

Seat Depth Adjustment


Lift the paddle to slide the seat forward or backward, then release to lock in place.

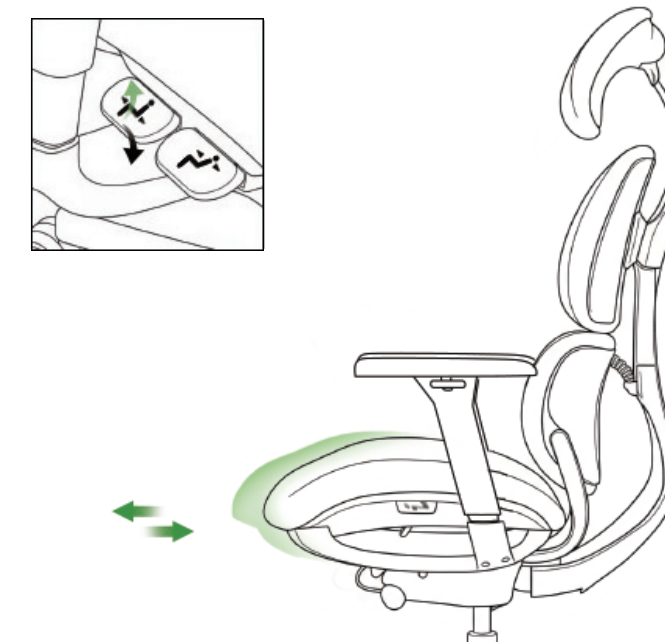

3 Backrest Recline Adjustment



UNLOCK: Push the Paddle down to unlock the backrest, allowing it to move freely with your body.

LOCK: Push it up to lock the backrest at a fixed position.

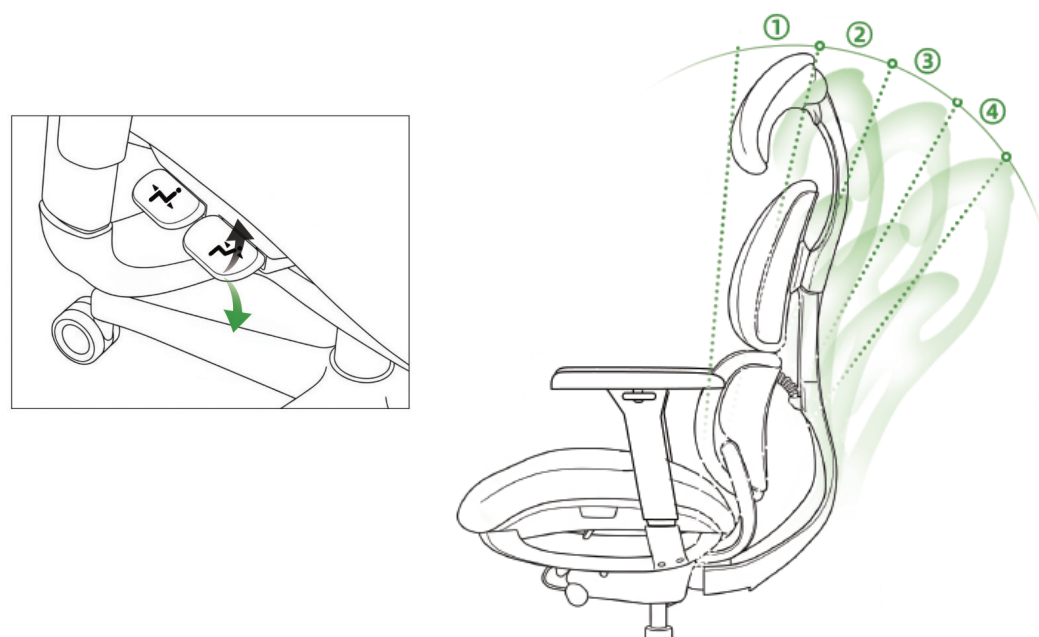


4 Recline Resistance Adjustment

Use the rotary lever to adjust the backrest tension.

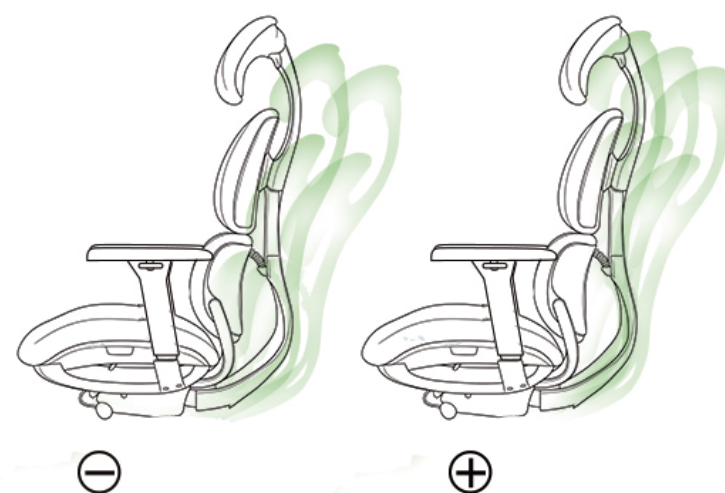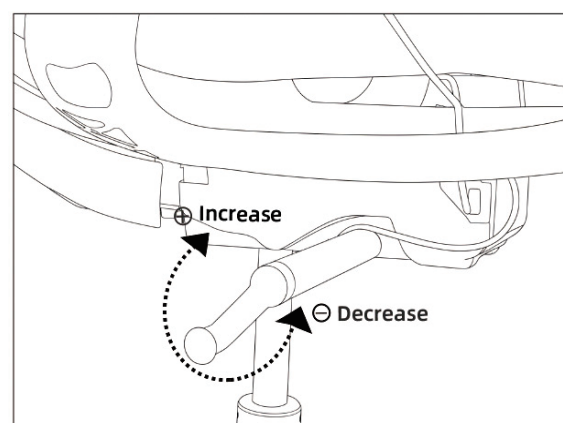

5 Armrest Adjustment

When reclining, the armrests tilt synchronously with the backrest.

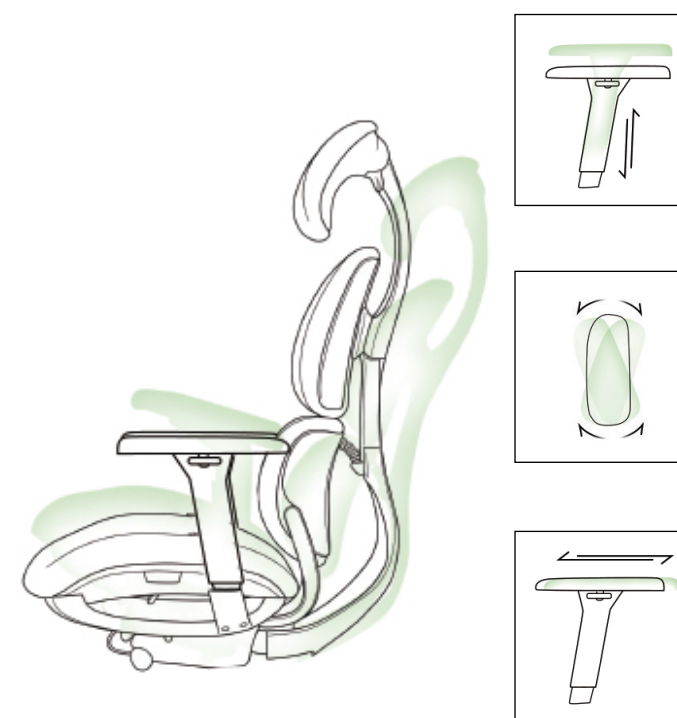


Height: Press the button under the armrest to raise or lower it. Release to lock in place.


Rotation: Rotate the armrest pad left or right to a desired angle.

Depth: Slide the armrest pad forward or backward to adjust.

6 Headrest Adjustment

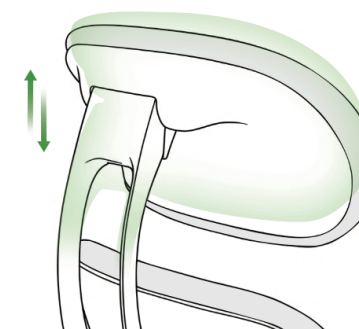

Height: Push the headrest upward to raise it or downward to lower it.

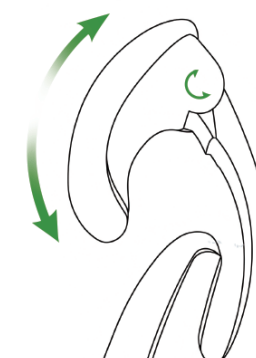

Fine Angle: Adapts angle automatically as your head lean back.

Safety Instructions

1. Do not use on slippery surfaces. Ensure the product is used on a stable, non-slip surface.
2. Avoid placing drinks on the product. Spills can cause discoloration or damage to the surface material. Wipe up any moisture immediately to prevent staining.
3. Do not sit on the product with more than one person at a time. This can lead to instability and potential injury.
4. Regularly check for any loose parts or damage before use. Do not use if any parts are missing or if the product is in poor condition.
5. Be cautious of moving parts. Keep hands and feet away from moving mechanisms to prevent injury.
6. Do not stand on the seat or armrests. This can cause the product to tip over and result in injury.
7. Read the instruction manual thoroughly. Understand the content and usage methods before operating the product.
8. If any issues arise during use, stop using the product immediately. Contact the retailer where you purchased the product for assistance.

Care Instructions for Long-Term Non-Use

1. Avoid placing the product in direct sunlight or in areas with high humidity or extreme dryness. These conditions can cause the product to warp or crack.
2. Regularly inspect the product for any signs of wear or damage. Address any issues promptly to maintain the product's longevity.

Remedies

1. FlexiSpot will replace at no charge any defective parts, or at its option, any product or part that is defective due to improper workmanship and/or materials under normal conditions of use.
2. If a replacement is not feasible or cannot be completed promptly, FlexiSpot may refund the purchase price upon return of the product.
3. For defective products, FlexiSpot will provide a replacement shipped at no cost within the continental United States via FedEx Ground. Expedited shipping is available at the customer's expense. International shipping costs are the customer's responsibility.

What is Not Covered

1. Issues not resulting from material or workmanship defects.
2. Damage from normal wear and tear, improper installation, maintenance, misuse, abuse, negligence, accidents, or alterations.
3. Accessories, connected materials, and products not manufactured by FlexiSpot.
4. Damage from failure to follow instructions and guidelines for the product's intended use.
5. The warranty is void if the product is returned with removed, damaged, or tampered labels, or if there are any alterations.

How to File a Claim

1. To benefit from the limited warranty, claims must comply with the warranty terms and follow the proper return procedure.
2. Contact customer service via email at contact@FlexiSpot.com or toll-free at 1-855-585-5618, providing proof of purchase.

Implied Warranties and Limitation of Damages

Except where prohibited by law, all implied warranties are limited to the duration of this warranty. FlexiSpot is not liable for incidental, indirect, special, or consequential damages, even if advised of the possibility.

Governing Law

This warranty is governed by the laws of California, USA, without regard to conflict of laws principles.

How State Law Applies

This warranty provides specific legal rights, and you may have additional rights that vary by state.