


FlexiSpot


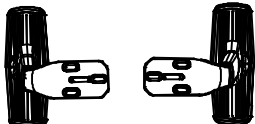
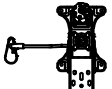
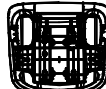


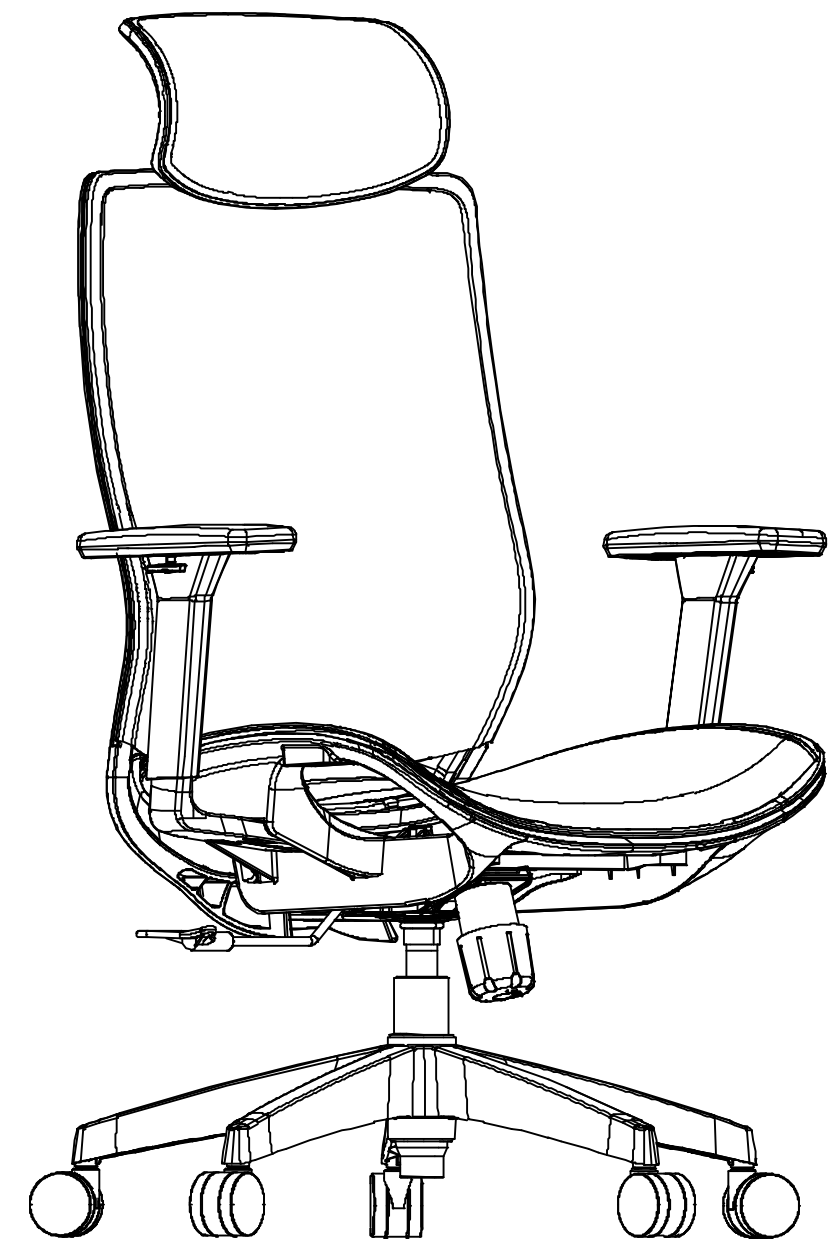








Item No.BS4G/BS4B

User Manual




CONTENTS

English-----	01
German-----	07
French-----	13
Italian-----	19
Spanish-----	25
Warranty-----	31

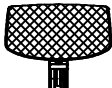A  Backrest x1	B  Armrest x2
C  Mechanism x1	D  Seat cushion x1
E  Gas lift x1	F  Chair base x1
G  Wheels x5	H  Screw 5/16" * 42mm x3
I  Screw 1/4" * 22mm x6	J  Screw 1/4" * 16mm x4
K  Washer x3	L  Gasket x3
M  M5 L-shaped wrench x1	N  M4 L-shaped wrench x1
O  Headrest x1	


1 Install Armrest

Connect Armrests (B) to the Seat cushion (D) using 6 pcs screws (I) with wrench (N).Mind the mounting direction of Armrests.

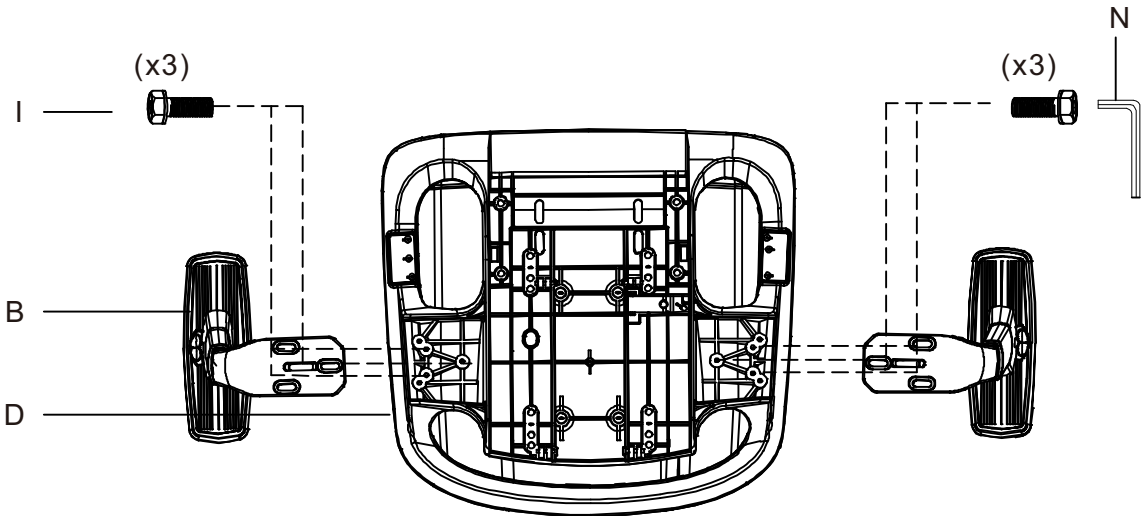


2 Install Mechanism

Connect Mechanism (C) to the Seat cushion (D) using 4 pcs screws (J) with wrench (N).Mind the mounting direction of Mechanism.

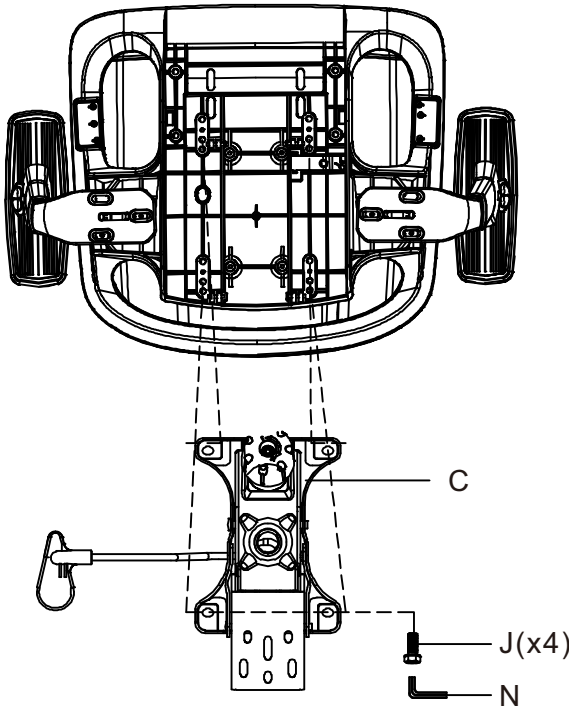


3 Attach Backrest to Mechanism

Attach the Backrest (A) to the Mechanism (C) using Washer (K), Gasket (L) and Screws (H) sequentially with wrench (M).

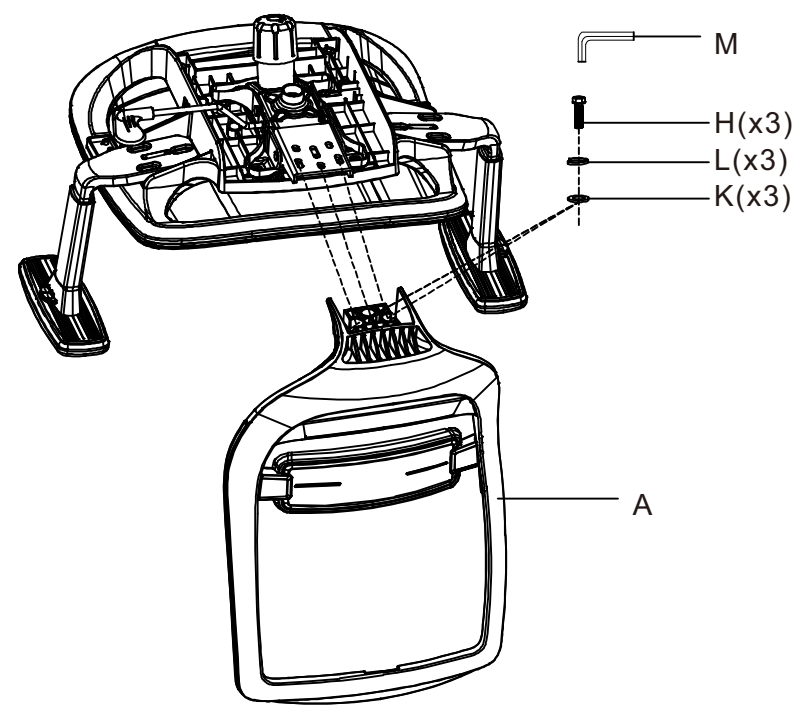


4 Install Gas lift and Wheels to Chair base

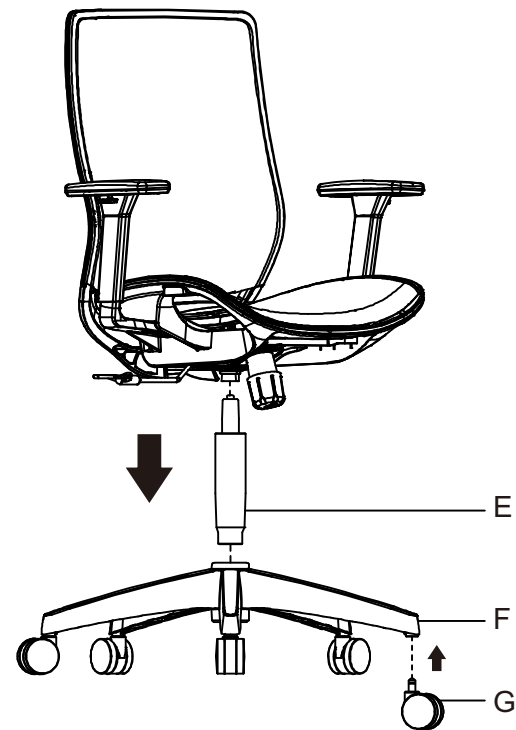



5 Install Headrest

Before assembly, taking out the 2pcs screws from the Headrest (O). Then, attach the Headrest to the Backrest (A) using the 2pcs screws.

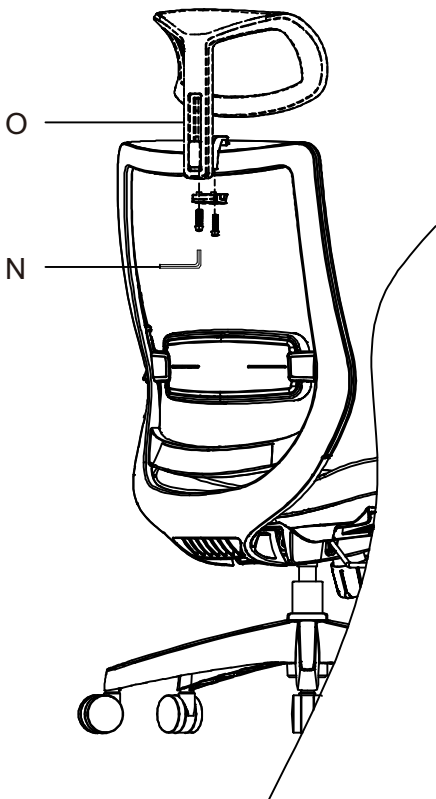

Finish

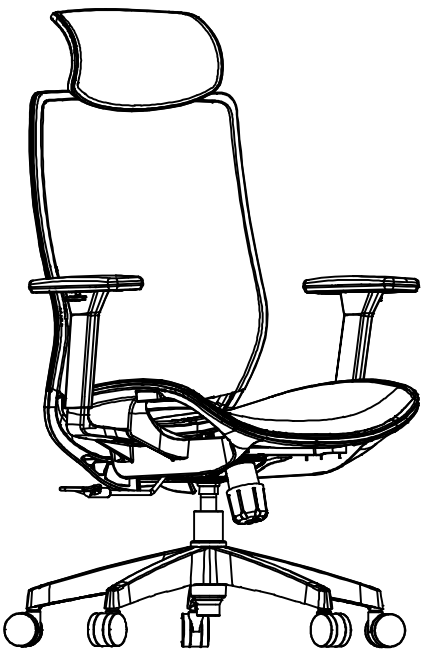

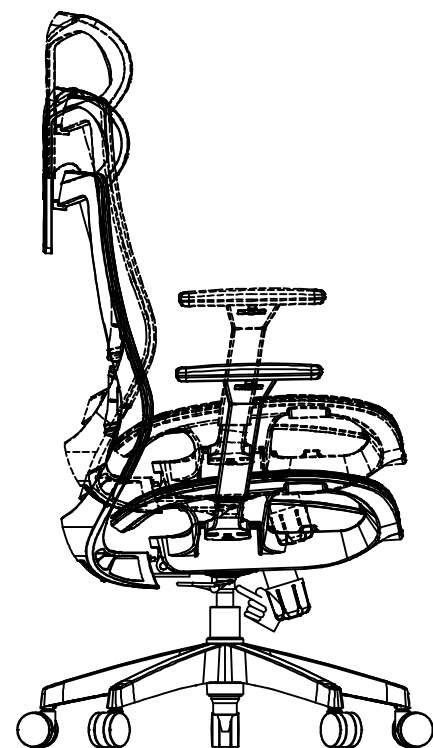

Chair height Adjustment:
Increase: lift your weight from the seat and lift the lever. Release lever at desired position.
Decrease: use your body weight while sitting in the chair and lift the lever at the same time. Release at desired position.

