FlexiSpot

Item No. XR6 **User Manual**




Warranty



Precaution

 $+44\ 20\ 3929\ 3835$ info@flexispot.co.uk




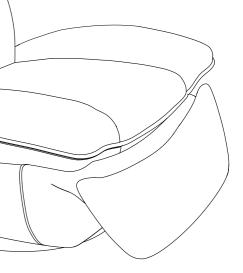

0010

| Main Materials | Usage Areas |
|-------------------|-----------------------|
| Fabric | Main structure |
| Foam | Internal padding |
| Carbon steel pipe | Frame |
| Wood panel | Armrests and backrest |

Components List

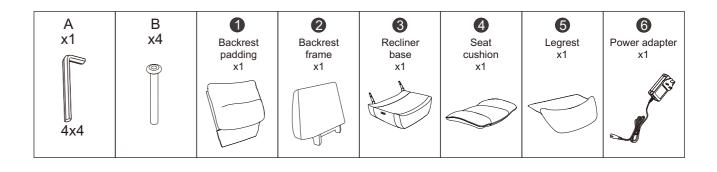


Product Specifications _____

| Product Din | nensions | | | 1020x970x1020mm | | | | |
|------------------------------|---------------|-------|---------------|-----------------|----------------|-------|-------------------|-------|
| Cushion Dimensions | Seat Depth | 530mm | Seat Width | 510mm | Seat Height | 550mm | Armrest Height | 570mm |
| TYPE-A+TYPE-C Charging Power | | | | | 10W | | | |

Note: Dimensions are measured manually, so the actual product may vary by 3-5 cm. Please refer to the actual product for precise measurements.

 Installation Preparation —————



Assemble on flat floor to avoid scratches



 
Installation should be done with two or more people




Prepare a knife or scissors




Assembly Instructions




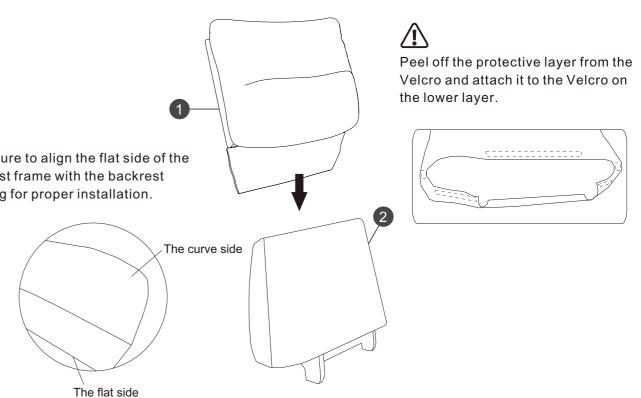


2


Please complete the wiring as shown in the diagram.

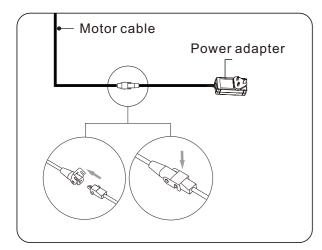


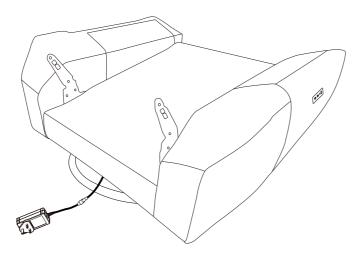

 Plug the adapter into the socket, and use the switch to adjust the recliner to the reclined position.

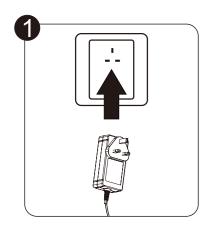




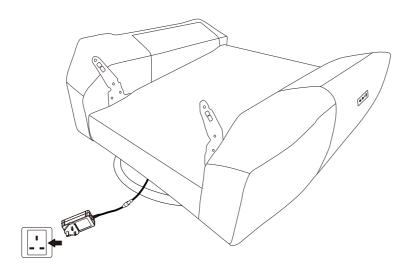



Flip the base to the angle shown in the diagram to facilitate the installation of the legrest. Make sure no one stands in front of the recliner when it is open to avoid collisions.

3

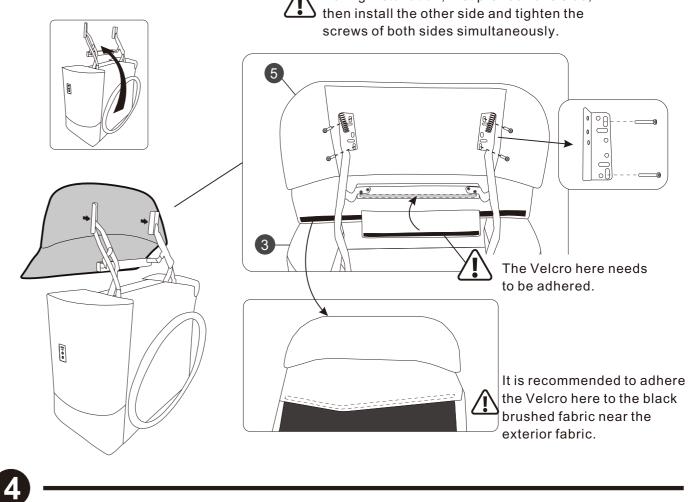


 After adjusting the recliner to a sitting position using the switch, flip it to a flat position.

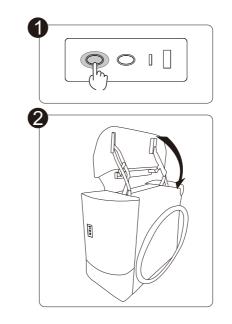




During installation, first pre-lock one side, then install the other side and tighten the

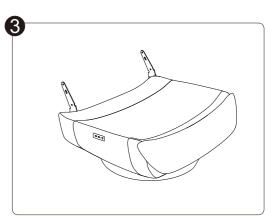


5

Install the seat cushion, ensuring that the front edge of the cushion is flush with the legrest.

Neatly arrange the backrest lower part, and attach the Velcro to the back of the frame as shown.

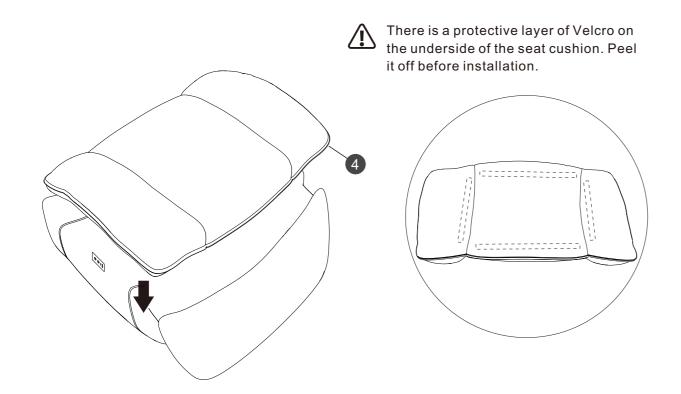


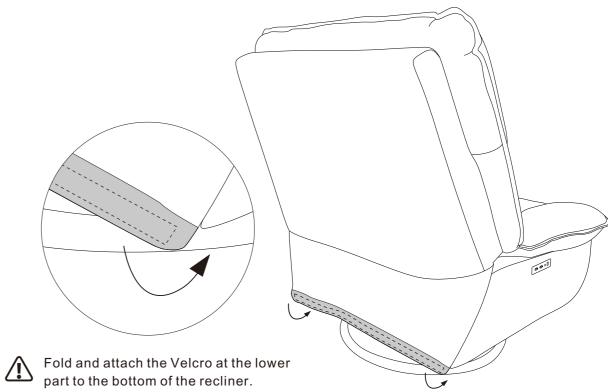


Switch Function Instructions




Install the backrest.

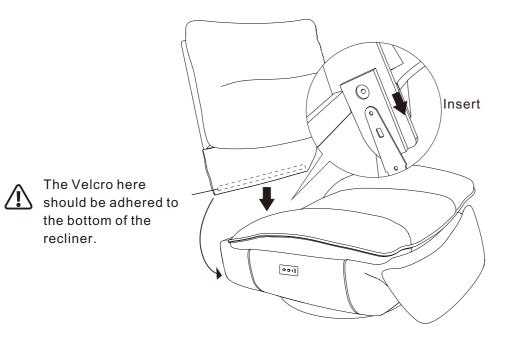

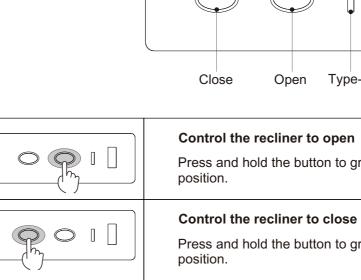



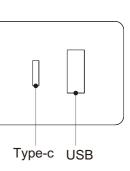

Press and hold the button to gradually open the recliner to the reclining

Press and hold the button to gradually close the recliner to the sitting


Do not insert any body parts, such as your head, hands, or feet, into the underside of the frame while the recliner is in operation.

Phone Holder Installation

If you purchased the recliner with a phone holder, the installation will also include steps for the phone holder. Detailed instructions are as follows:


Connect the wireless charging phone holder to the recliner.

2

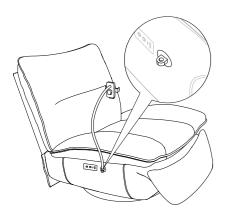



Note: For the recliner version with a phone holder, the total charging power of TYPE-A + TYPE-C + wireless charging is 10W.

Components List for Phone Holder Installation

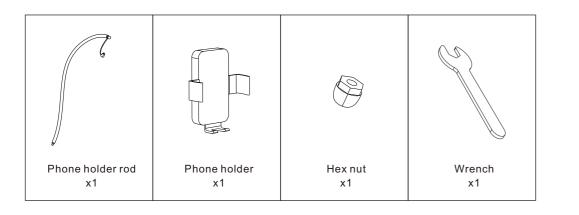


Connect the phone holder to the rod.

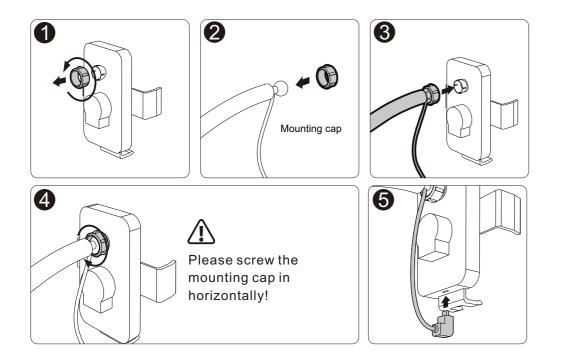

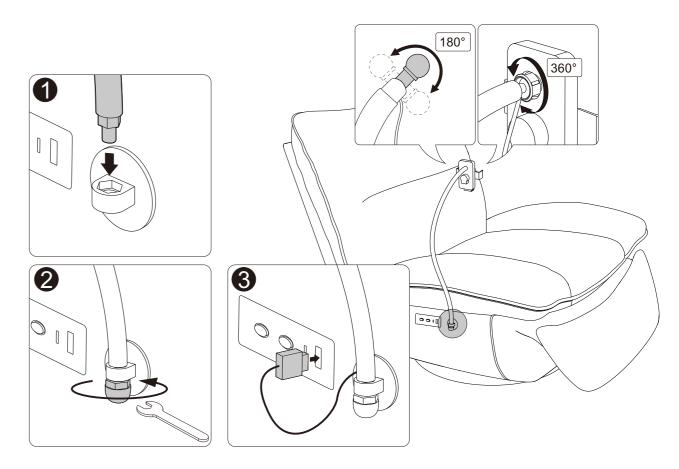

Wireless Charging Function Instructions

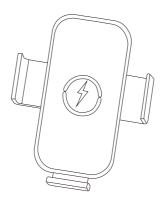

Operating Instructions:

and secure the phone.

If the phone supports wireless charging, the holder will provide power to the phone (Adjust the placement for faster charging). If the phone does not support wireless charging, the holder will function as a standard phone holder.

Indicator Light Status

| Solid blue light | Wireless |
|------------------|----------|
| Solid red light | Wireless |

If the red and blue lights flash alternately, please check if there are any foreign objects on the wireless charger or if the placed object is incompatible.

1. When the phone holder is powered on, it will automatically open. 2. When a phone is placed on the holder, it will automatically close

3. While the phone is on the holder, press the side button (either side button) once to open the holder and remove the phone.

charging is active and functioning normally

charging is in standby mode

Warning

Warning







Do not sit on or press armrest.

Do not press backrest after reclining.



Do not get off the chair while it is reclined.

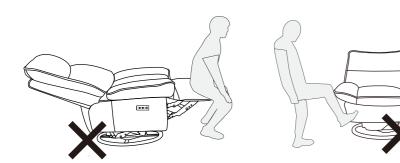

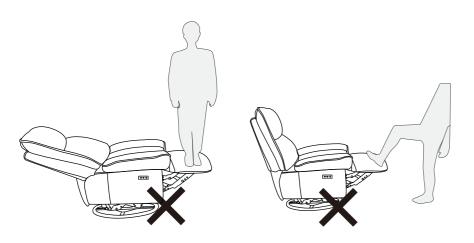

Do not sit/kick/stand on the footrest at any time.



Do not sway back and forth when the recliner is fully open.



Do not force the recliner to lean back or lie on its back, as it is easy to tip.

Troubleshooting

If this product malfunctions, please refer to the following situations and possible solutions:

| Situations | Solutions | | |
|---|---|--|--|
| Frame is not flexible during usage | Adjust the product's position (level it) Apply a small amount of lubricant to the sticking points | | |
| The product exhibits a non-smooth feeling during operation | Remove any debris or obstacles from beneath and around the recliner | | |
| The product has an odor | Keep the area well-ventilated or spray with a recliner-specific deodorizer. | | |
| The switch is not working | Check if the wiring of the switch is connected properly. | | |
| Recliner functions are all unavailable | Check that the motor cable and power cable are connected correctly. Check that all wiring connections are correct. Check that the power cable is plugged into a functioning socket. | | |
| If issues persist after following the above troubleshooting solutions, please contact our customer service to | | | |

Manufacturer: Flexispot Smart Home Vietnam Co., Ltd. Add.:LOT 80, 81 LONG GIANG INDUSTRIAL PARK, TAN LAP 1 COMMUNE, TAN PHUOC DISTRICT, TIEN GIANG PROVINCE, VIETNAM Importer: FLEXISPOT LIMITED, G-PARK UNIT1, MOULTON PARK, SUMMERHOUSE RD, NN3 6WD NORTHAMPTON, UK



Avoid heavily sitting, and when reclining, ensure that your buttocks are positioned on the cushion and avoid sitting on the backrest of the recliner.



Do not sit on the front edge of the recliner or on the footrest of the recliner, which is prone to tipping forward.