


User Manual

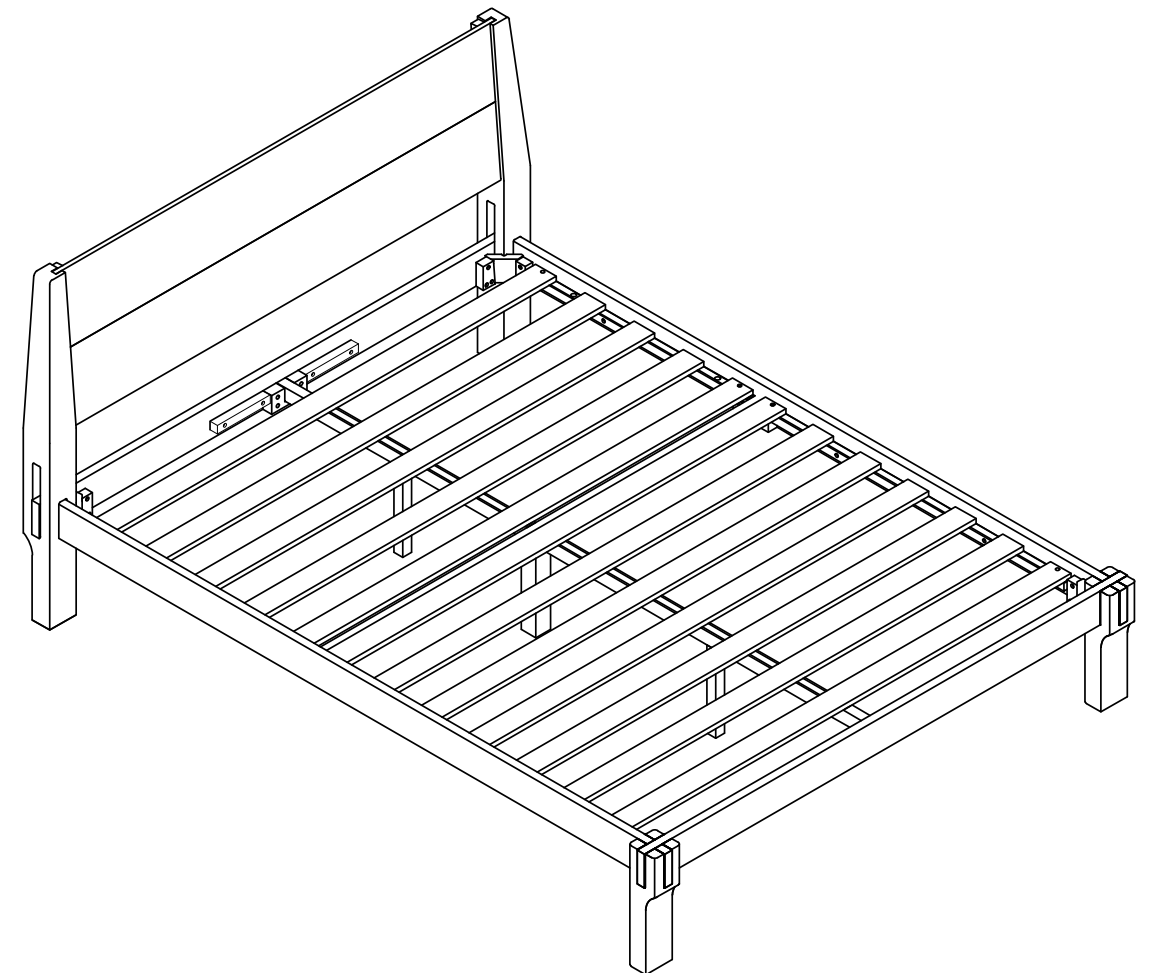

+1 (855) 585-5618



**Acacia Japanese Joinery Bed
with Headboard (Full/Queen)**

INSTRUCTIONS - KEEP FOR FUTURE REFERENCE


Parts and hardware list

- Make sure all parts are in the package.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.









Parts List Headboard

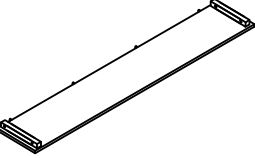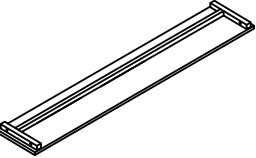12Lx1pc Headboard Left Leg 	12R x1pc Headboard Right Leg 	13x1pc Bottom Board 	14x1pc Top Board 
---	---	---	---



Hardware List

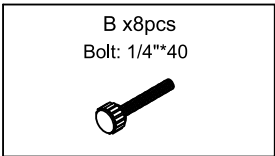


Parts List Bed Frame

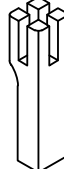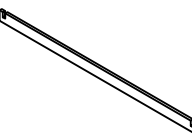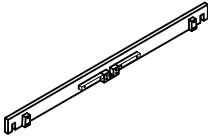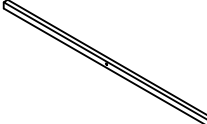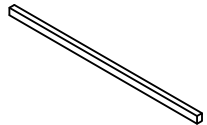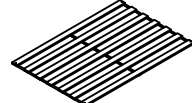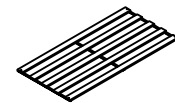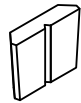1x4pcs Legs 	2Lx1pc Long Rail Left 	2R x1pc Long Rail Right 	3 x2pcs Short Rail 	4x1pc Support Bar A 	5x1pc Support Bar B 
6x1pc Support Bar C 	7 x2pcs Support Legs For Slat A 	8 x1pc Support Legs For Slat B 	9x1pc Slats A 	10x1pc Slats B 	11x4pcs Wooden wedge 

Hardware List

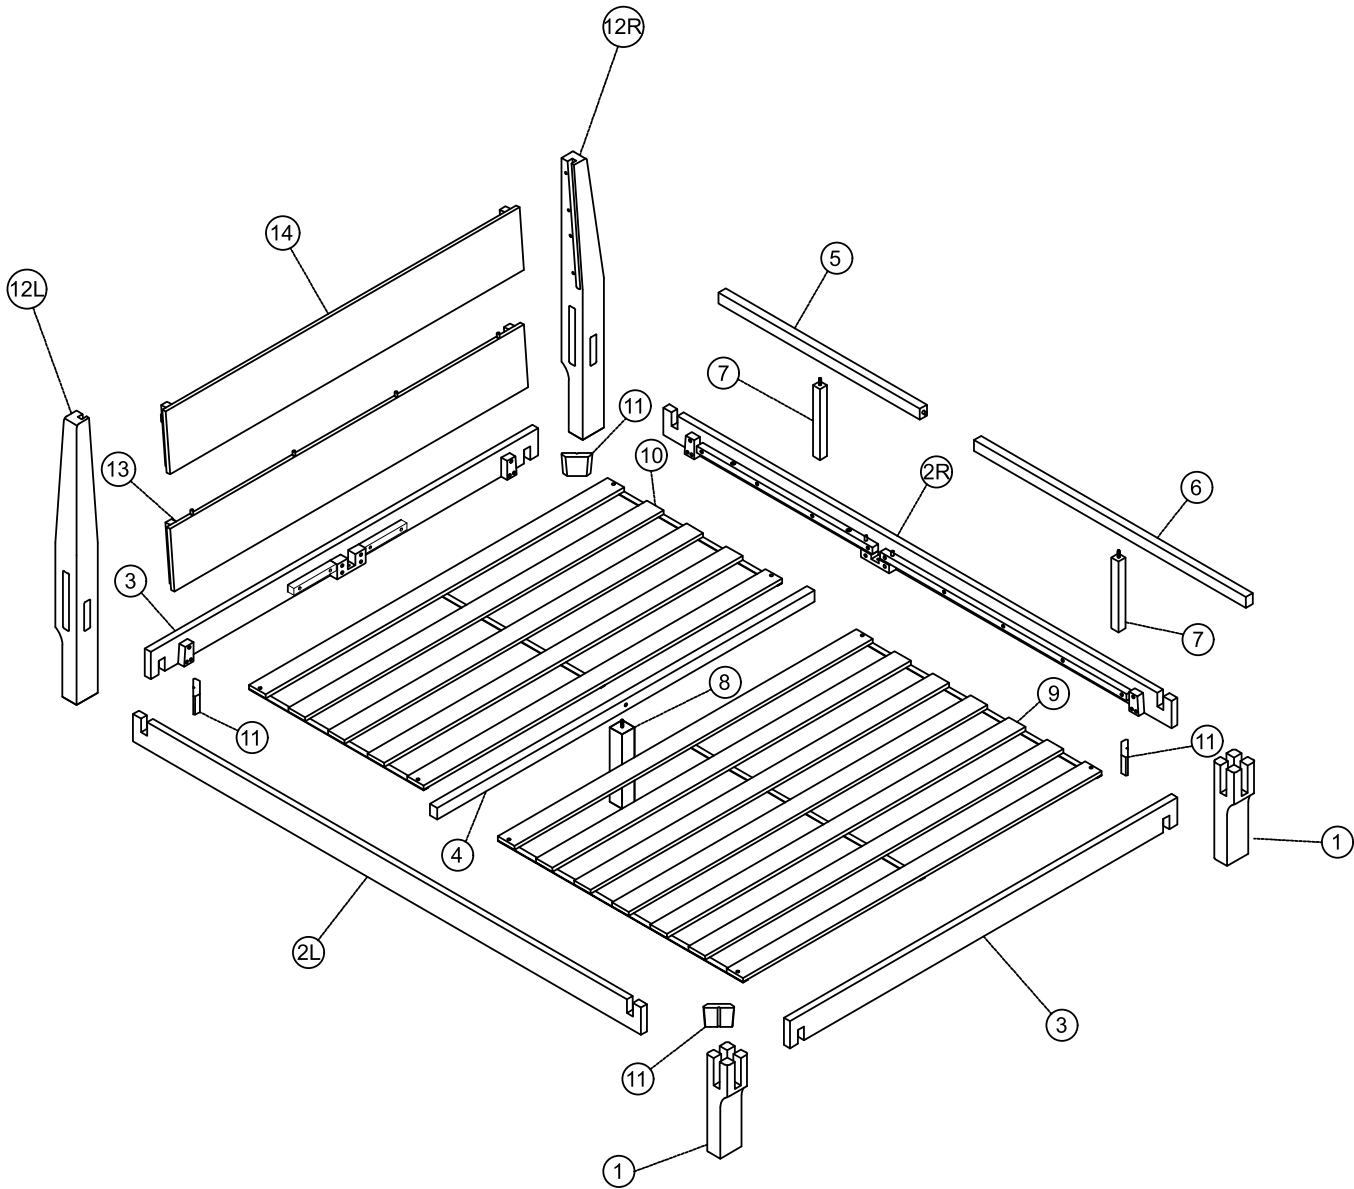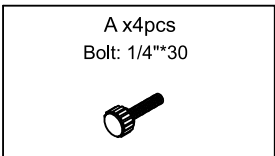


- If you are installing the adjustable half bed, there is no need to install parts labeled "10", "7" "5" (highlighted in darker color).
- For instructions on installing the adjustable half bed, please refer to the corresponding installation manual.

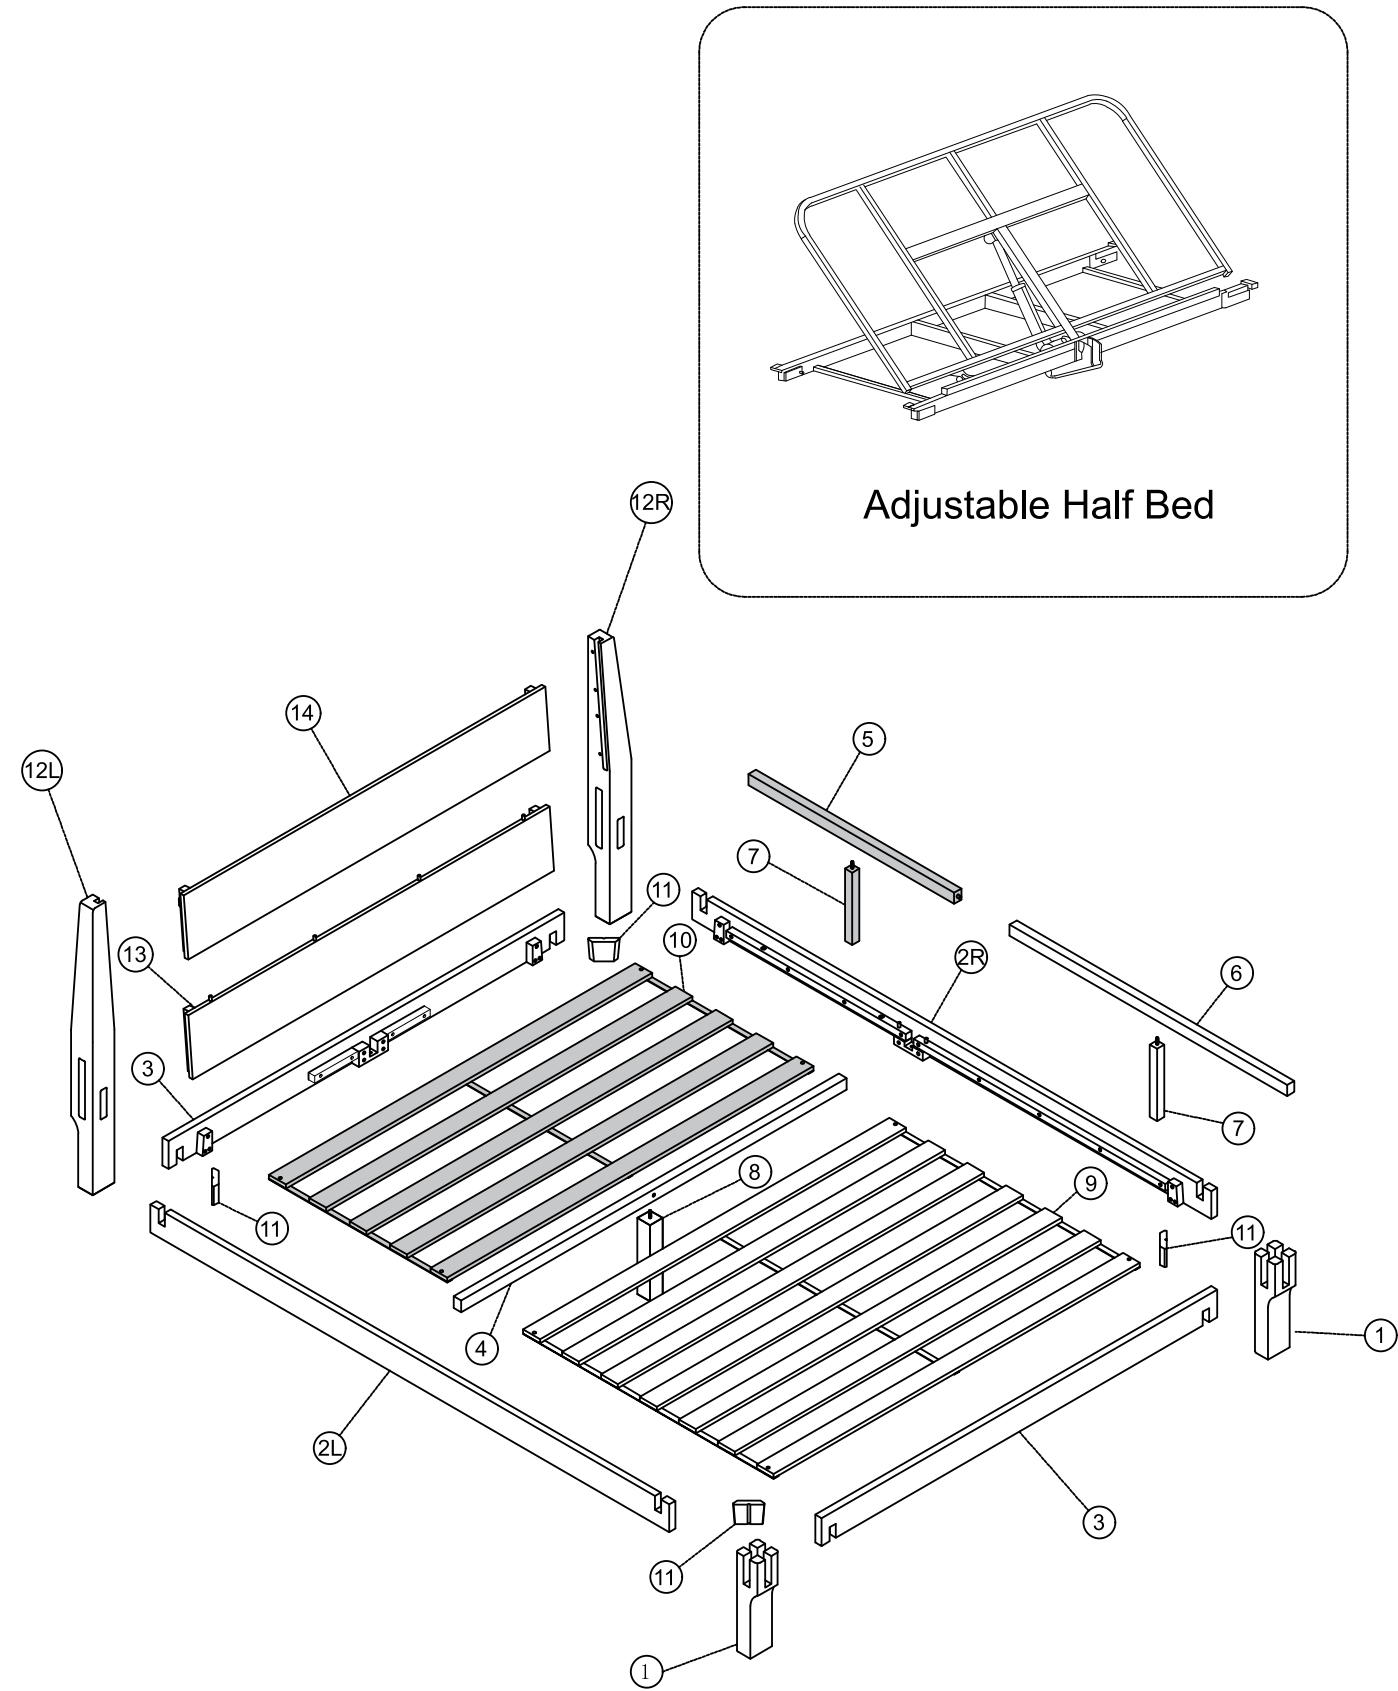

Assembly Instructions


STEP 1

Insert the long rails into the headboard legs, "U" joint facing up.

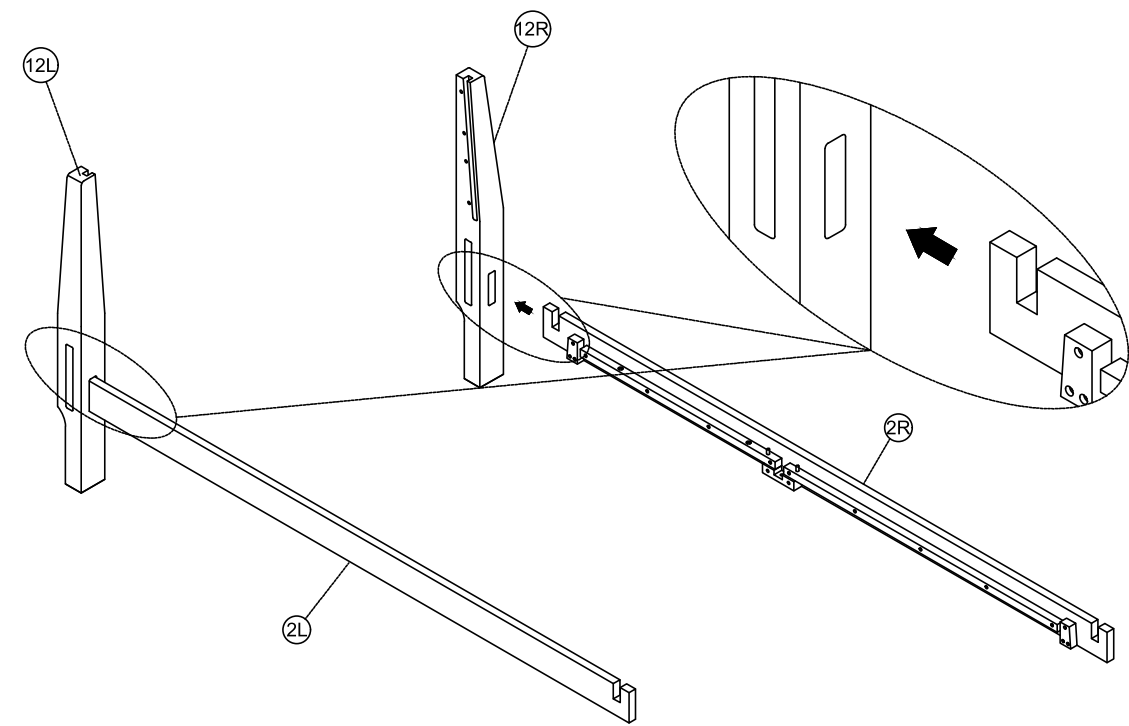


STEP 2

Insert the top short rail into the headboard legs, "U" joint facing down.

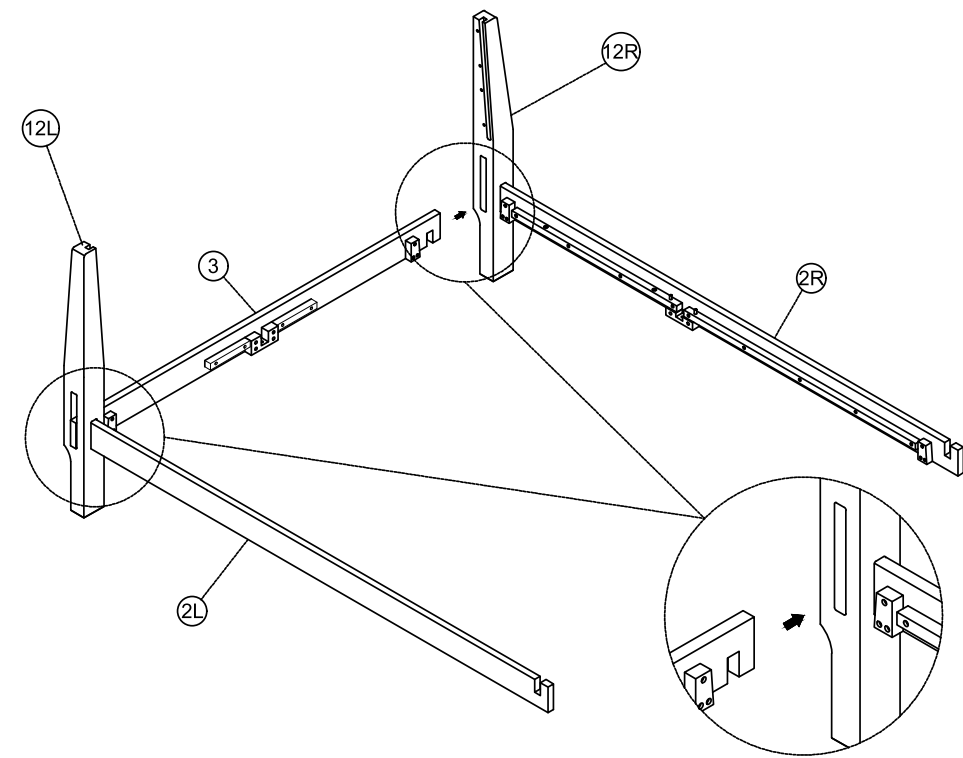


STEP 3

Insert the long rails into the footboard legs.

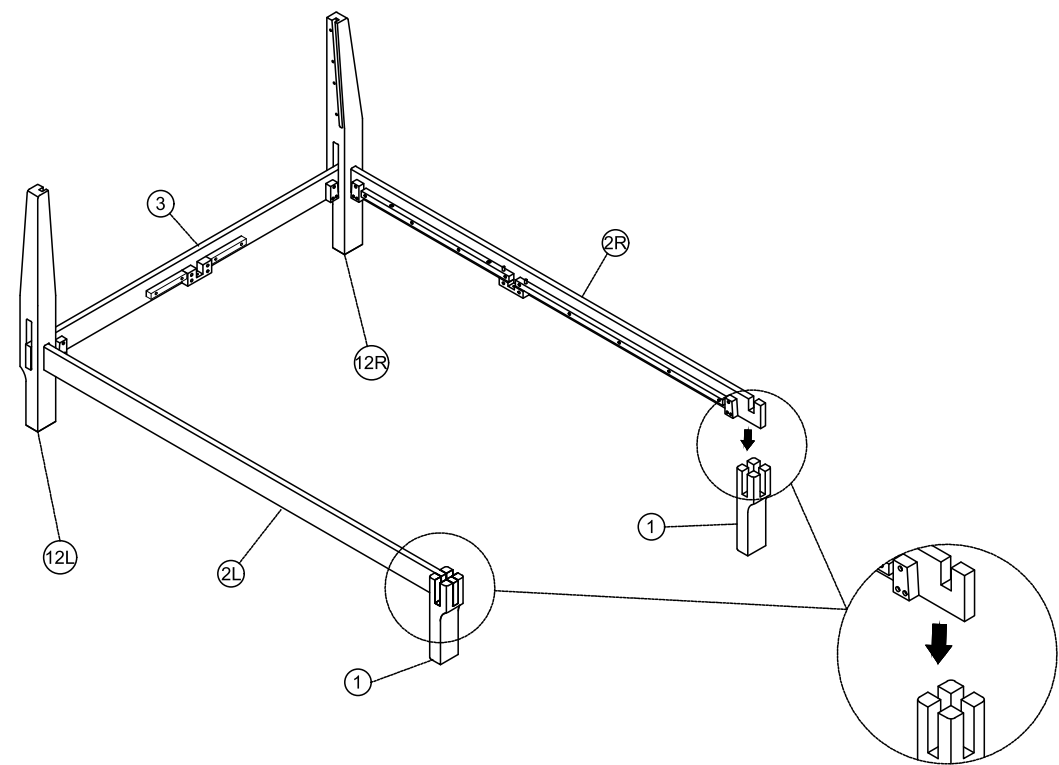


STEP 4

Insert the Short Rail into the footboard legs.

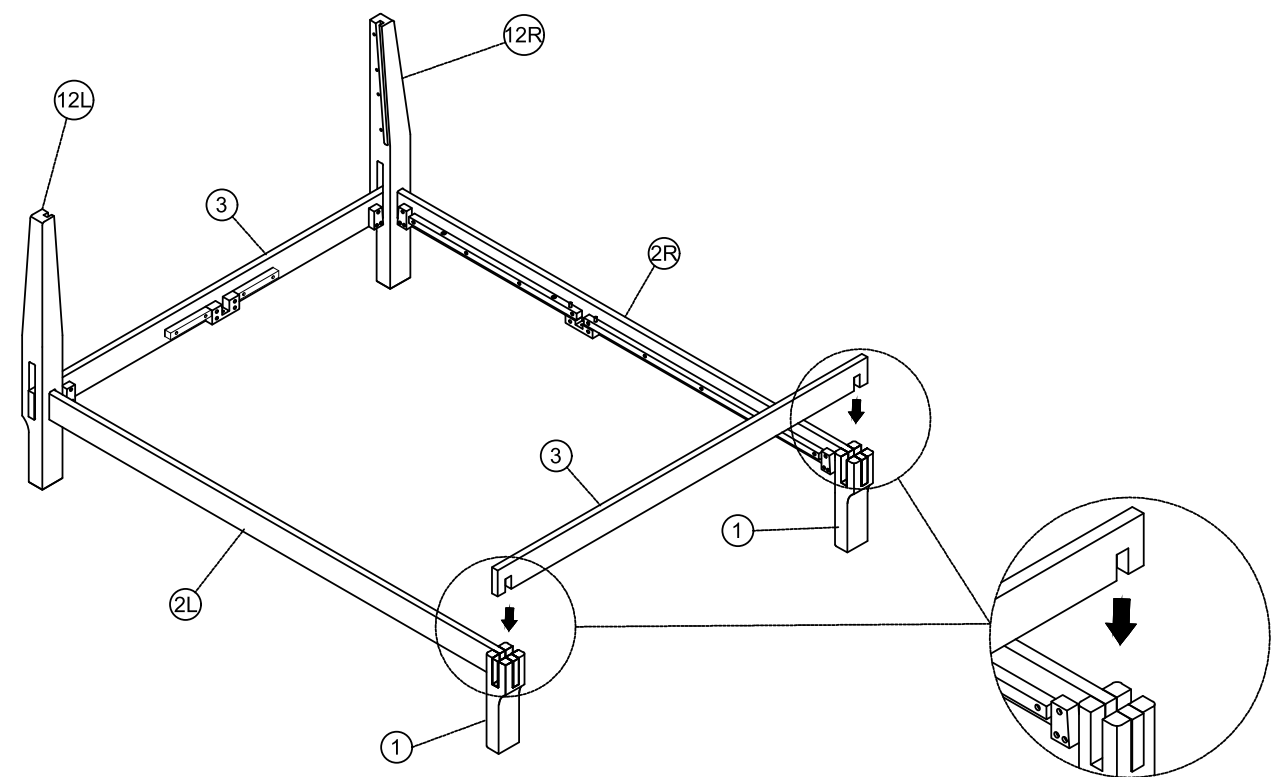


STEP 5

Insert the bottom board. Fix it in place using hand screws (B), but do not fully tighten them yet.

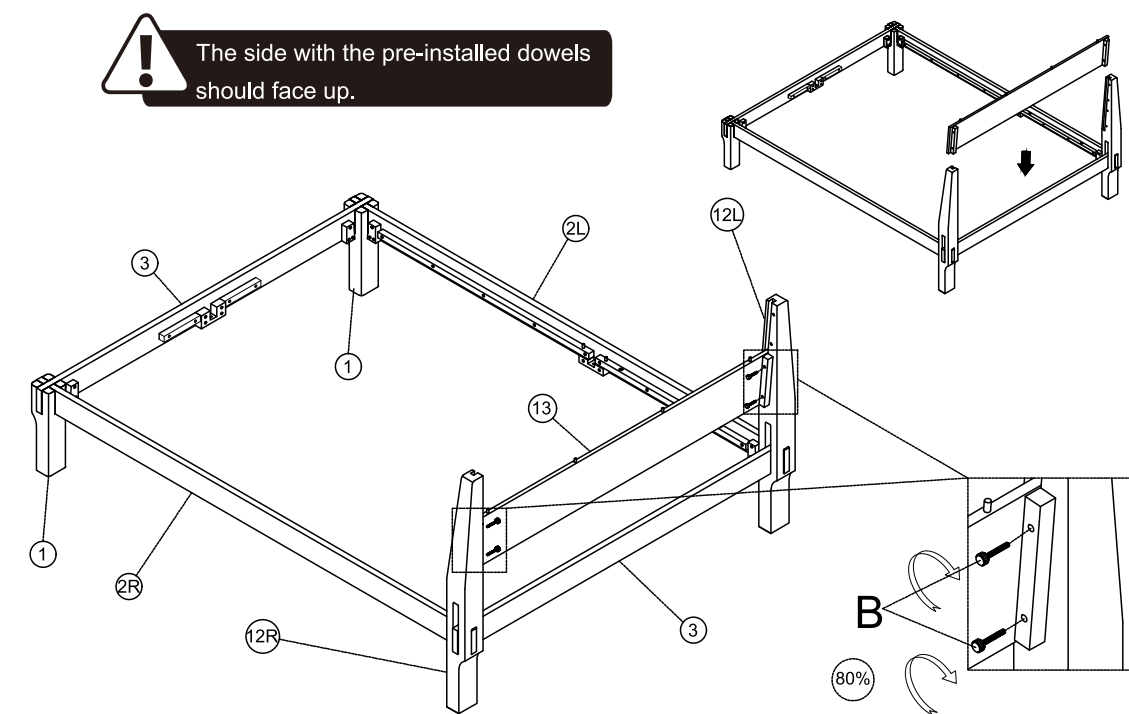


STEP 6

Insert the top board and align it with the pre-installed dowels on the bottom board.

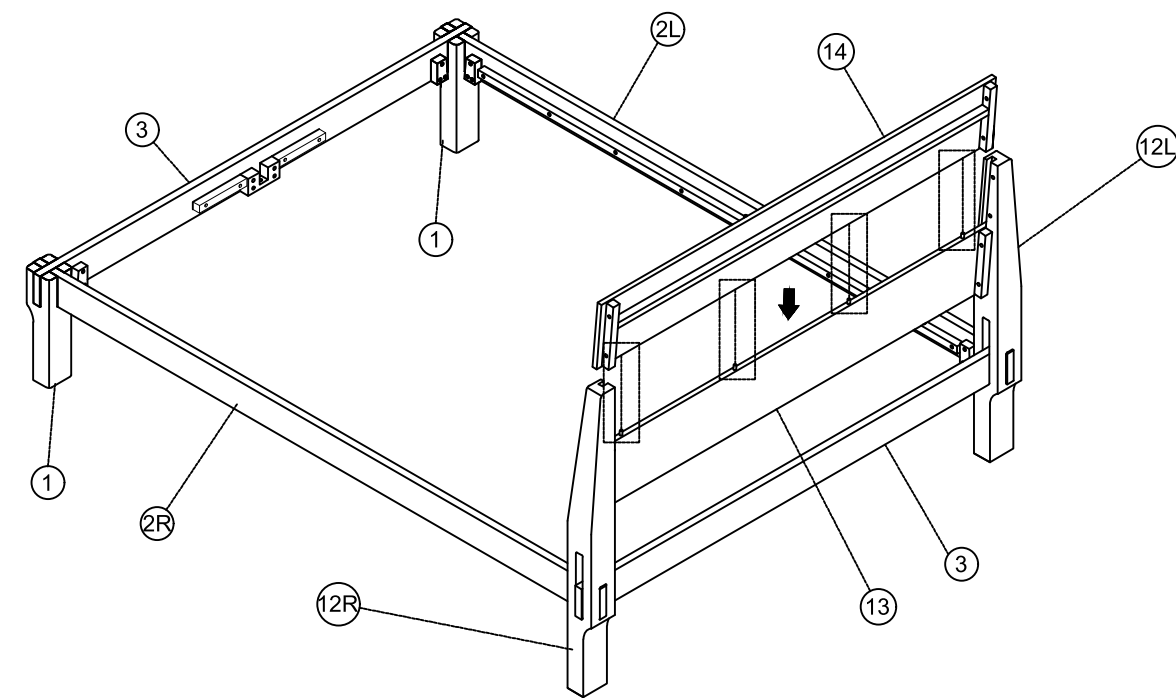


STEP 7

Secure the top board with two hand screws (B) on each side.
After confirming that the top board and bottom board are properly aligned and squared, fully tighten all screws (B).

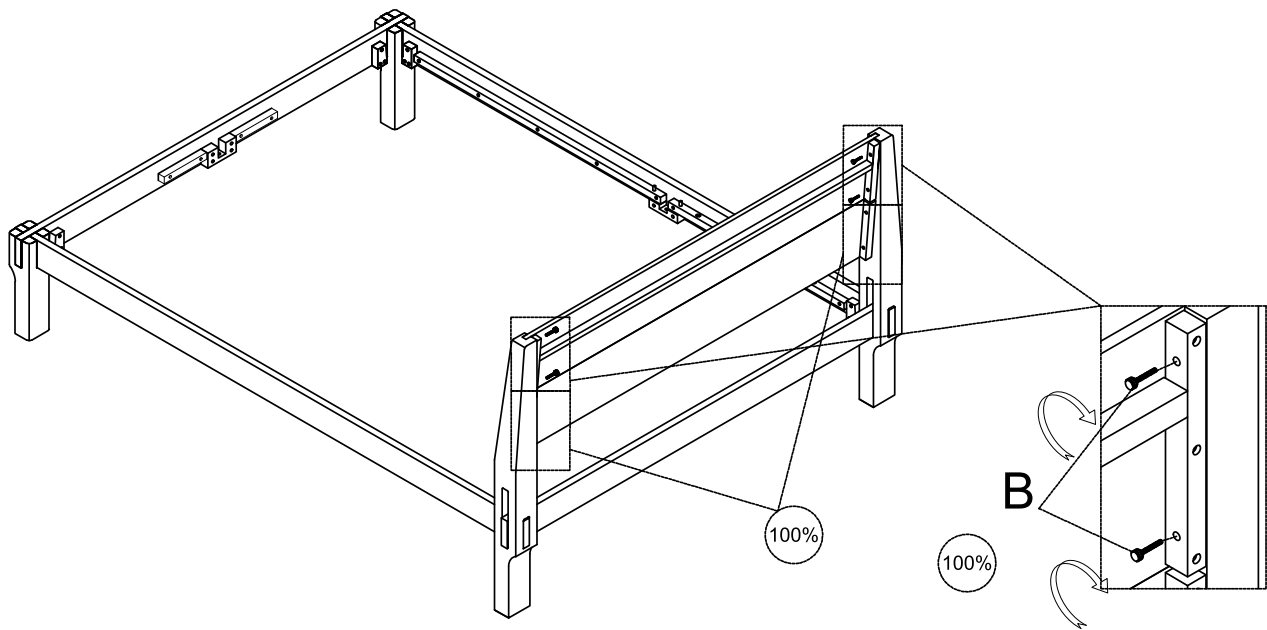


STEP 8

Screw the support legs into the support bar.

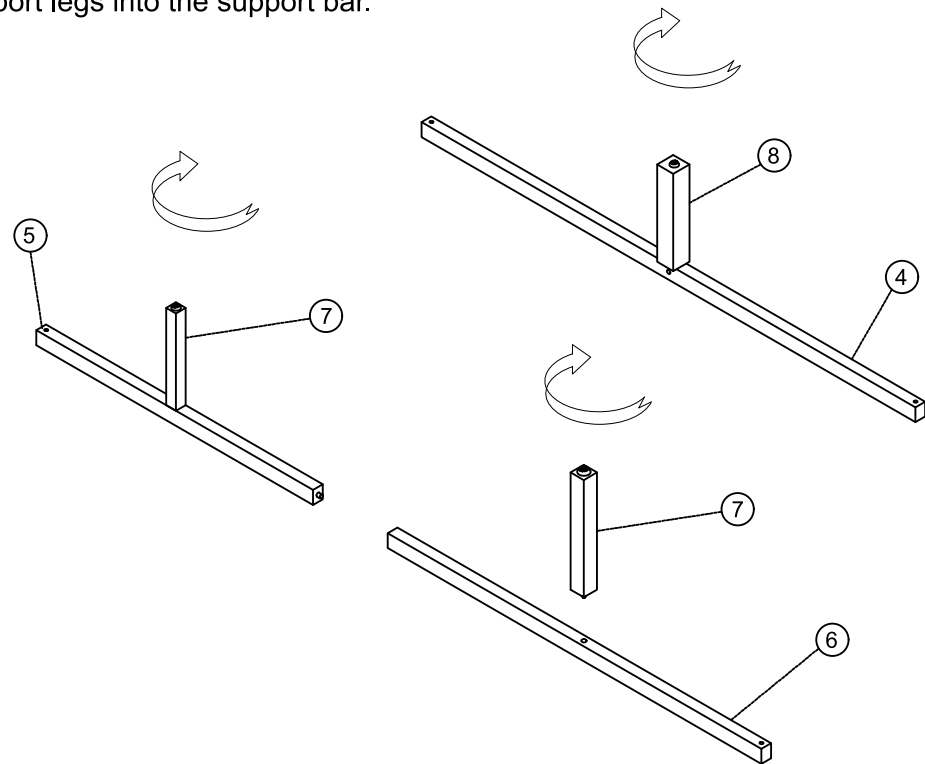


STEP 9

Connect the support bar A to the Long Rail Left and Long Rail Right.

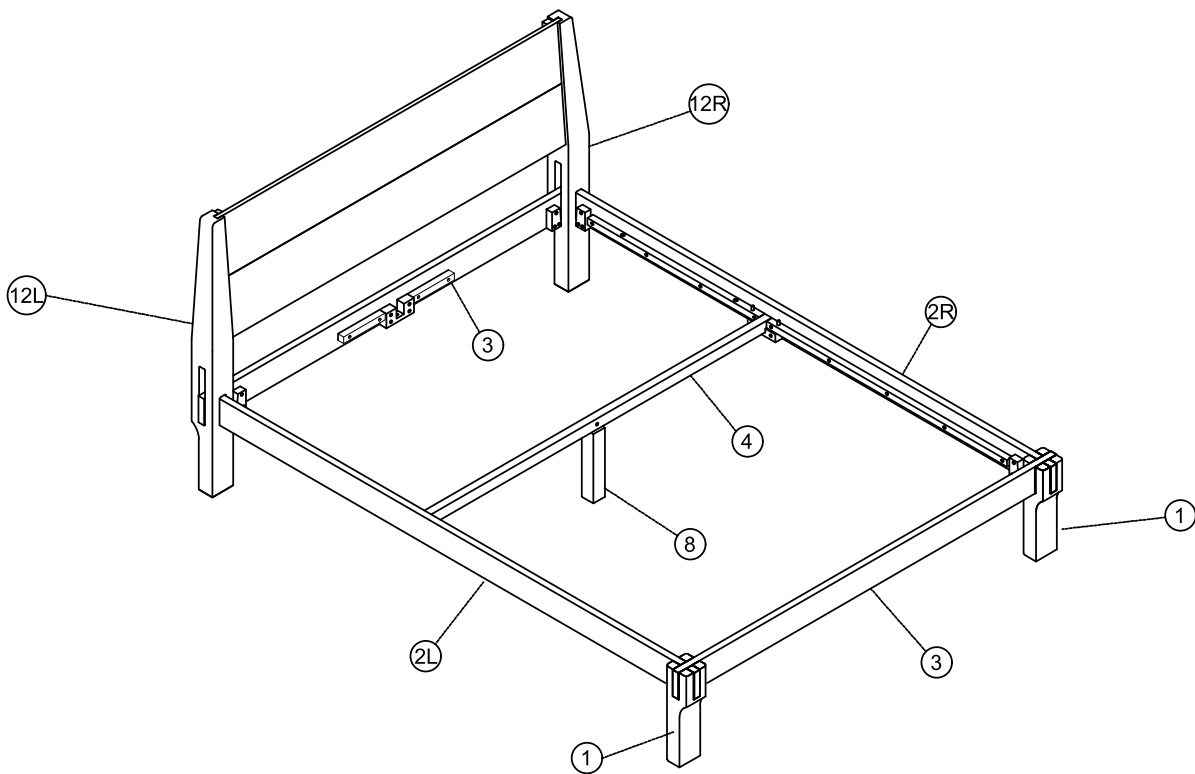


STEP 10

Connect the support bar B & support bar C to the short rails.

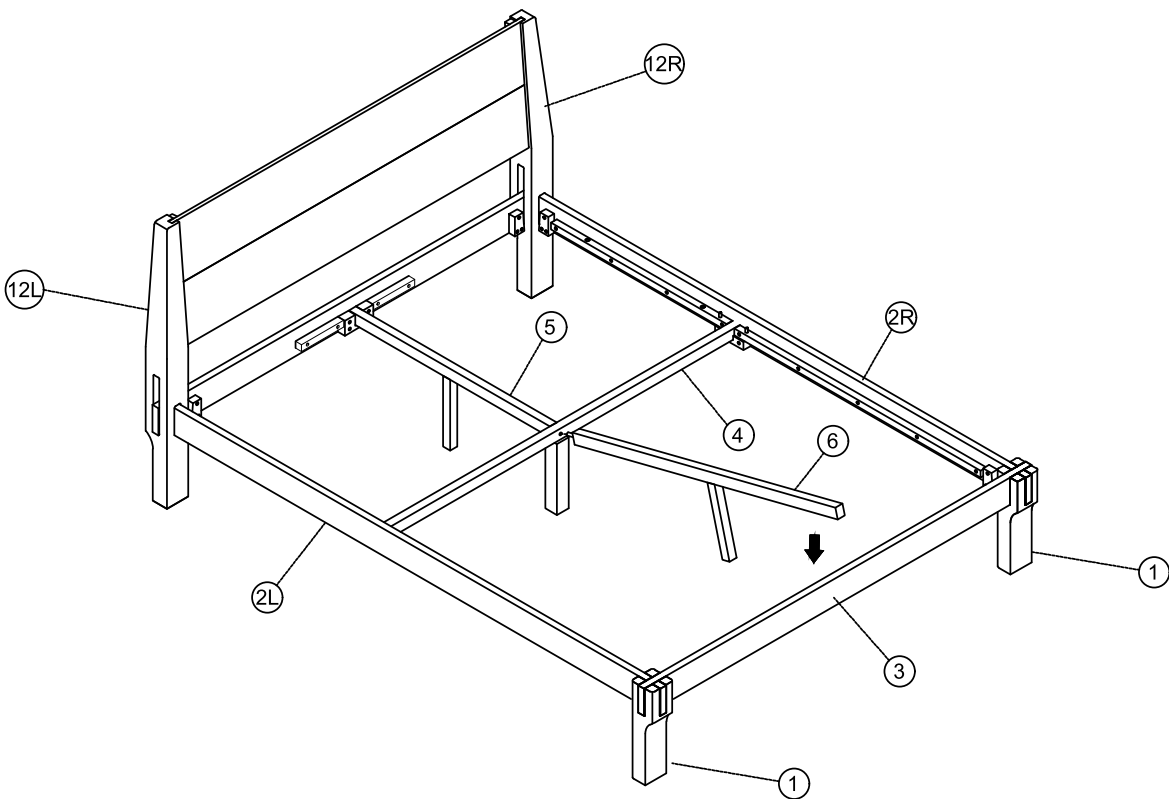


STEP 11

Hand tighten the screws A.

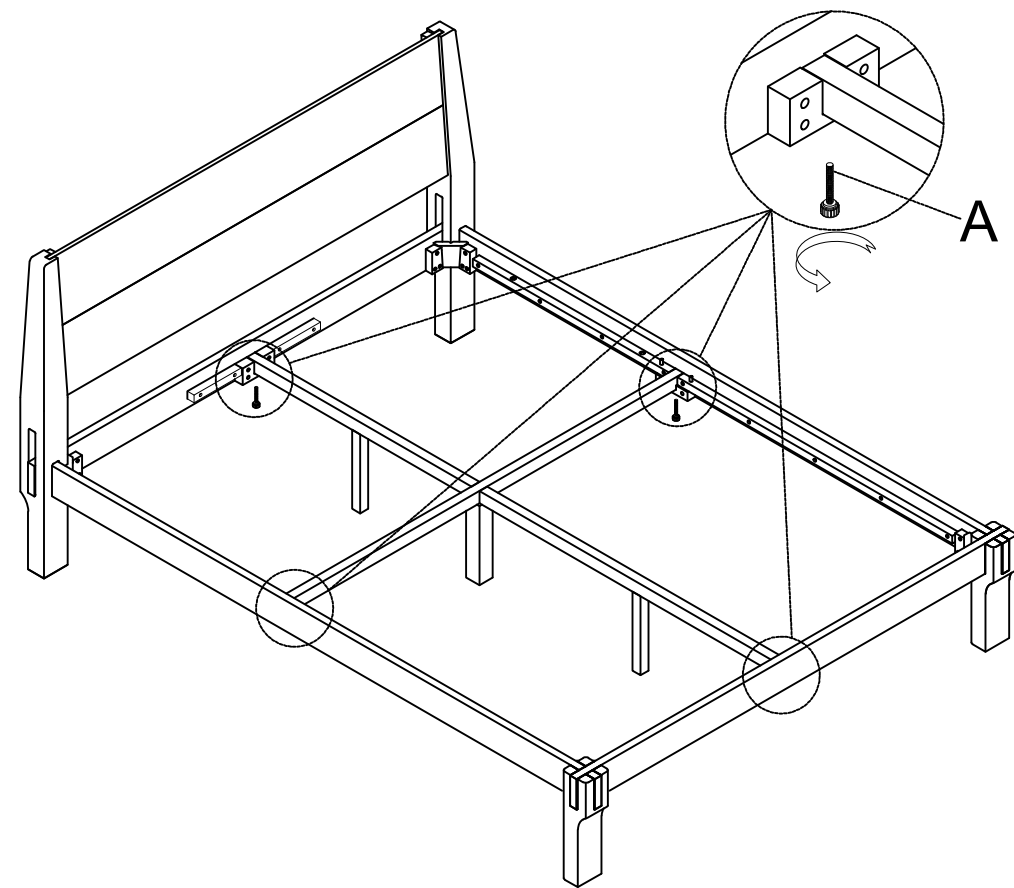


STEP 12

Adjust the leveling feet of the Support Legs so that the Center Support Bar is even and flush with the bed frame.

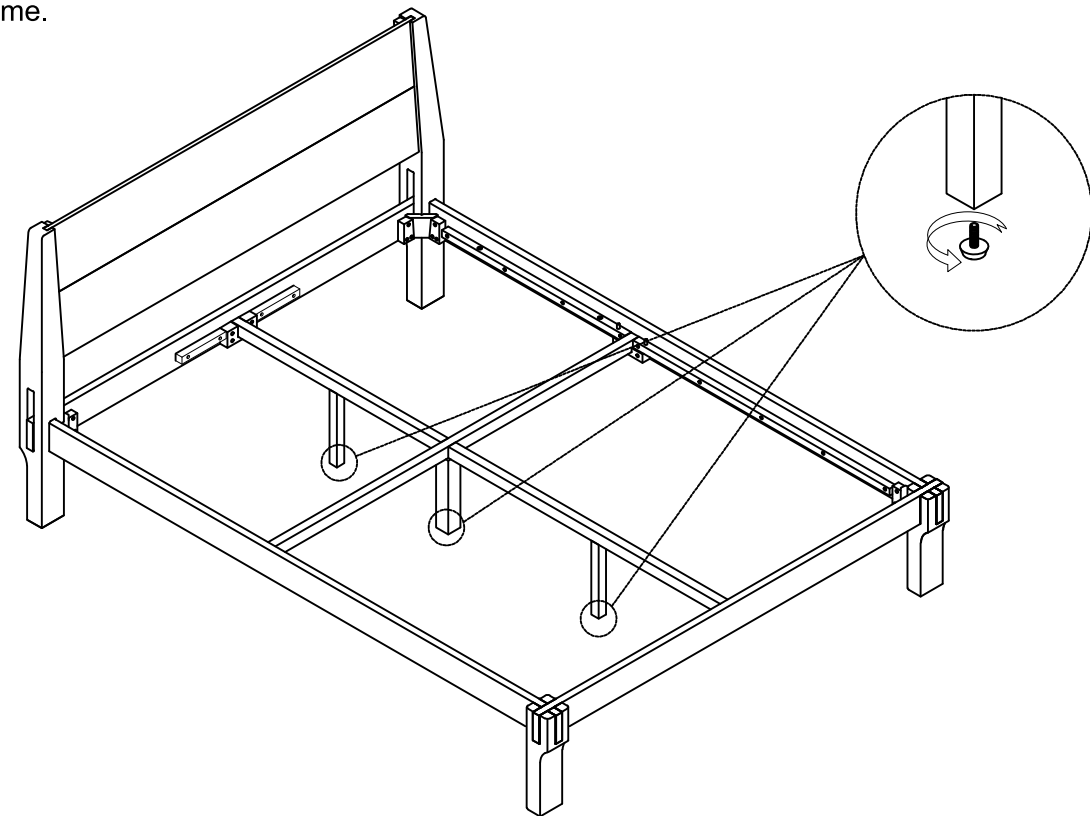


STEP 13

A. Lay the slats at the head of the bed. You'll notice a slat stop on the frame and a matching hole on the first slat - simply align the hole with the stop and press it into place.
B. Repeat the same process at the foot of the bed to secure the slats on center.

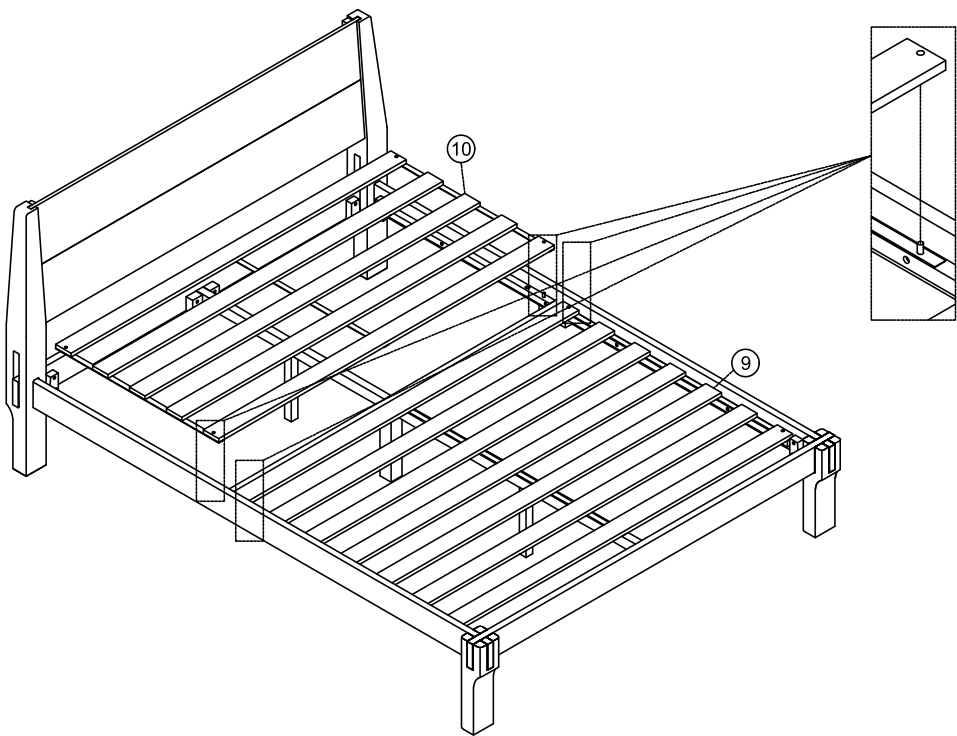

STEP 14

Press the wooden wedges firmly into place by hand, or use a rubber mallet for a snug fit.

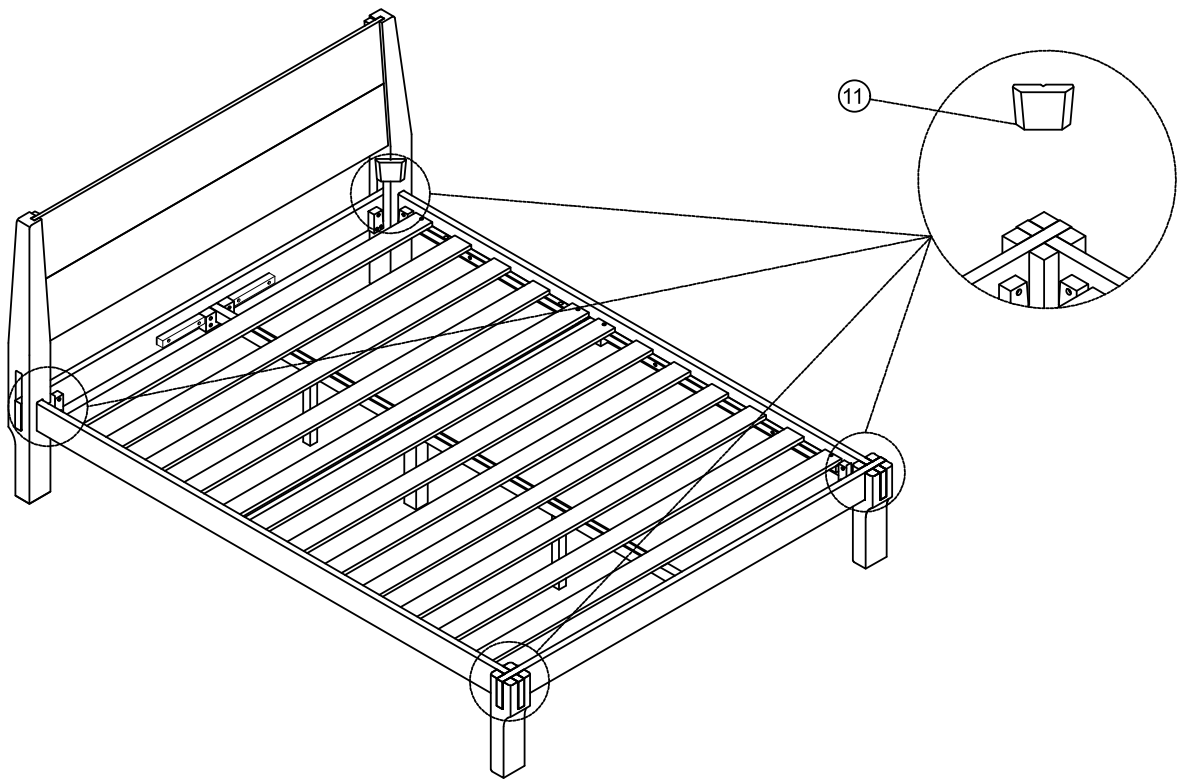

STEP 15

Assembly is complete!

Before use, double-check that all hand screws in Steps 5, 7, and 9 are fully tightened.

