


User Manual

Bed Frame with Headboard

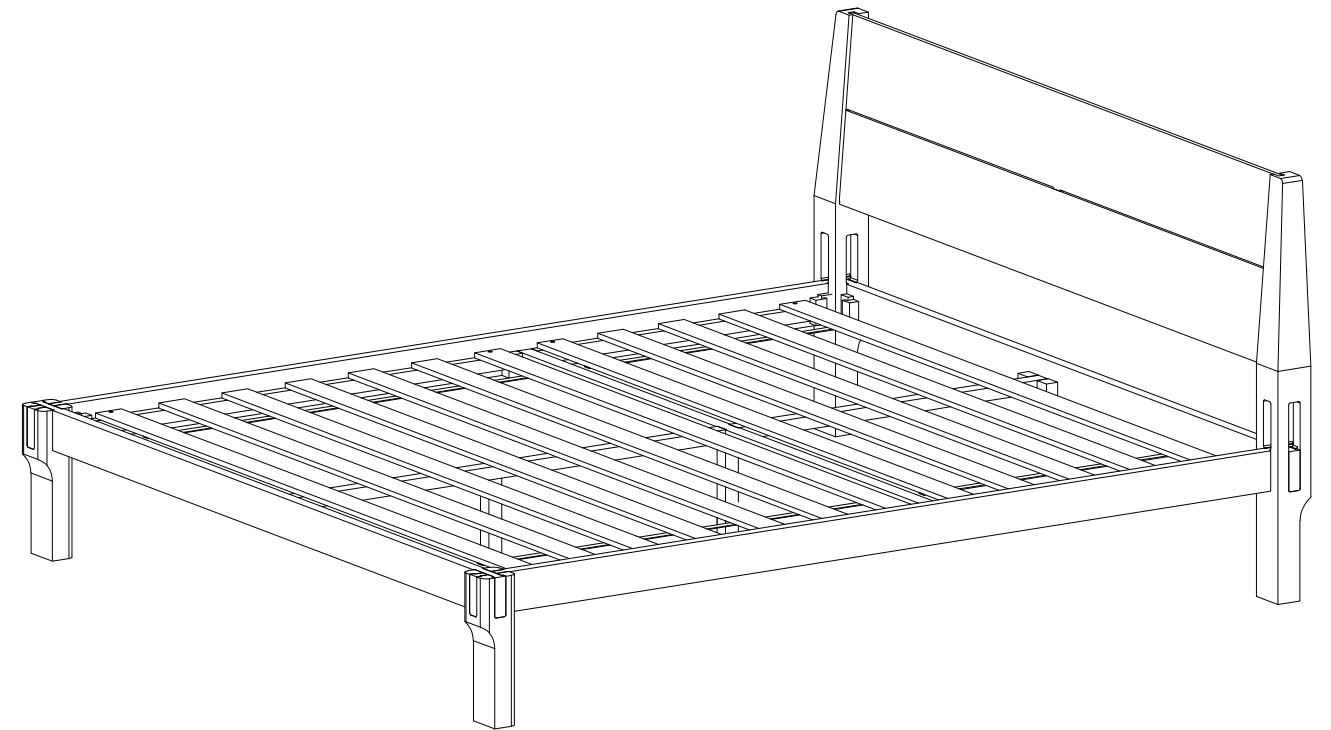


Bed Frame(Full/Queen)

INSTRUCTIONS – KEEP FOR FUTURE REFERENCE


ACCESSORIES LIST

Be sure to carefully inspect all accessory materials.


- ① HAND TURING BOLD

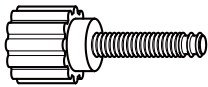

2PCS
- ② METAL PLATE

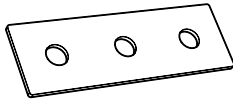

1PC
- ③ HAND TURING BOLD

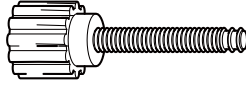


8 PCS
- ④ SPRING WASHER




4PCS

- If you are installing the adjustable half bed, there is no need to install parts labeled "H" and "G" (highlighted in a darker color)
- For instructions on installing the adjustable half bed, please refer to the corresponding installation manual.

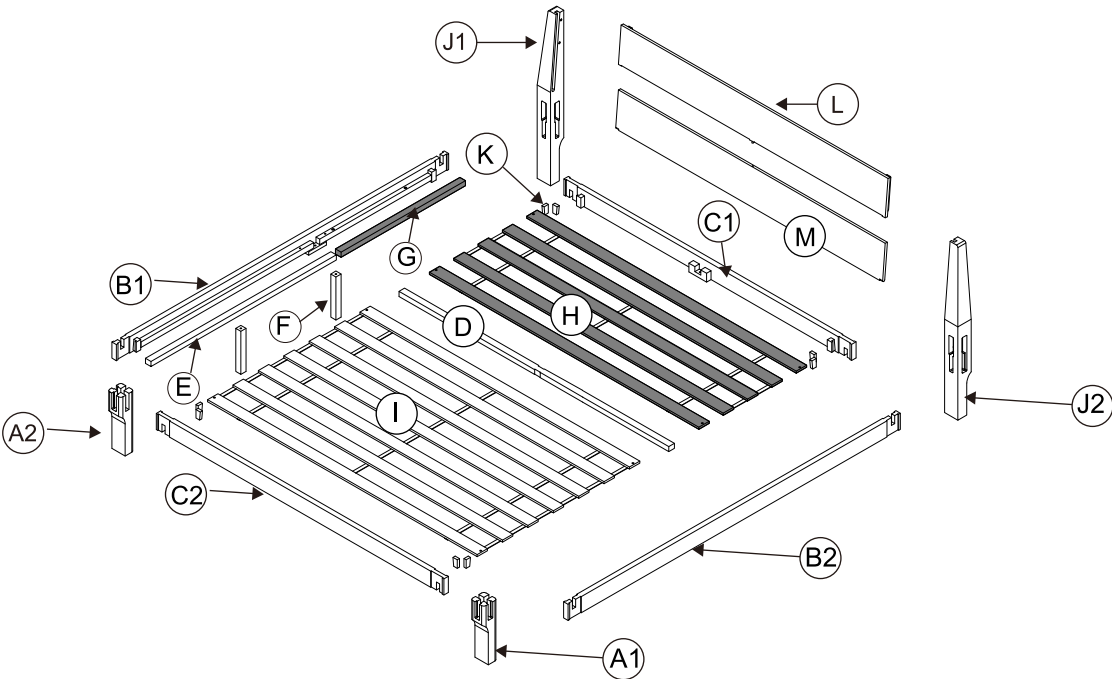


EXPLODED

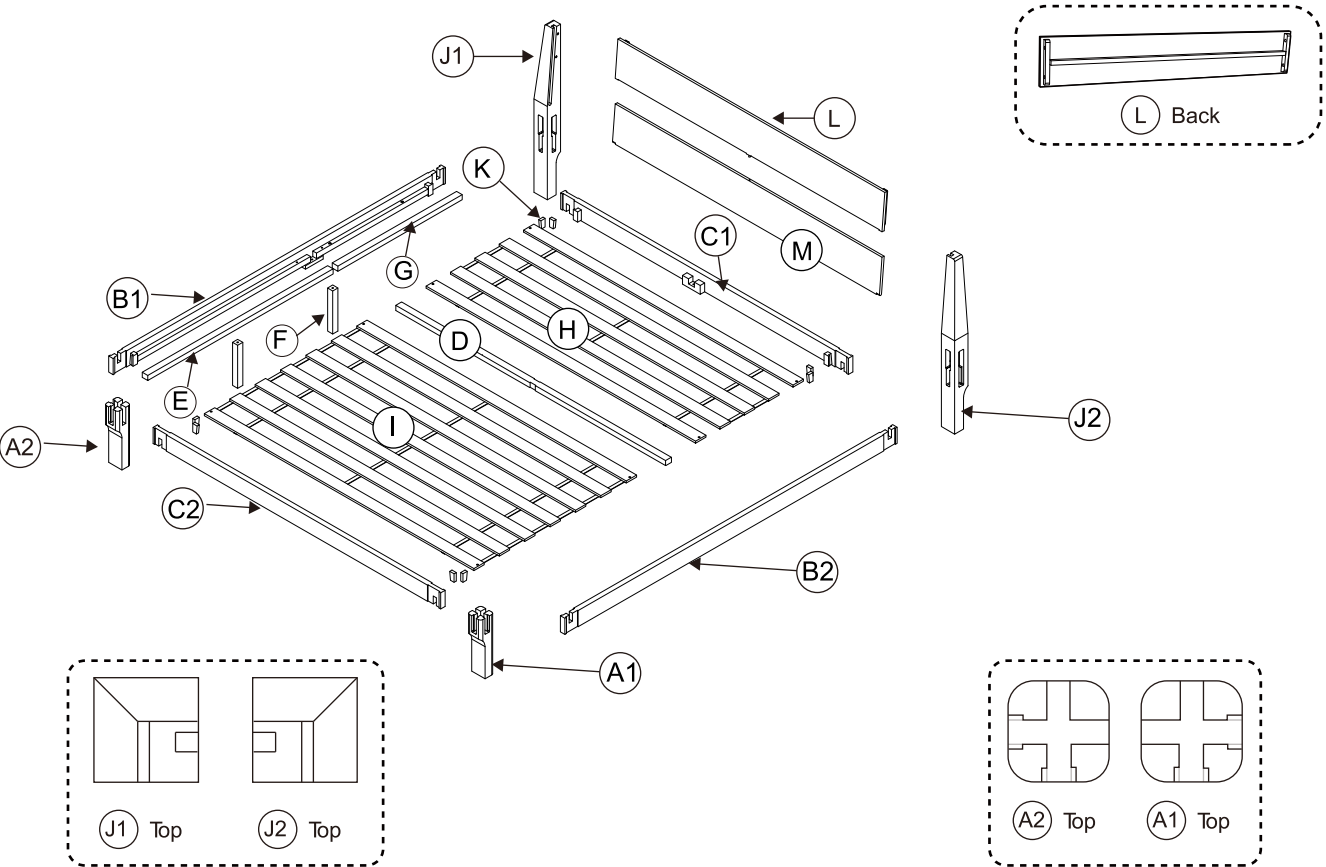


Step 1

- Place the bed frame components where you want to position the bed.
- During assembly, lay the bed frame parts on a paper mat or carpet to prevent the hard floor from damaging the frame's finish.

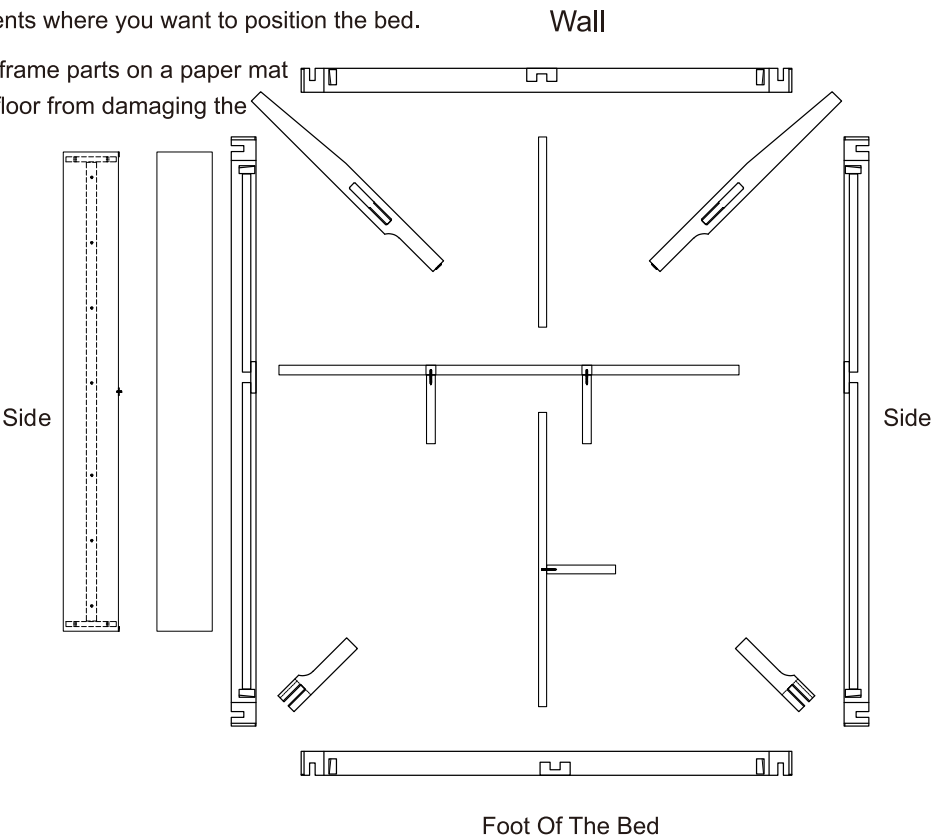


Step 2

- The installation of parts "J1" and "B2" follows the steps shown in the diagram below.
- Please secure the parts in place before proceeding to the next installation step.

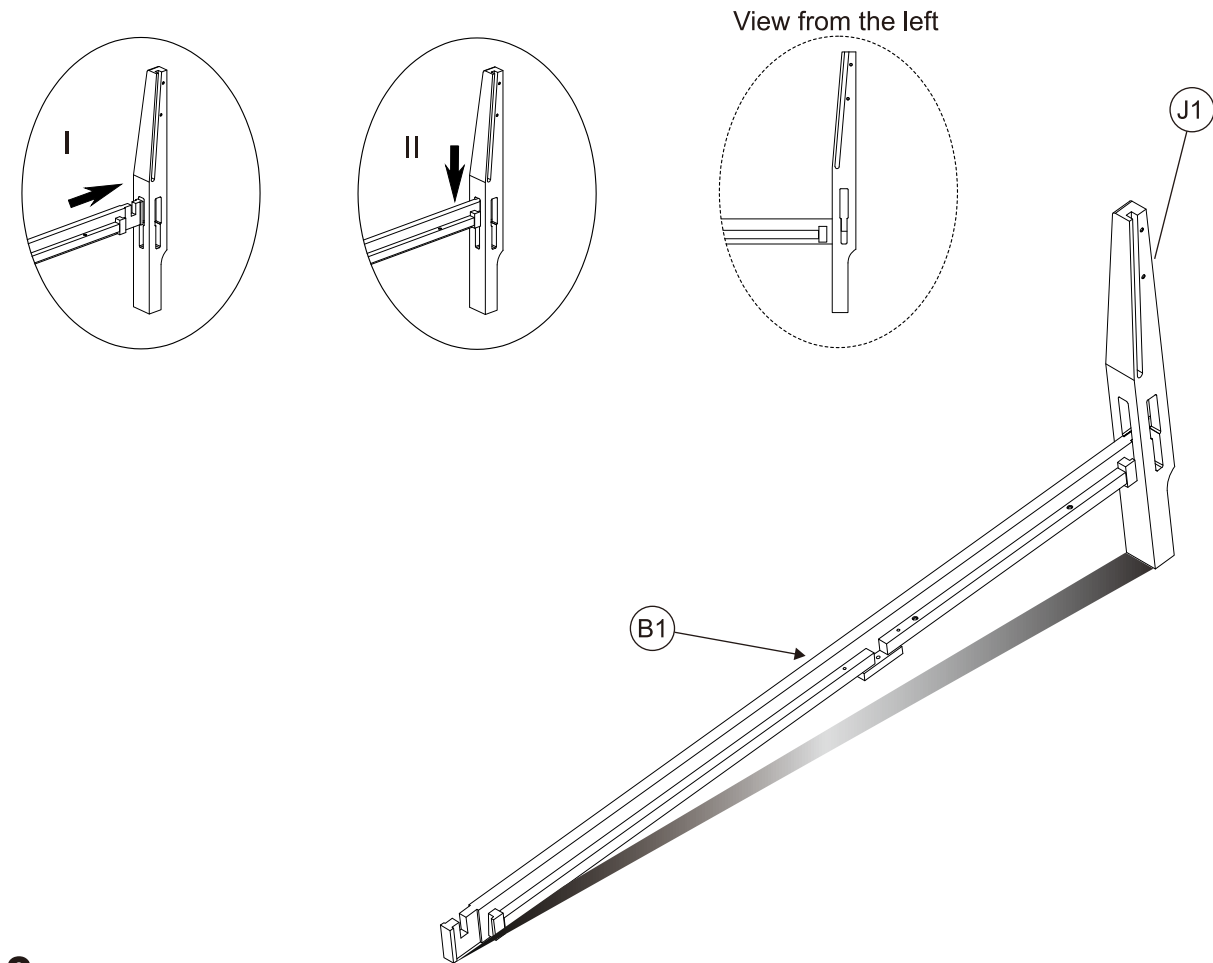


Step 3

- The installation of parts "A2" and "B2" follows the steps shown in the diagram below.
- Please secure the parts in place before proceeding to the next installation step.

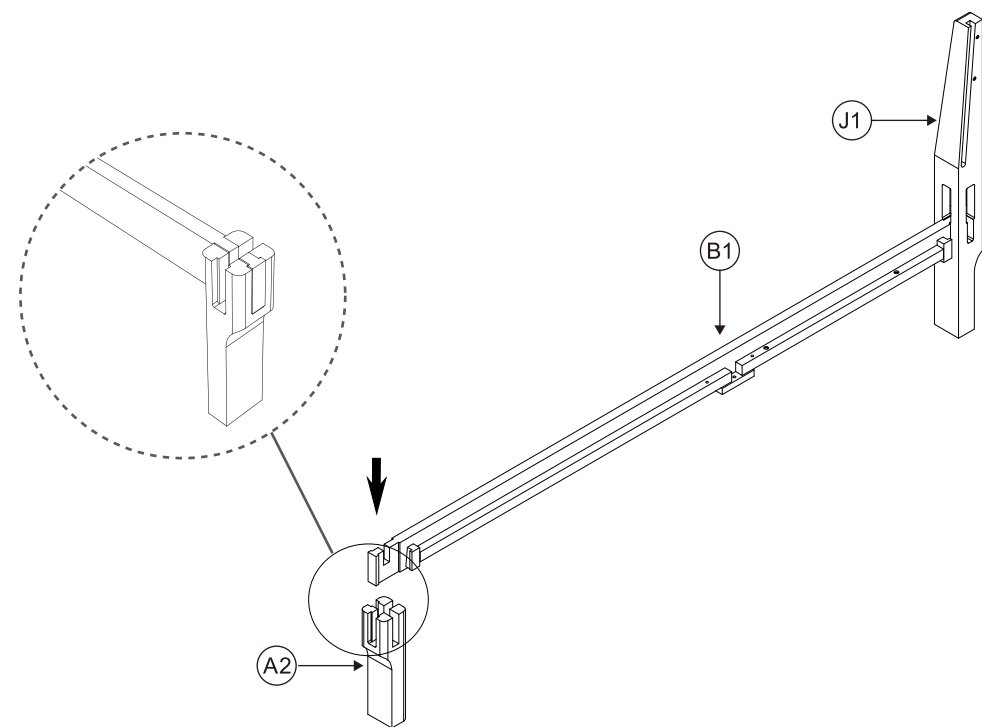


Step 4

- Please secure the parts in place before proceeding to the next installation step.

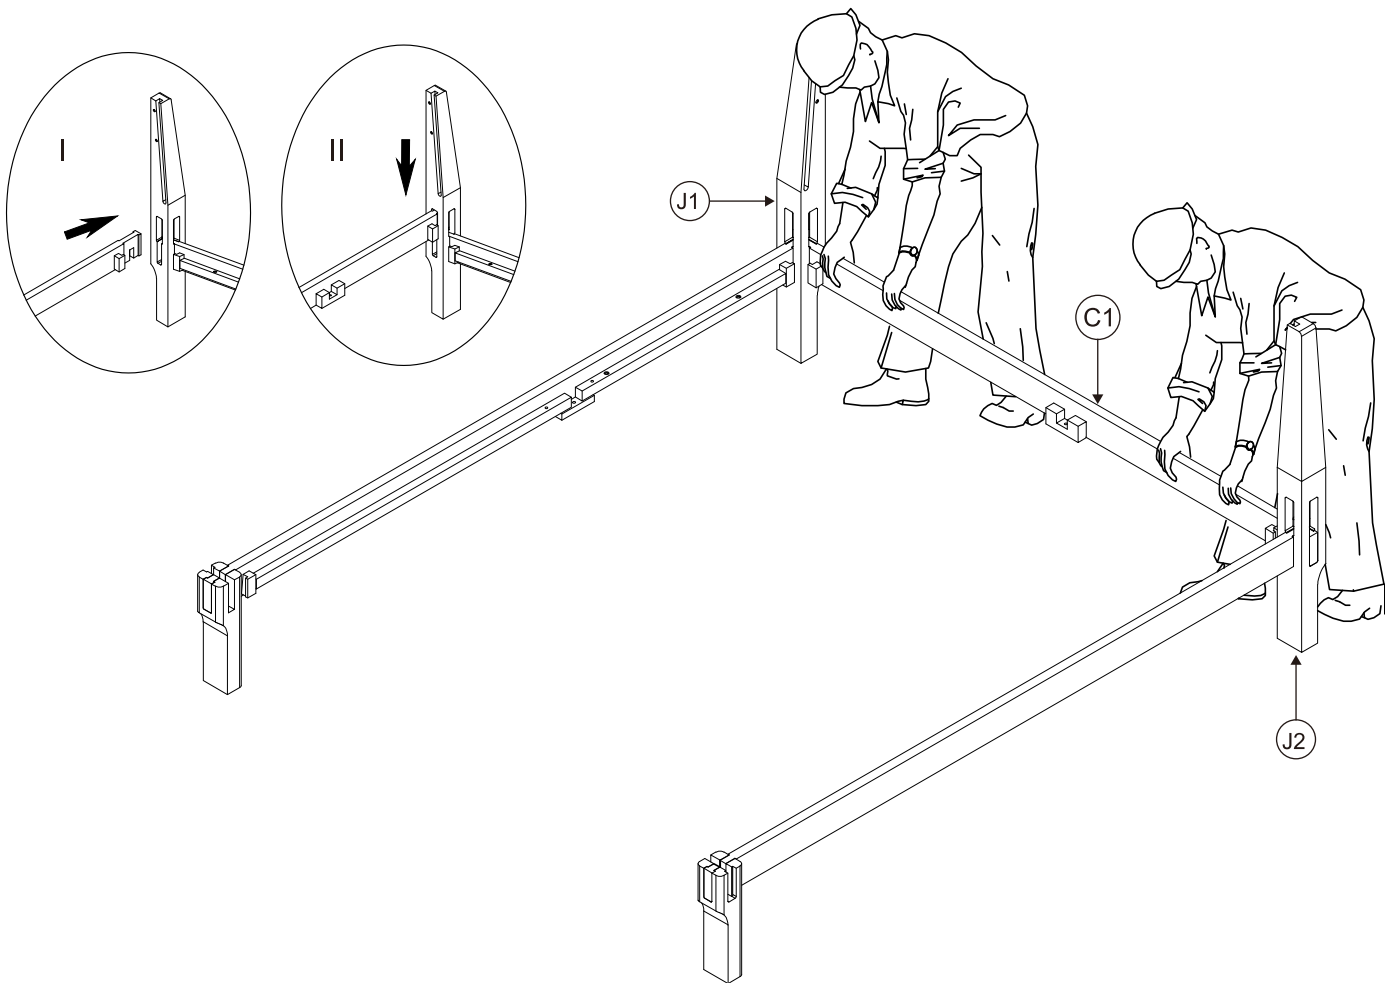


Step 5

- Please secure the parts in place before proceeding to the next installation step.

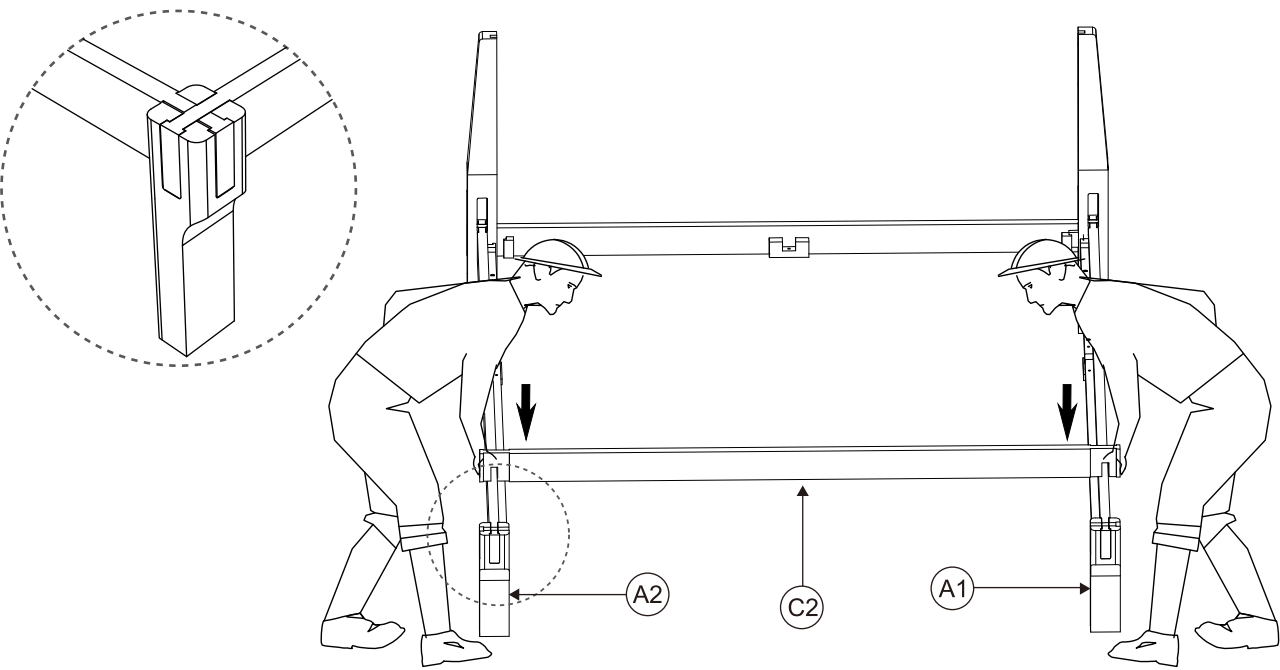


Step 6

- Please secure the parts in place before proceeding to the next installation step.

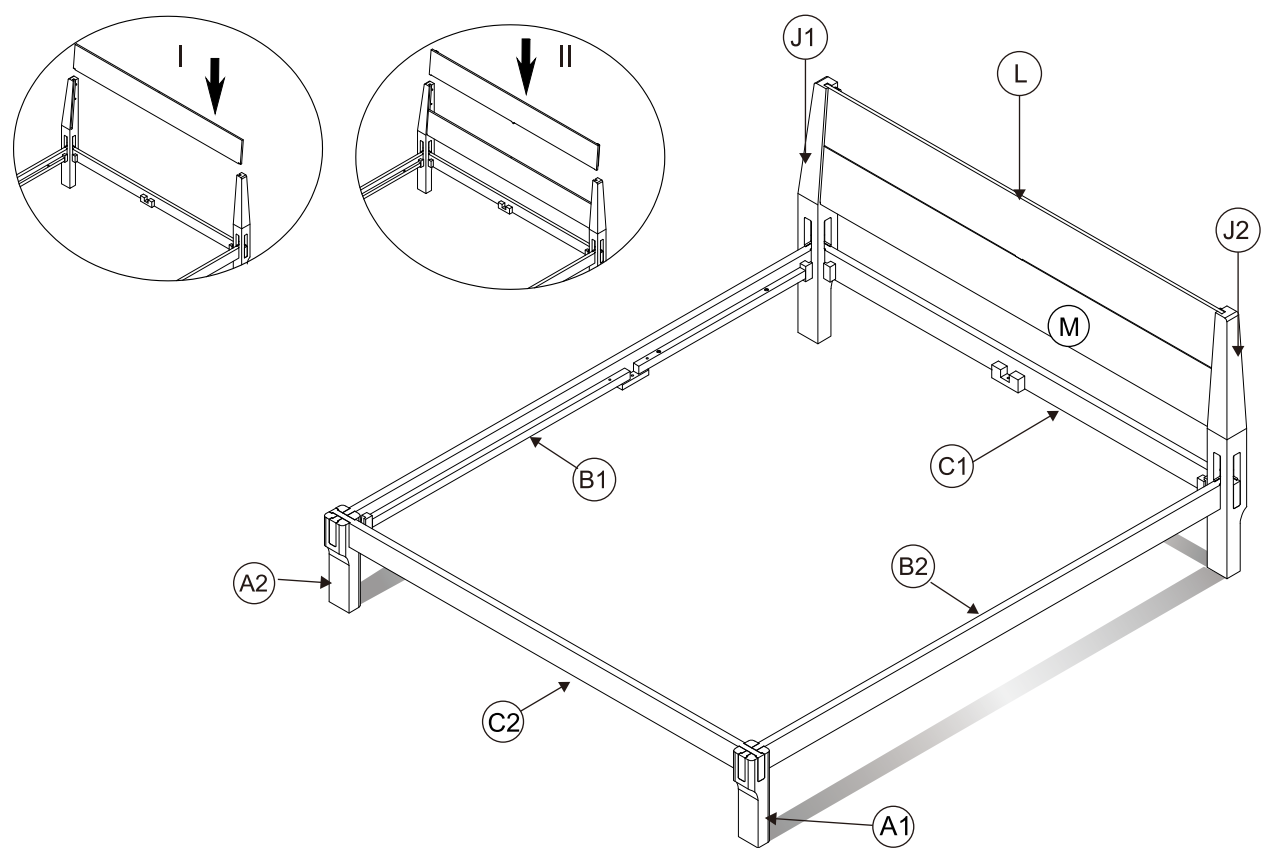


Step 7

- Please secure the parts in place before proceeding to the next installation step.

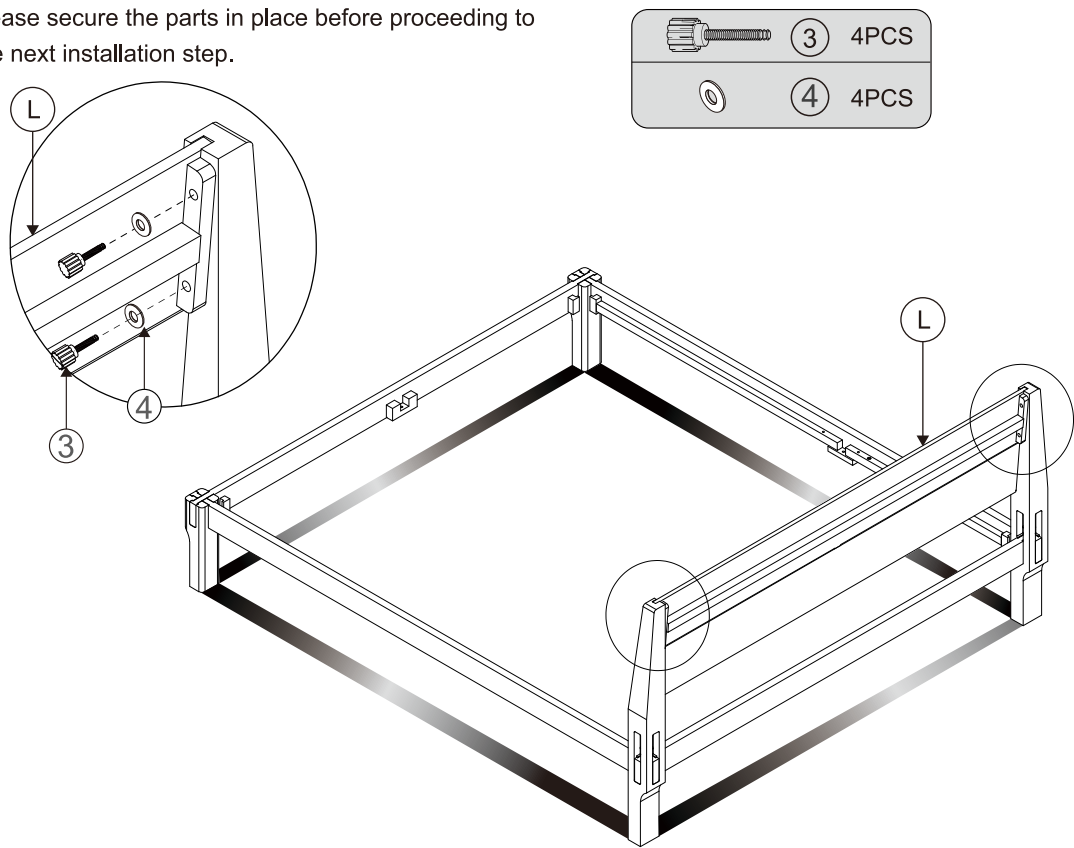


Step 8

- Align the wooden slats with the bed frame, wedge and install them.

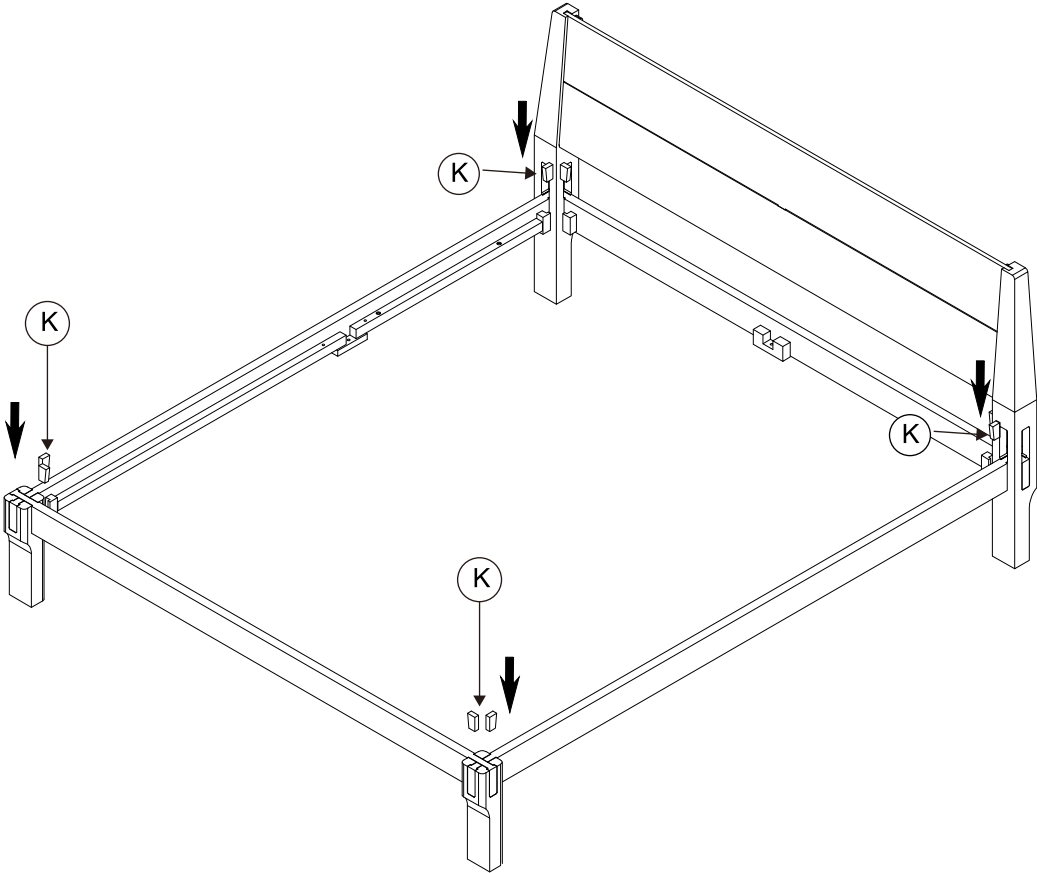

Step 9


- Please secure the parts in place before proceeding to the next installation step.

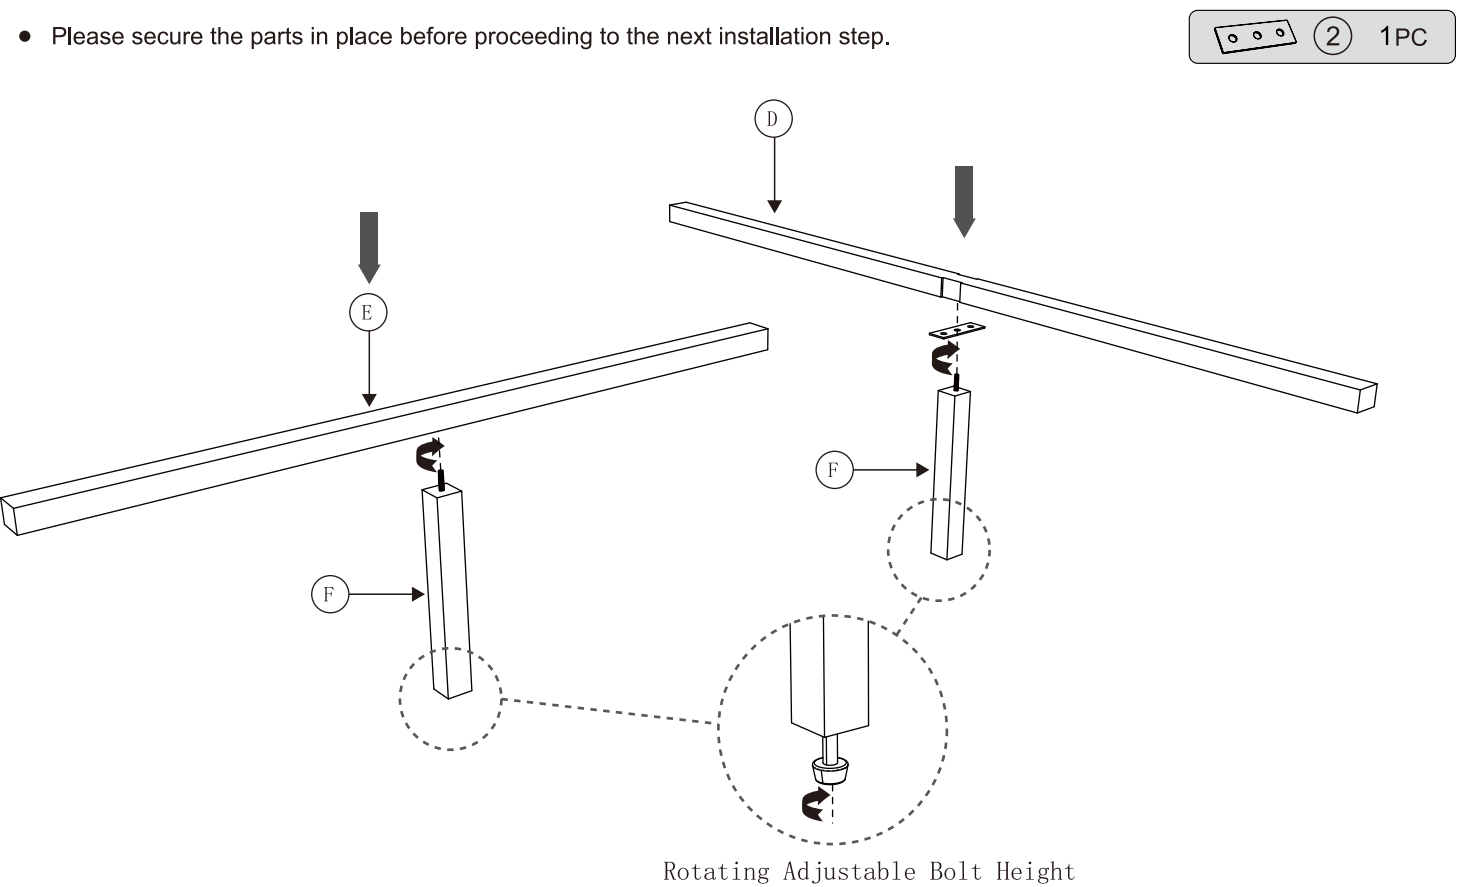

Step 10

- Please secure the parts in place before proceeding to the next installation step.

	① 2 PCS
	③ 4 PCS

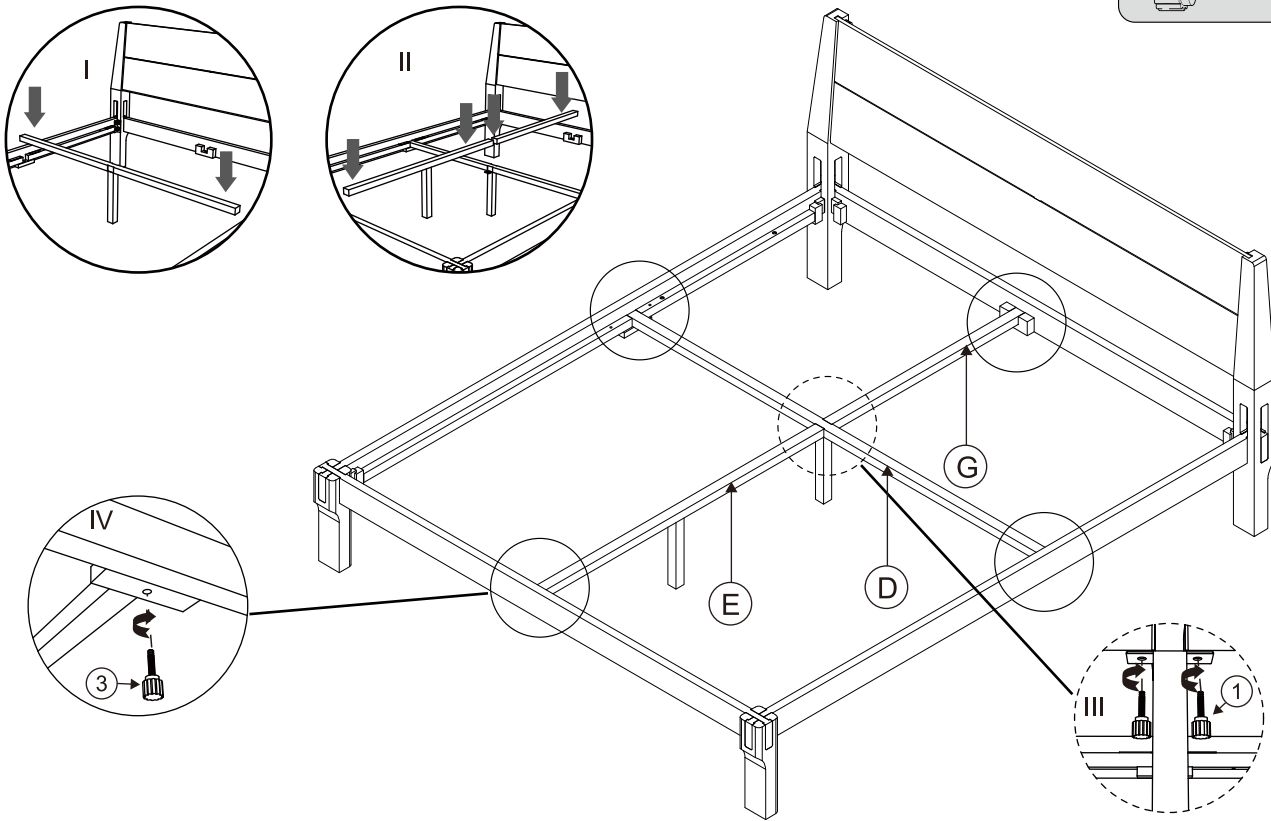

Step 11

- Align the slats with the velcro on the frame, wood dowel and install them.

