

New Working New Living

Website: flexispot.co.uk


Tel: +44 20 3929 3835 UK

Mail: info@flexispot.co.uk

FLEXISPOT LIMITED, G-PARK UNIT1, MOULTON PARK, SUMMERHOUSE RD, NN3 6WD NORTHAMPTON, UK




Warranty

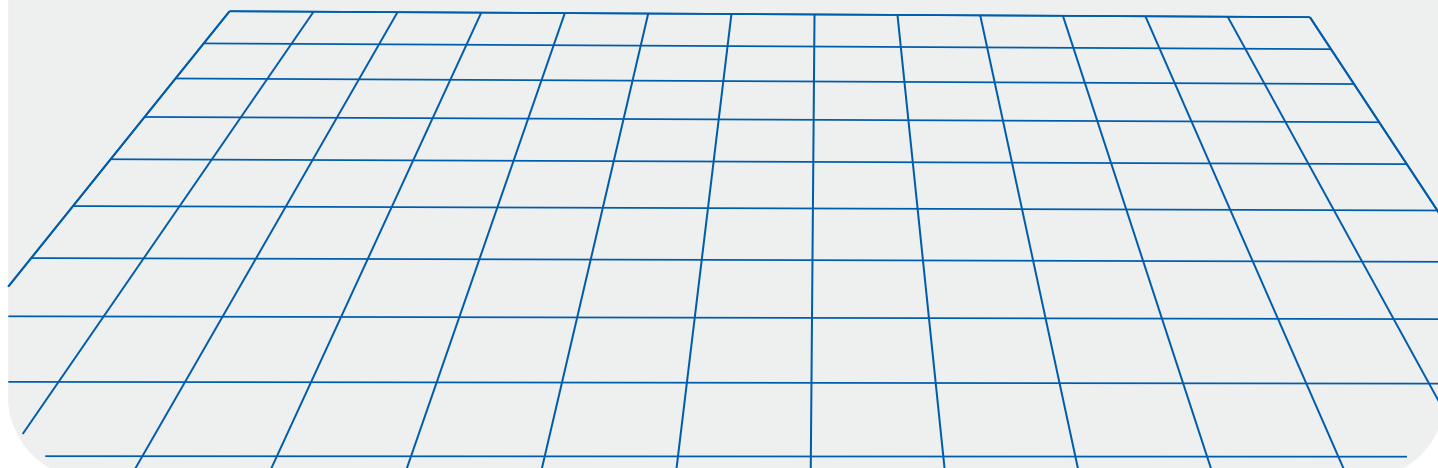

FlexiSpot

User Manual

Item No. E7-Plus-UK

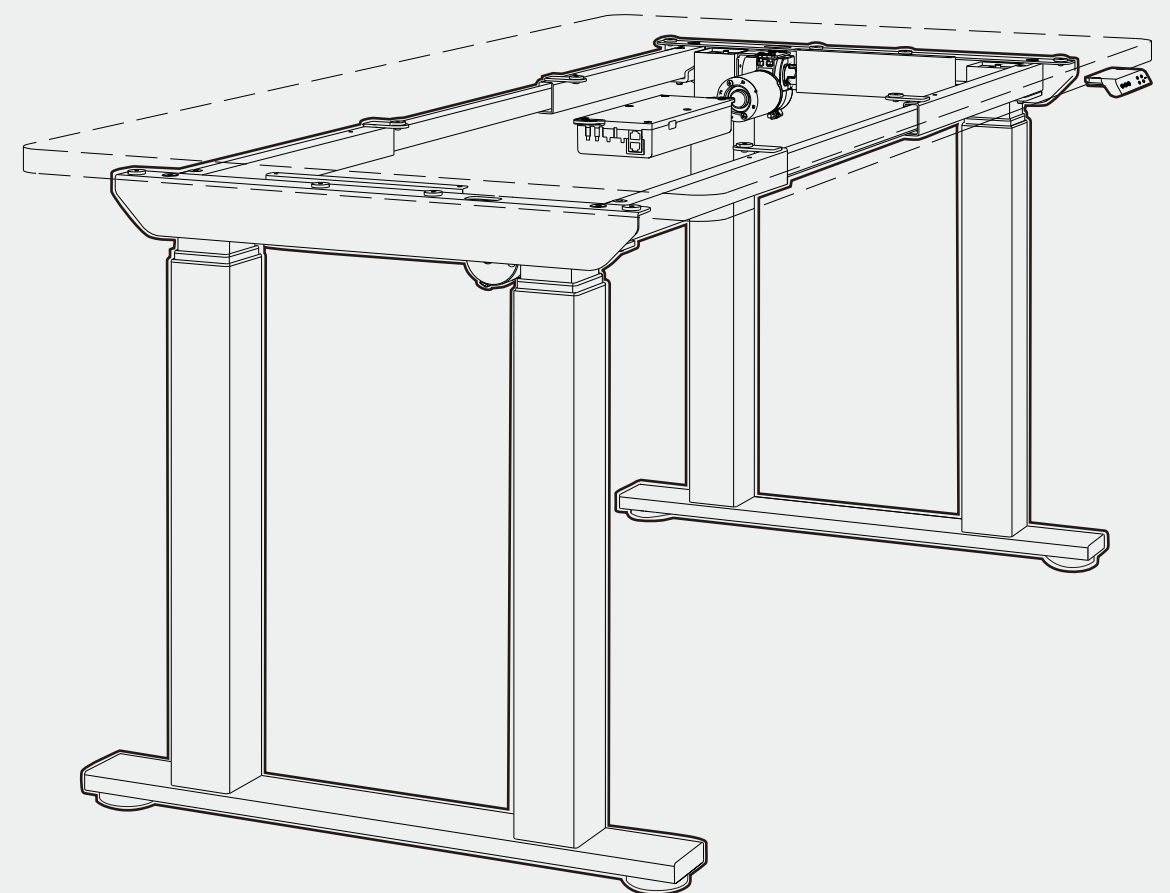

Specifications


Max. Weight Capacity	200 KG
Max. Speed	25 mm/s
Adjustable Height Range	660-1310 mm
Wide Expand	990-1590 mm
Applicable Desktop Size	Length: 1200-2000mm
	Width: 700-900mm
	Thickness: Above 18mm

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of standby mode of electrical and electronic household equipment. The technical information of standby mode:


Mode	Power consumption (Watts)	The period (Minutes)
Standby	0.4W	1min

The website URL of the English version electronic instruction manual:
<https://flexispot.co.uk/4-leg-standing-desk-e7q-lite>


Pre-installation Guide



Install on carpet to prevent scratches

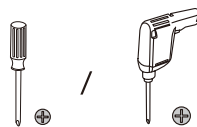



Phillips screwdriver or drill required (not provided)

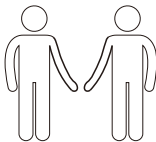

Get a friend for help


Accessory Package

Figures shown are for reference only. Please contact customer service if there are any accessories or tools missing.

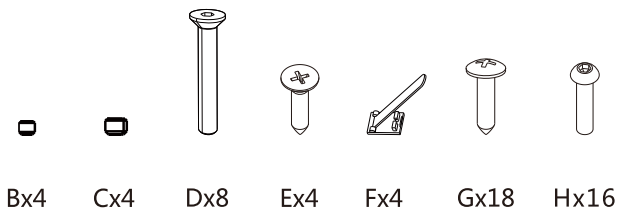
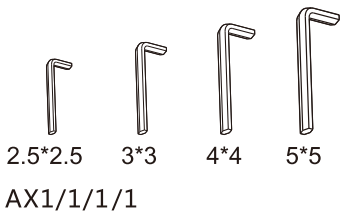


Parts Included



No.	Part	No.	Part
①	Column 1 x 2	⑧	Support plate x 2
②	Column 2 (with motor) x 2	⑨	Transmission rod x 2
③	Feet x 2	⑩	Control box x 1
④	Left crossbeam x 2	⑪	Keypad x 1
⑤	Right crossbeam x 2	⑫	Connecting cable x 1
⑥	Connecting rod x 2	⑬	Power cable x 1
⑦	Baffle x 2	⑭	Keypad screw x 2
		⑮	Shock absorber shims x 2

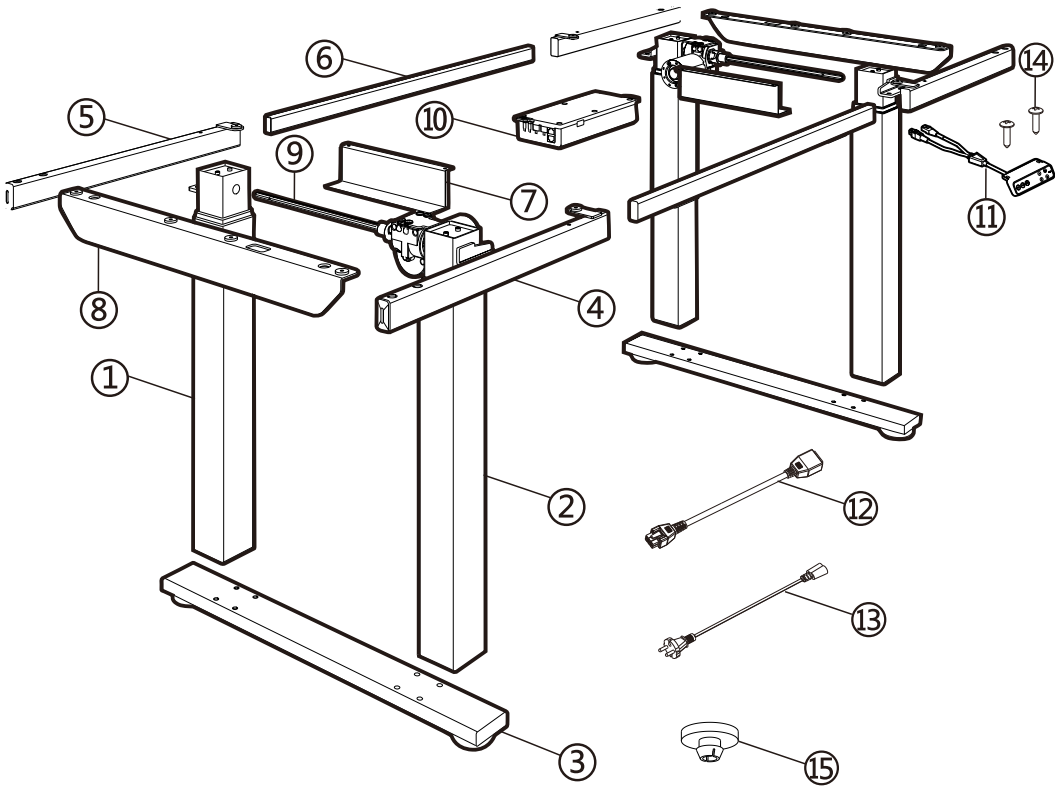



01 Connect the left crossbeam to the column 2 x2

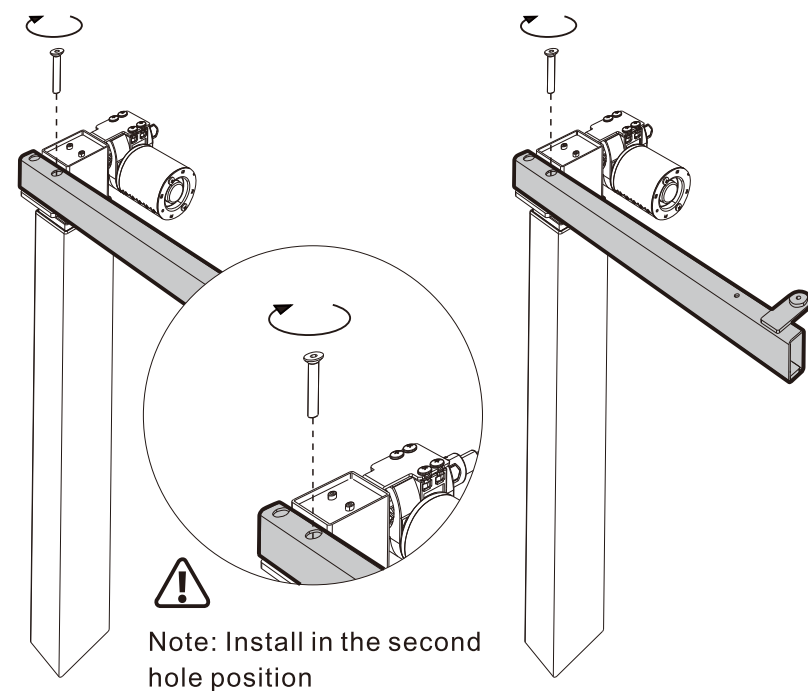


02 Connect the right crossbeam to the column 1 x2

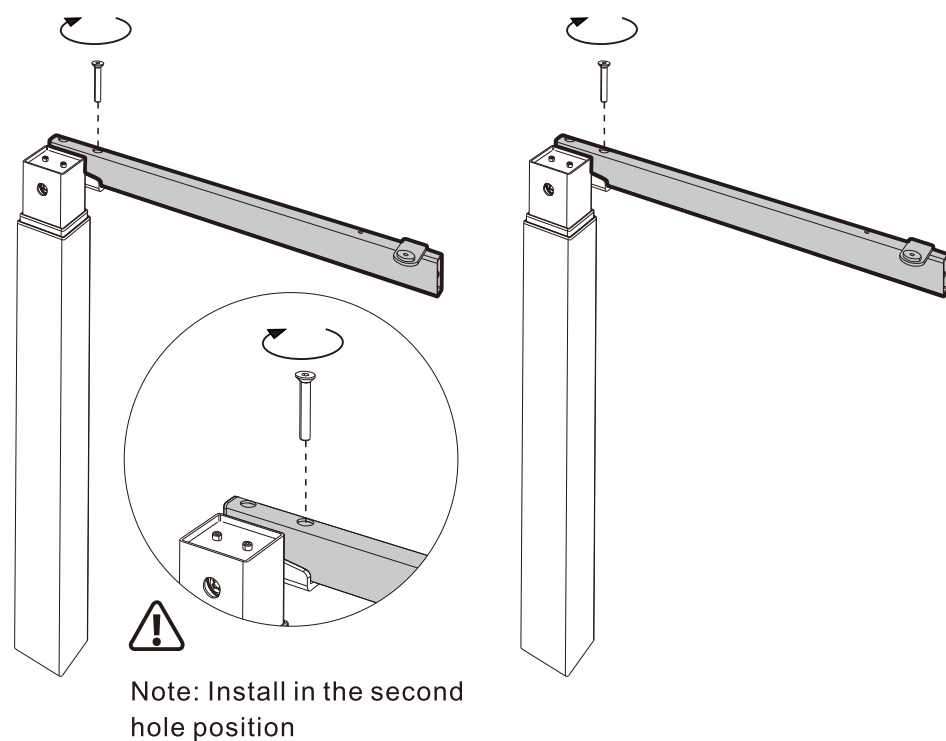


03 Install the transmission rod

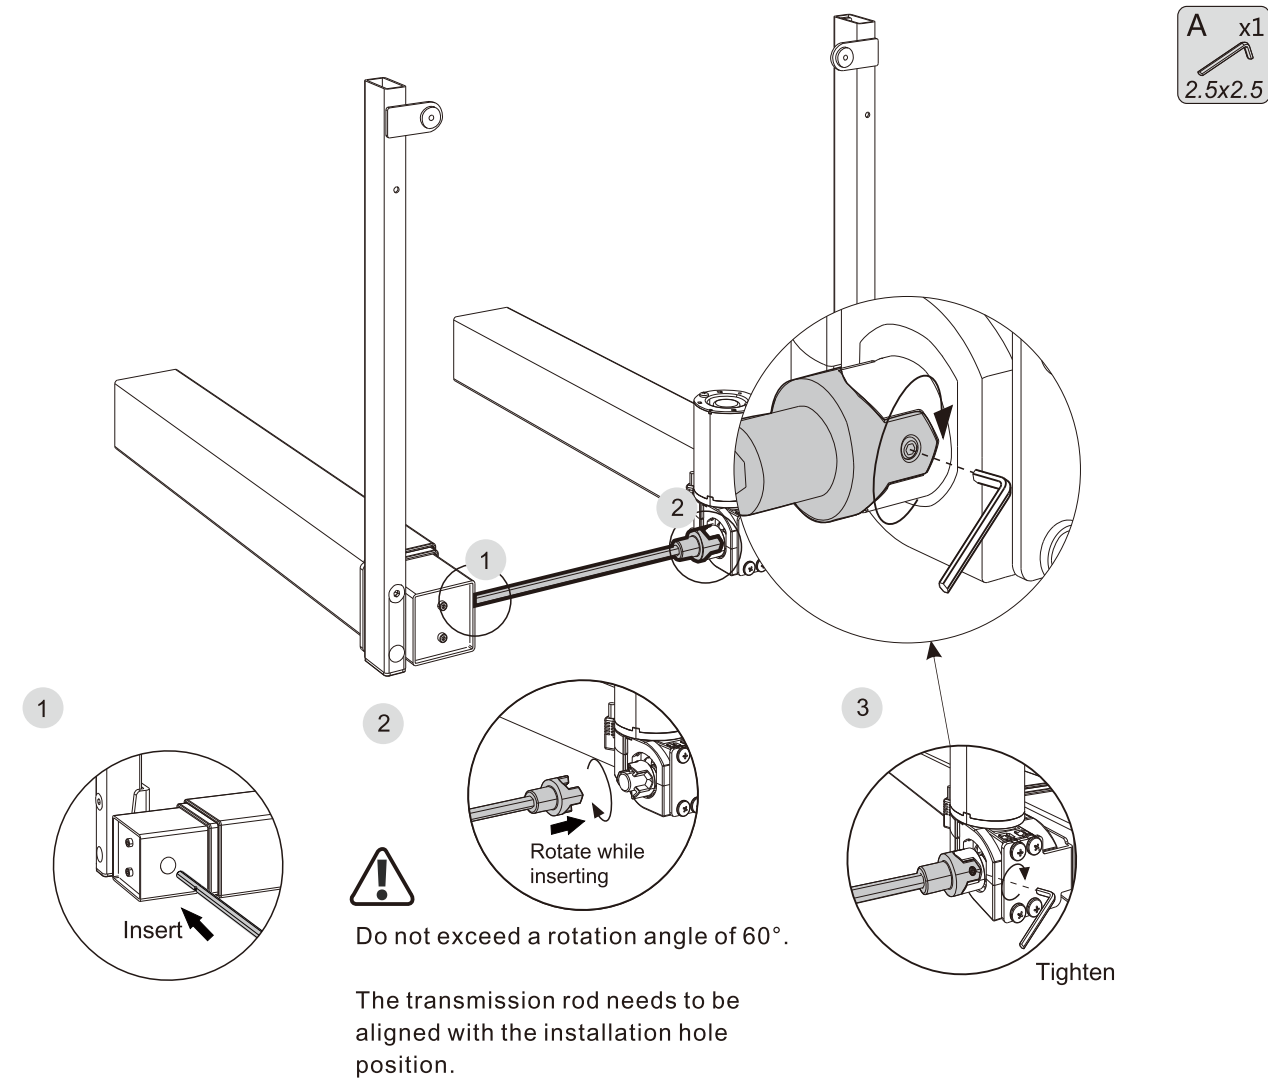


04 Install the support plate

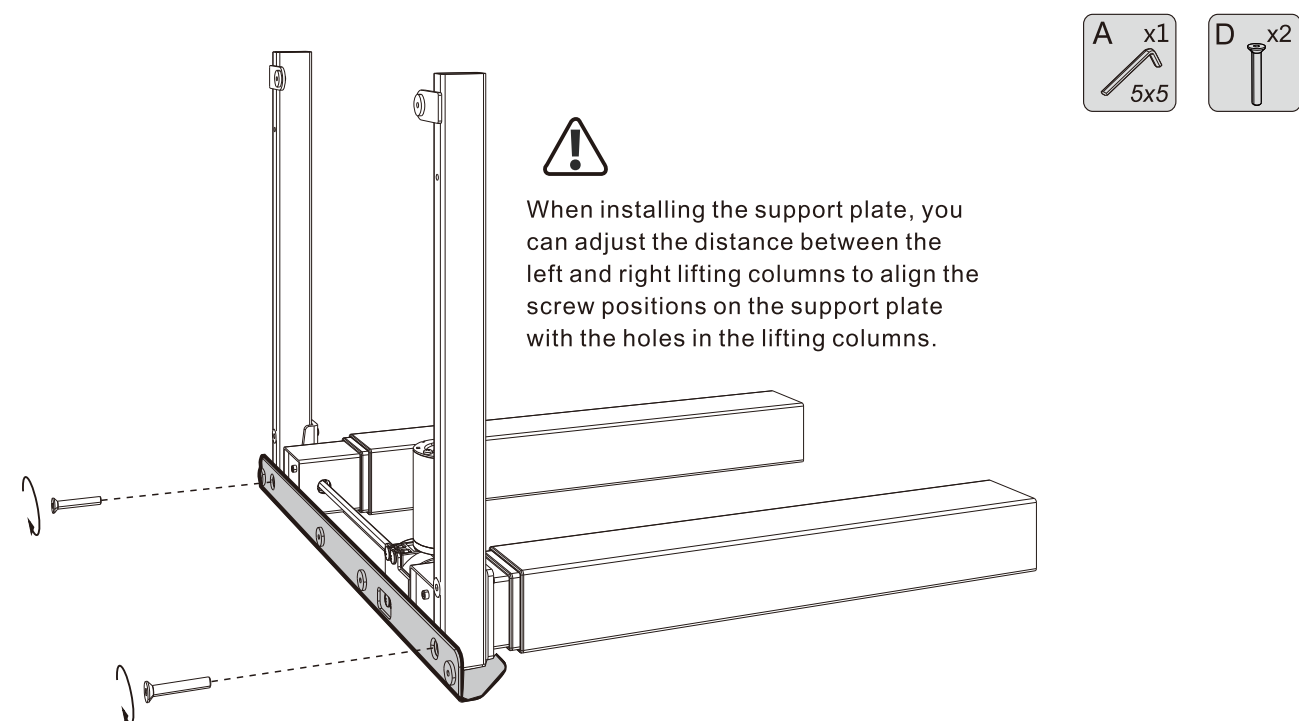


05 Install desk feet

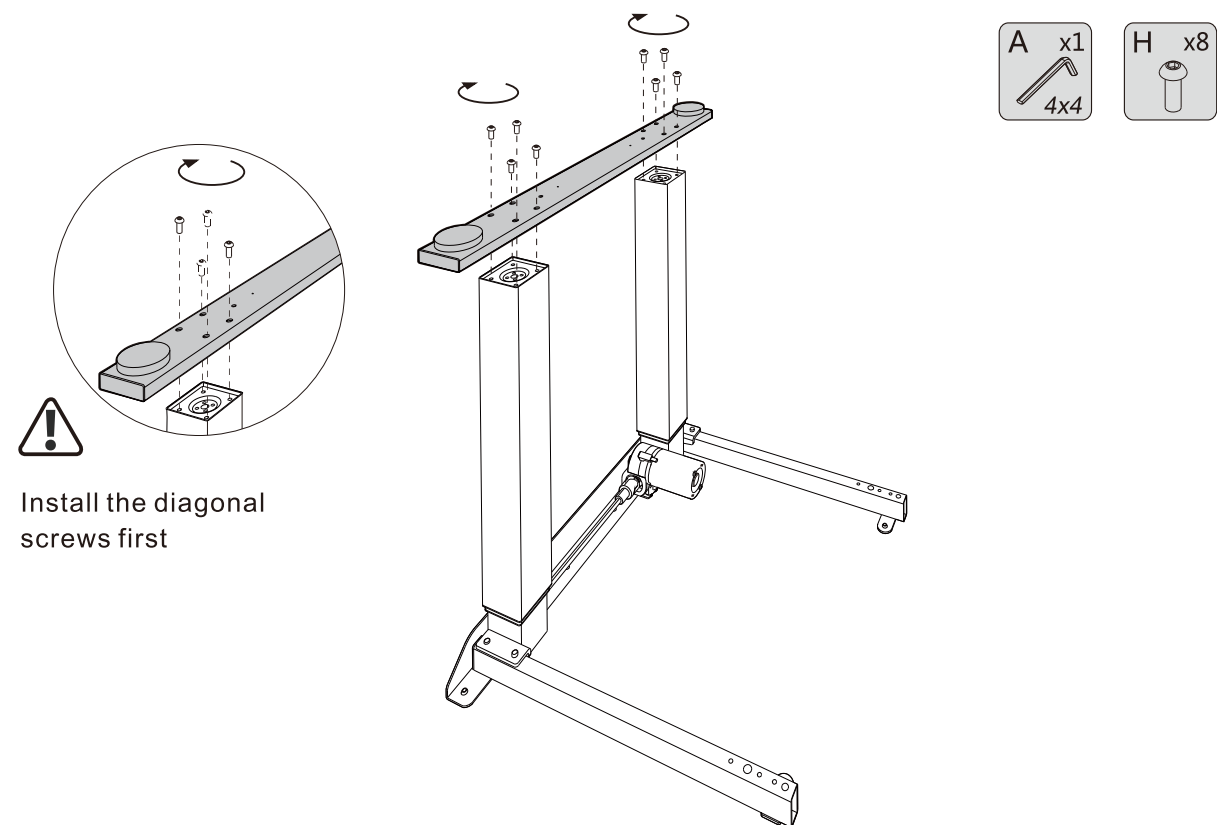


06 Install the right desk frame

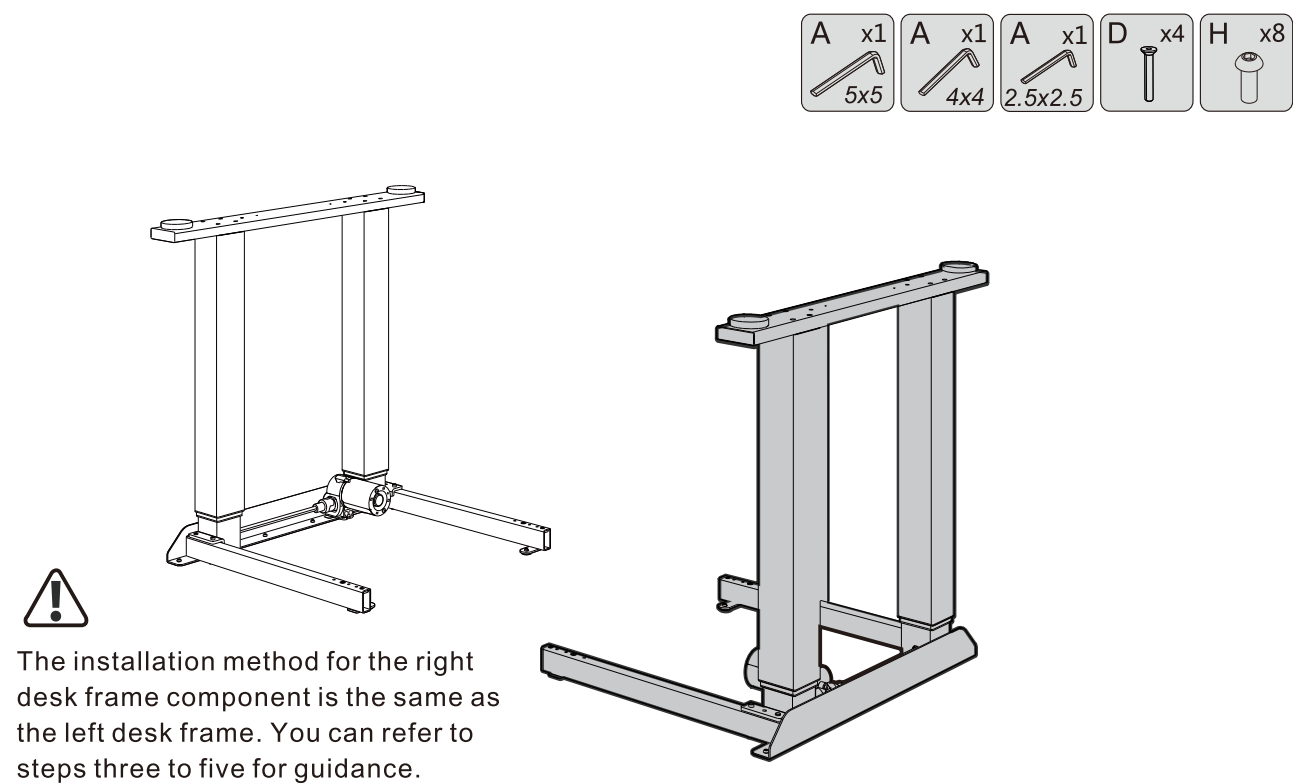


07 Install and secure the connecting rod

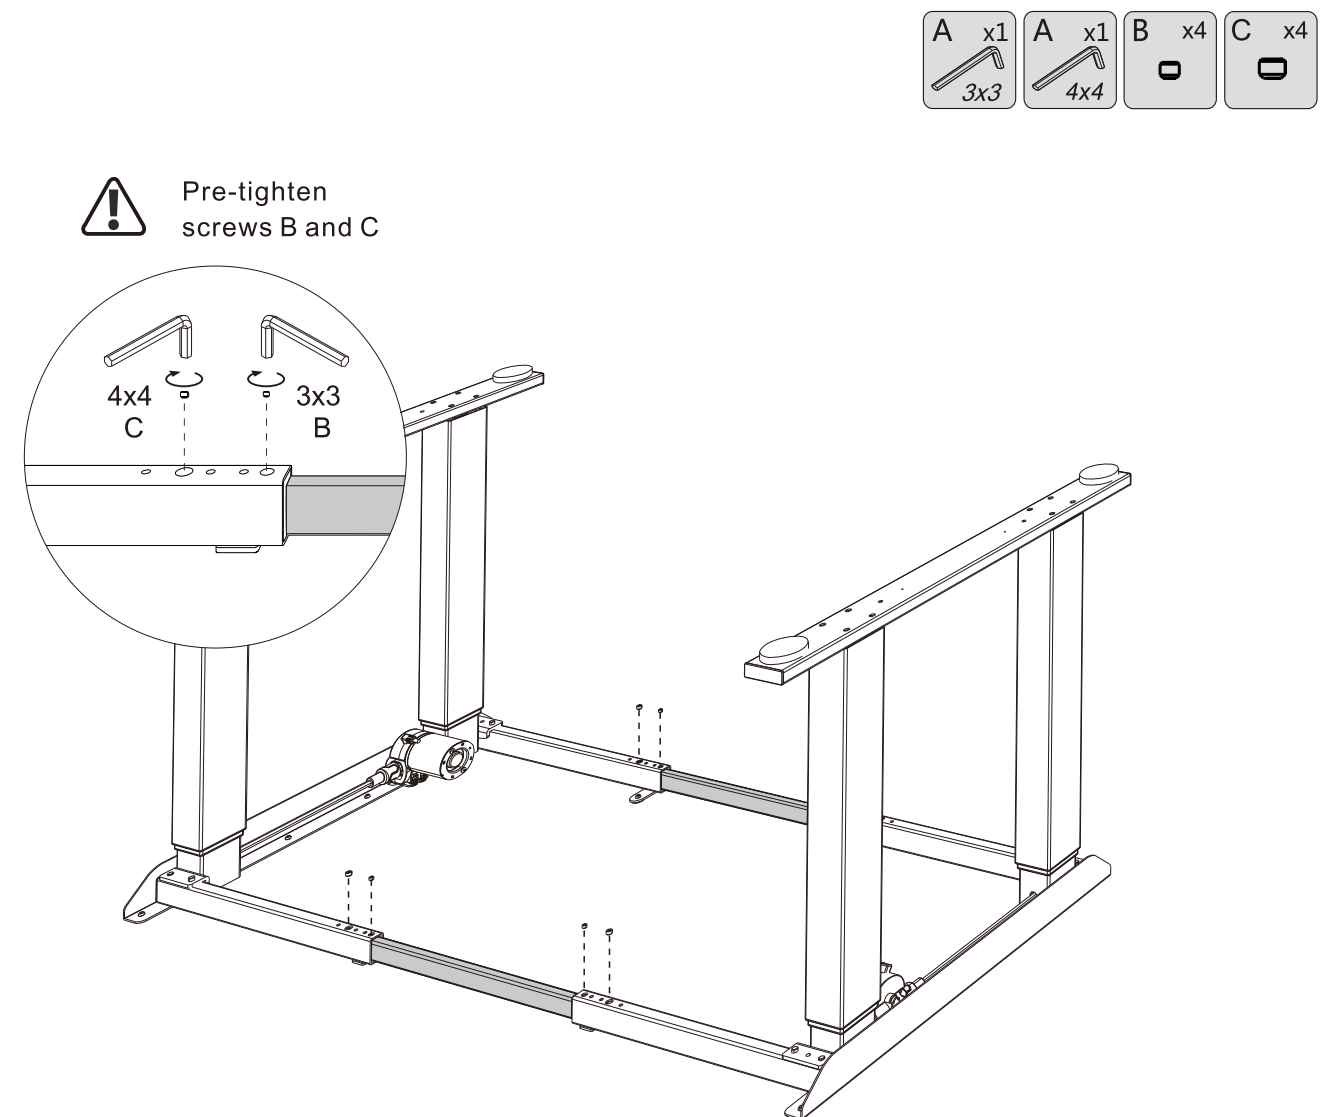


1

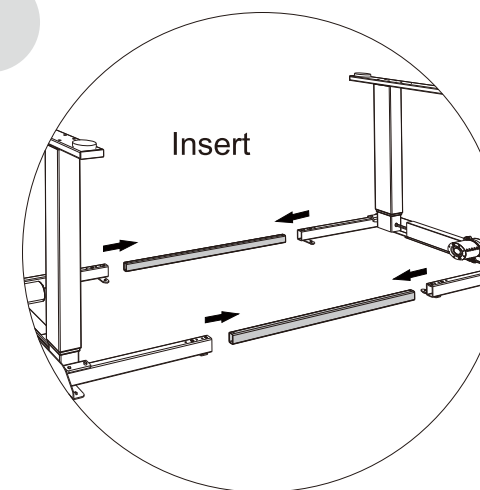


2

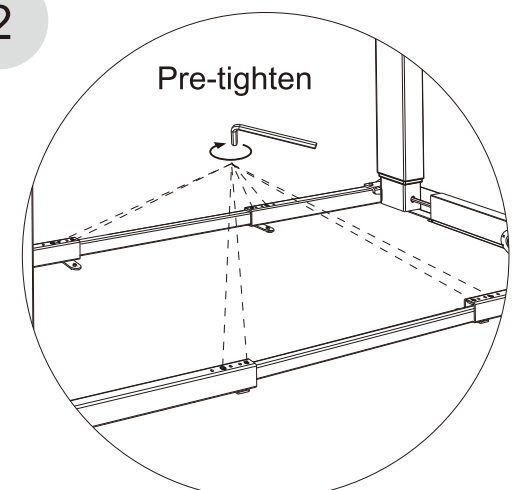

08 Install the desktop and tighten the crossbeam



The installation sequence for the screws is ●-■-▲

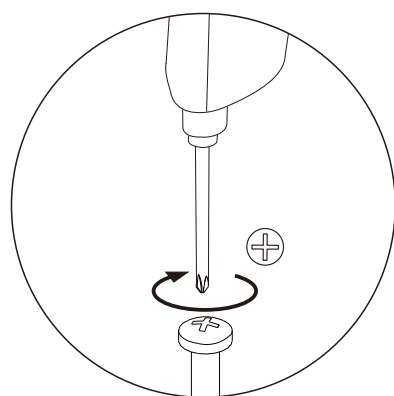


For self-provided desktops, it is important to ensure sufficient strength. The reference value is 200kg, but the actual weight capacity may vary depending on the specific material of the desktop.





You can adjust the length of the supporting beam according to the actual usage scenario.

Once you have determined the desired position of the desktop, tighten screws B and C.

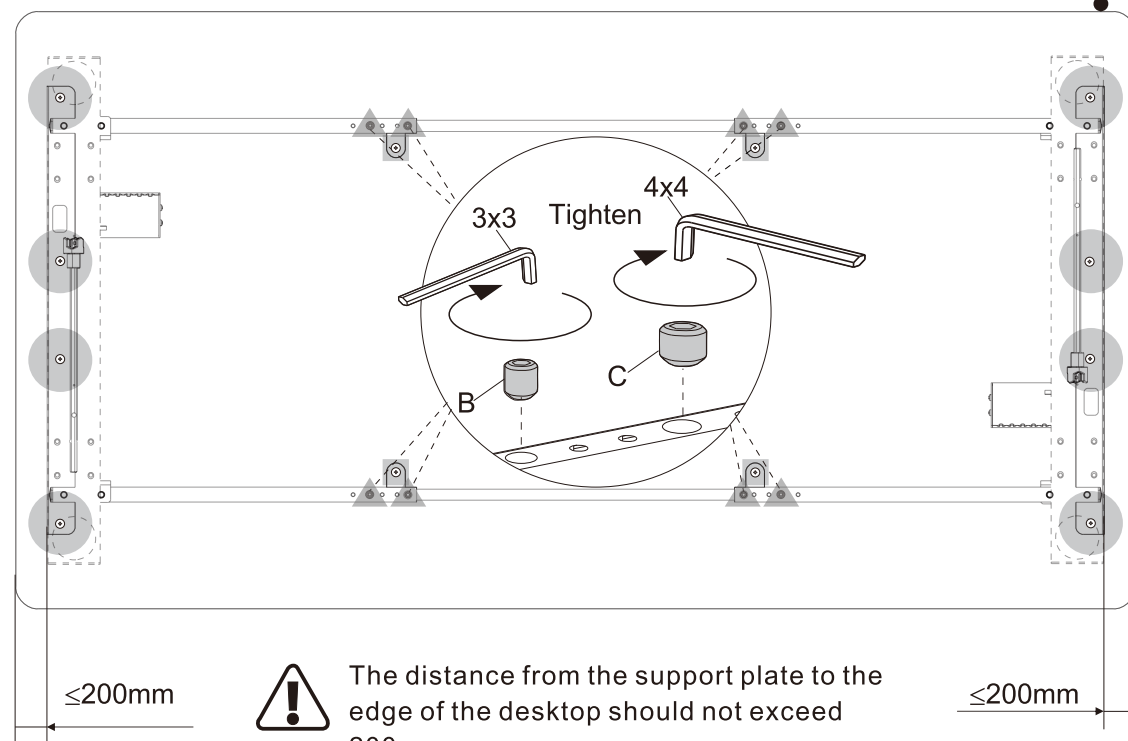


The distance from the support plate to the edge of the desktop should not exceed 200mm.

09 Install the baffle

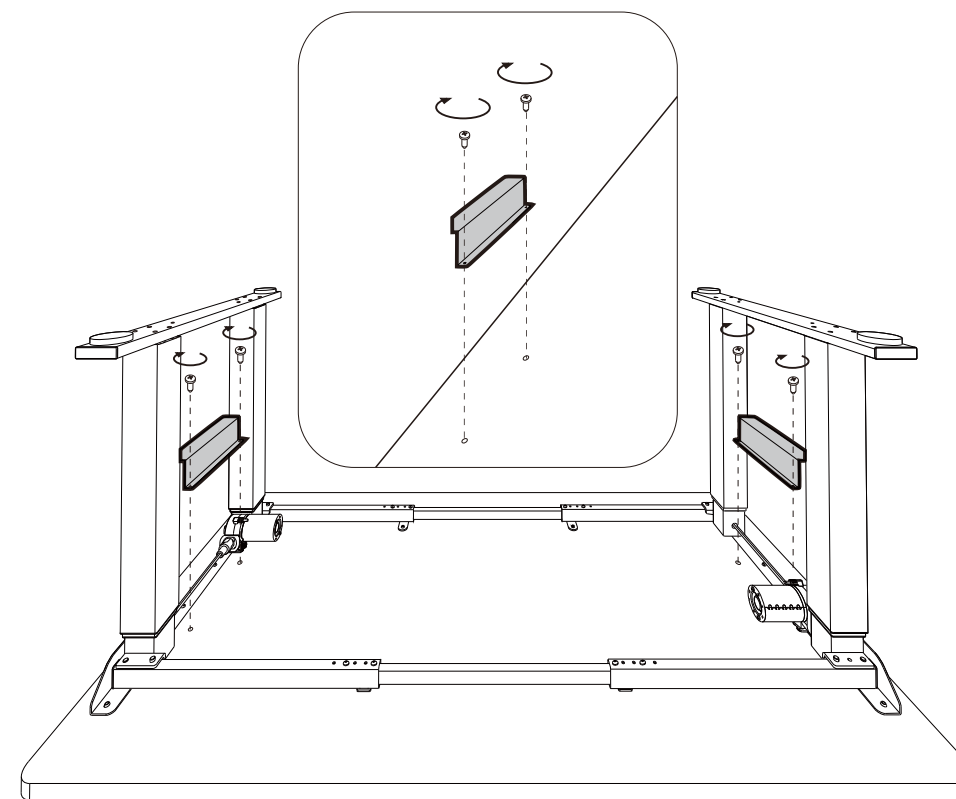


10 Install the keypad



The keypad screws are in a separate self-locking bag.

Option two

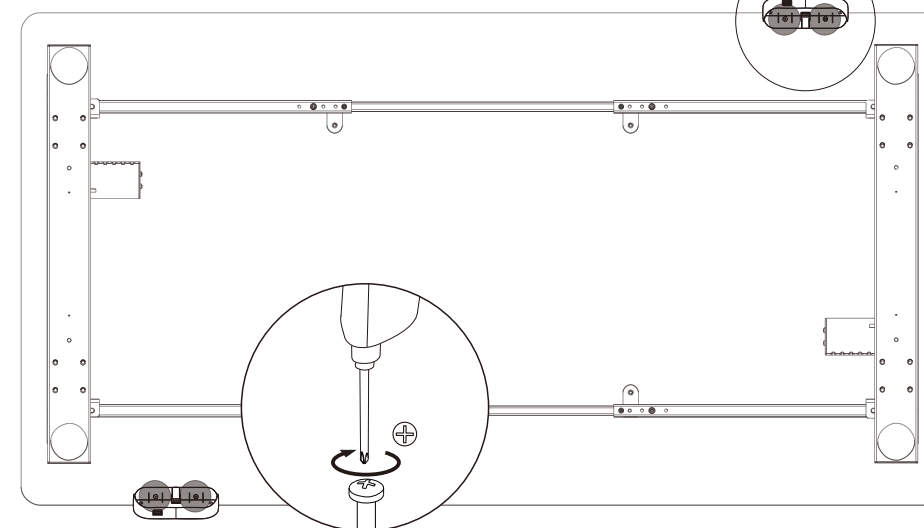




You can choose either option one or option two for the installation position.

11 Install the control box






Please assemble the control box in the position indicated by the dotted lines in the diagram.


Please determine the position of the control box based on the length of the connecting cable.

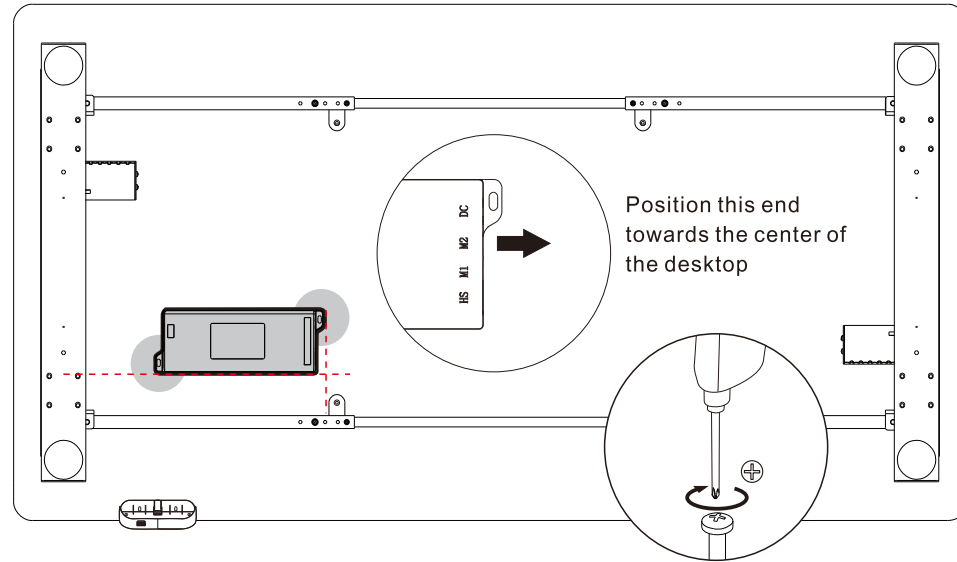


12 Connect the cables

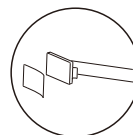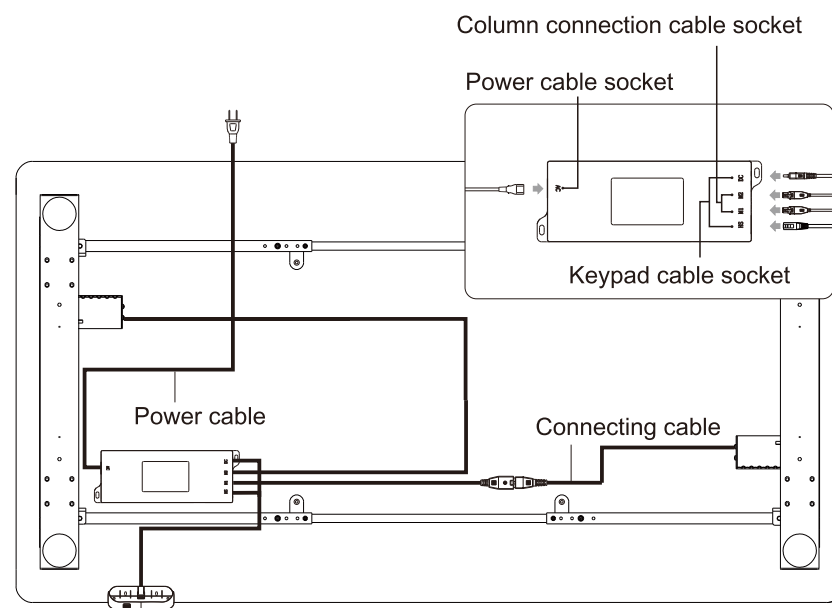

Tear off

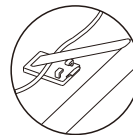

Organize

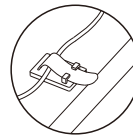




Fix

You can use cable ties to secure each connection cable to the desktop, or you can use screws to fasten the cable ties to keep the cables tidy.


13 Turn over the desk



Turn over the desk, make sure the keypad is facing upwards throughout the process.

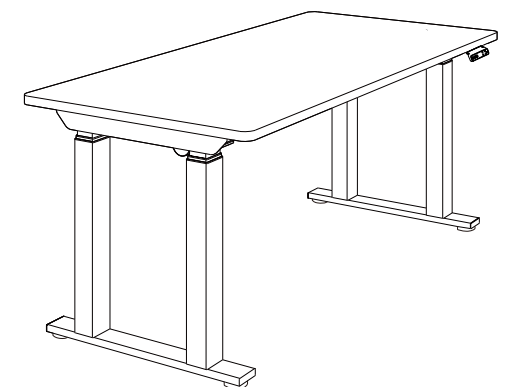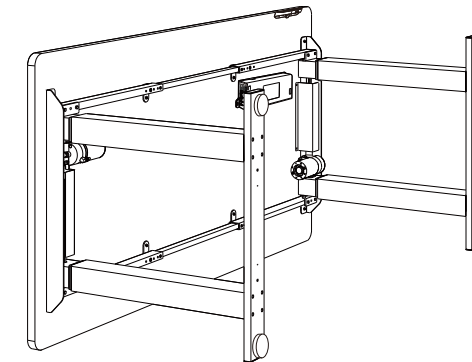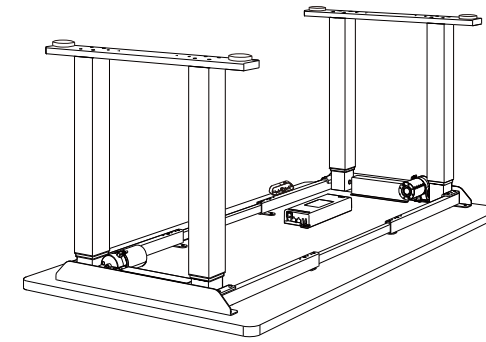

Keypad Instruction

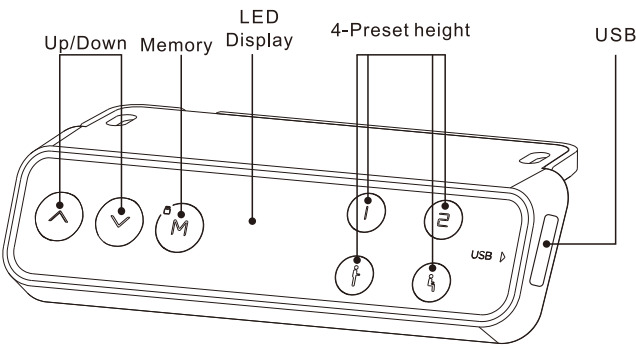


Attention

Please ensure that there are no obstructions to the table and that all wires are long enough to move the table up and down.


Advice

Preset your comfort level to "1" when sitting and "2" when standing, plus other preset heights can be freely set to other heights.

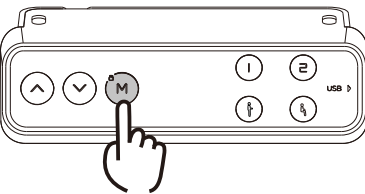


Child lock function

- a. When the child lock is turned on, the blue indicator light of the child lock will be on ("V" and "M" above)
- b. Press the button and the indicator light flashes once.
- c. To release or open the child lock, you need to press and hold the "M" button for about 5 seconds;
- d. Disengage the child lock function, all buttons can work normally.

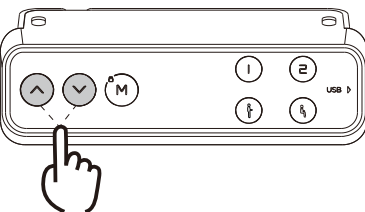

Height Adjustable Function:

Height Adjustable Function: Press the "A" or "V" button to adjust the height. The LED display shows the current height.

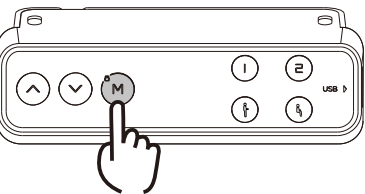


Height Memory Function:

- a. Press the "A" or "V" button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5-" Press "1" or "2" or "3" or "4" that is, save the height to the corresponding, "1" or "2" or "3" or "4" position, which will show in the display screen as "5-1" or "5-2" or "5-3" or "5-4"

- b. Press "1" or "2" or "3" or "4" button directly to automatically adjust the memory height you saved.

Keypad Instruction

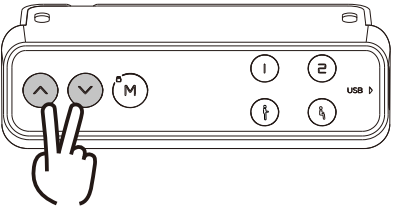


Collision prevention sensitivity adjustment -optional features:

- a. Press and hold the "A" and "V" button for 5 seconds at the same time to switch the sensitivity. There are four levels of sensitivity: "A-0", Switching off the anti-collision function. "A-1", low sensitivity. "A-2", Medium sensitivity. "A-3", high sensitivity

- b. During height adjustment, when desktop comes in contact with another object, it instantly stops and reverses to avoid damage.
- c. Press and hold the "A" and "V" button for 5 seconds at the same time. If the display does not display the above code, there is no anti-collision function.

USB charging function:

- a. USB interface output: PD3.0: 5V 3A/9V 2.2A/12V 1.67A, ±5%

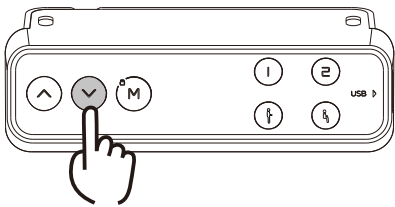

Troubleshooting:

- a. Definition of reset function: The display shows "A5f" or "r5t", press and hold down the down key "V" until the table is lowered to the lowest position and rebound to stop, the display shows the lowest height, release the 'V' down key, the reset is finished and the table can be used normally.
- b. When it doesn't work and the LED shows "E01" or "E02", please retry 18mins later.
- c. If other codes appear, press "V" no response, please make sure the connection cable is not broken and connected properly, and power off for more than 10 seconds, reconnect the power and press "V", the display to show "A5f" or "r5t" and long press "V" down key to reset.
- d. If all these above process are in efficient, please contact our customer service.

Resolving Common Issues



The following tips will help you identify and correct common issues. If you encounter an issue not listed in the table below, or if you follow the instructions below and the issue is still not resolved, please contact your supplier. All such anomalies or errors can only be investigated and corrected by the manufacturer or specially trained personnel.

Problem	Solution
Electronic functions do not function properly	Checking that the connection cables are properly connected.
Speed of lifting is slow	Check if the load weighs more than 200 kg.
Worksurface downward sliding	
Automatically reset a lot	
Can lift but cannot lower down	Start the reset process.
Insufficient ascent and descent height	
Bottom cannot rise	
Overworked beyond duty cycle: Max 2 min on/18 min off	Keep the power on and stop working for 18 minutes.
Power supply module not working	Need to reset first or wait 1s after rise and fall after use.
Press the down button to raise the device instead of lowering it	Check for obstructions under the table or dangling wire harnesses.

Attention



- Power supply: AC100V - 240V, frequency 50/60Hz;
- Working environment: 0-40°C;
- Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
- Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused or does not work, contact the supplier for further information.
- Inside the control box, there are electronic components, metal parts, plastic parts, wires and, so on. They should be disposed of in accordance with the local laws and regulations. They cannot be disposed of as household waste.
- Before using the product, please make sure the product has been installed correctly.
- When operating a switch that initiates and maintains the movement of the furniture or terminates the movement of the furniture or causes a change of the direction of the movement of the furniture, make sure that other persons are kept away.
- Placement of furniture to avoid creating entrapment hazards with other furniture.
- Before starting use of the product, please read the instructions to fully understand all the product's functions and settings.
- Keep children away from electric height-adjustable desks, control units, and handsets. Manufacturer is not responsible for any damages that result from children's unpredictable behaviour.
- Slight noise caused by the multi wedge belt or brake system will not impact the use of this product.
- Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
- Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
- If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
- Please operate in a clean and safe environment. For example, do not leave your tools around. And always be careful to deal with packaging materials in order to avoid any kinds of possible danger. Potential choking risk exists when children play with plastic bags!
- If necessary, retain the original package for future transportation.

Recycling and Disposal



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contract the distributor or manufacturer for recycling assistance.

Manufacturer: Loctek Ergonomic Technology Corp.
Address: 588 Qihang South Road Binhai Industrial Zone, Yinzhou District Ningbo, Zhejiang 315145 P.R. China
Importer: FLEXISPOT LIMITED, G-PARK UNIT1, MOULTON PARK, SUMMERHOUSE RD, NN3 6WD
NORTHAMPTON, UK